

CHANGE DIMMER

1 REMOVE SCREW	2 MOVE THE YELLOW MARKED CABLE THROUGH THE HOLE	3	4 DISCONNECT LED INSIDE DOOR	5 PUSH THE DIMMER FROM THE INSIDE THROUGH THE HOLE
6 REMOVE DIMMER	7 PUT IN A NEW DIMMER	8	9 MOVE THE MALE CONNECTOR THROUGH THE HOLE IN THE BACKWAKLL	10 CONNECT LED INSIDE DOOR
11 FIX SCREW	12 LED ADAPTOR WITH FOOT SWITCH		13	

DEL MONTE **H&H**

ASSEMBLY INSTRUCTION

HIGH BOARD

ART. NO. - 46972



FR

Pensez à
donner ou
recycler.



Association

ou



 
 
Magasin

ou






Déchèterie



<https://quefairemesdechets.fr>

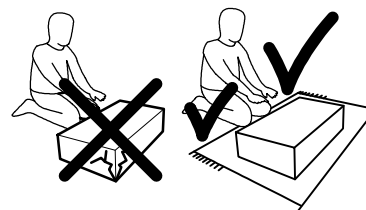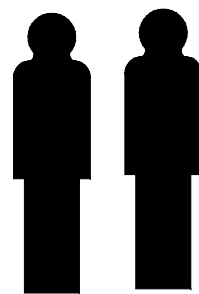

1

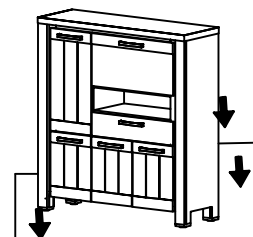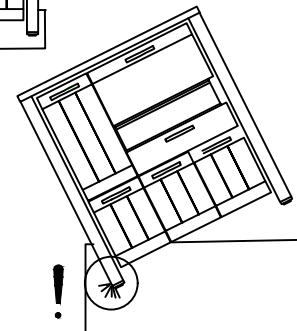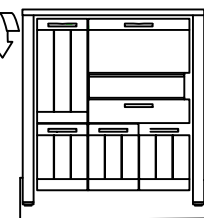   




2

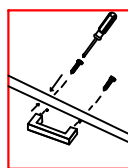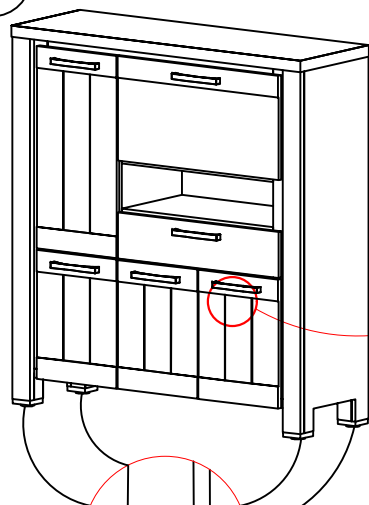  


ADJUSTABLE
SLIDING NAILS

3



 
 
 
LED ADAPTOR WITH FOOT SWITCH

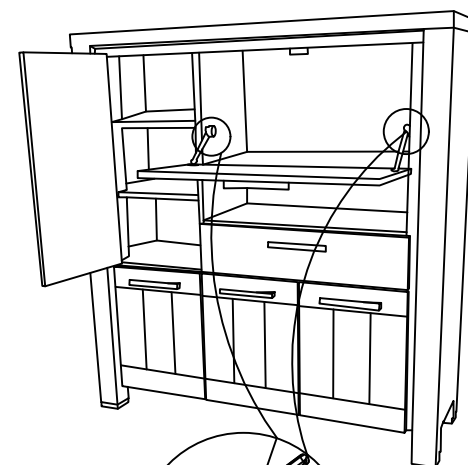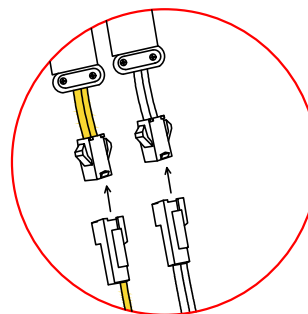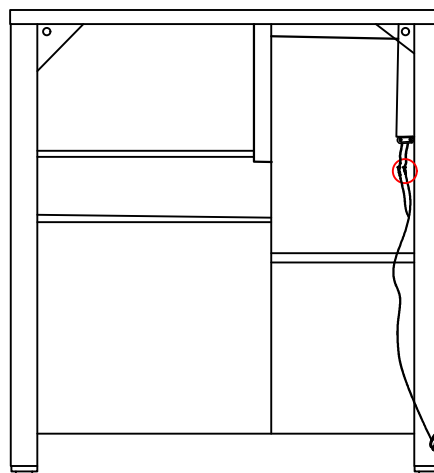

 
ADJUSTABLE
Tighter = slower
looser = faster

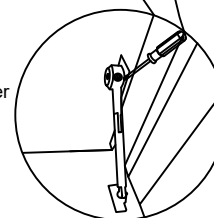


CHANGE STRIP LIGHT

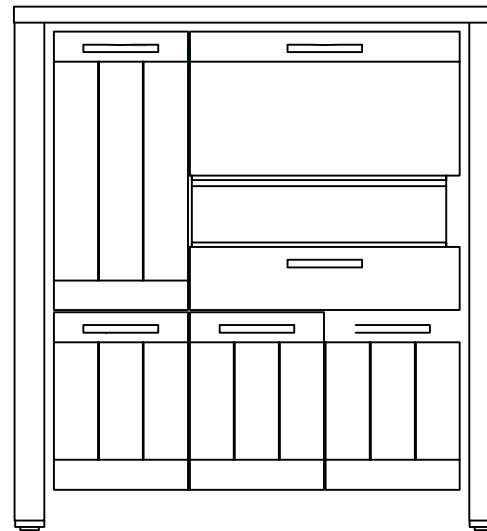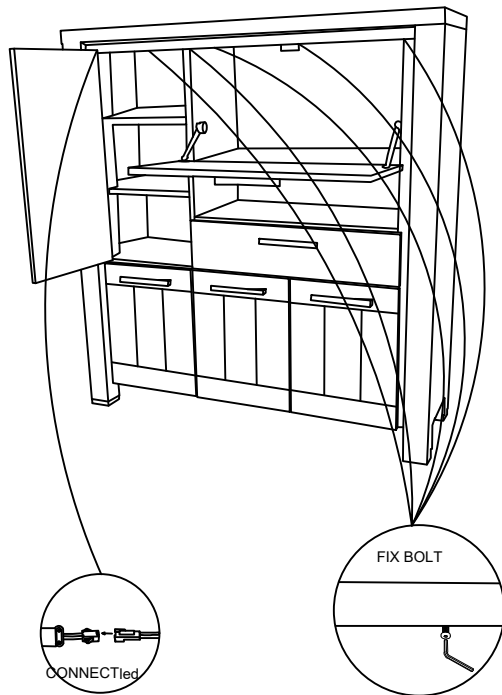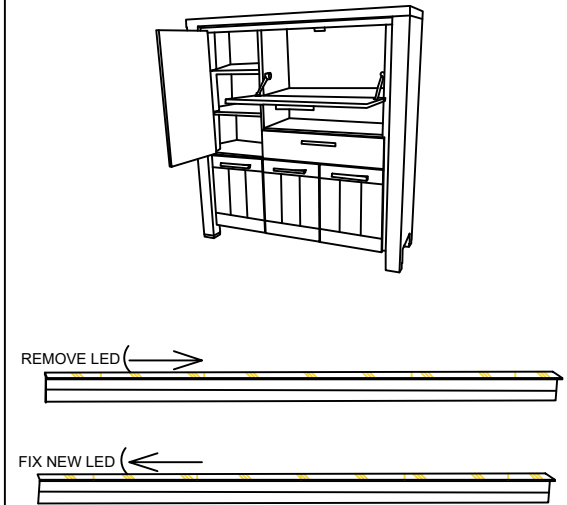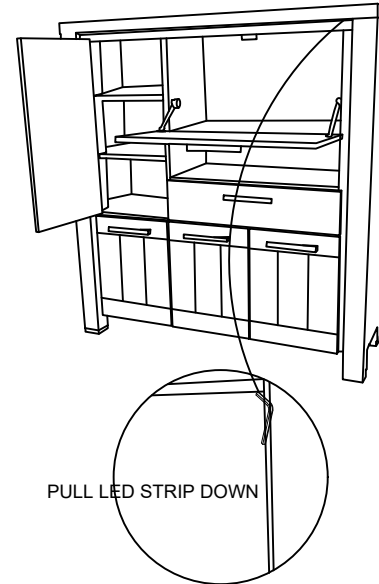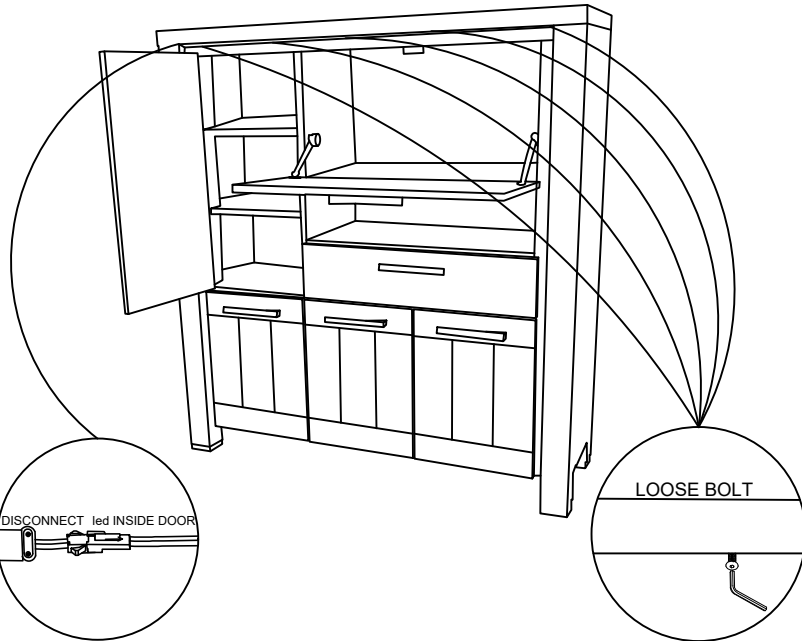     

 - F: Veuillez à acheter les vis et chevilles correspondant à votre type de mur.
 D: Kaufen Sie bitte richtige Dübel für Ihre Wand und dazu passende Schrauben.
 GB: Buy correct screw and plug which is ok for type of wall
 NL: Koop juiste Schroef en plug die geschikt is voor de betreffende muur

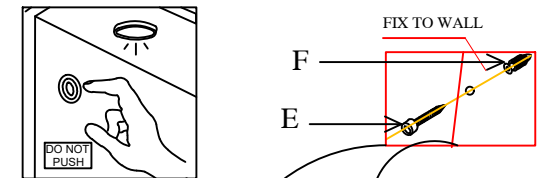

 TOUCH AND HOLD : CHANGE THE BRIGHTNESS
 TOUCH SHORT : ON/OFF

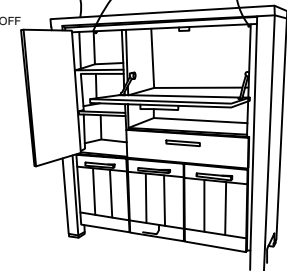

HINGE ADJUSTMENT INSTRUCTION

