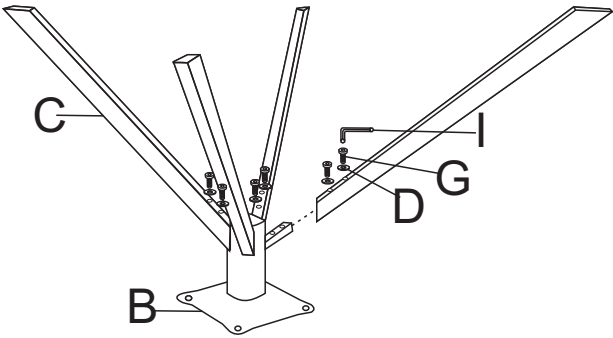
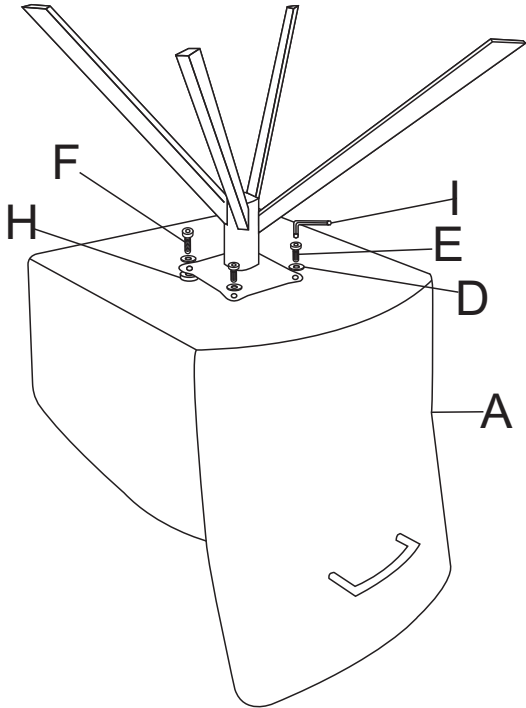
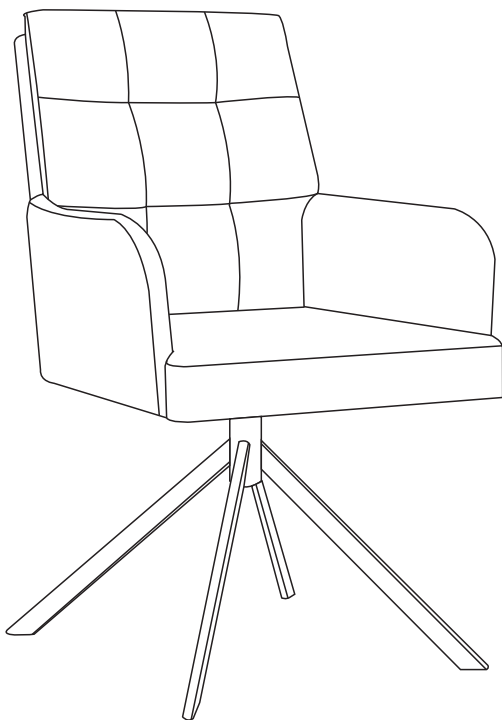
 
 
 
 
 
 


Assembly Instruction 9480

											
	<table><tr><td data-bbox="799 1095 1142 1296"> Ax1</td><td data-bbox="1142 1095 1485 1296"> Bx1</td></tr><tr><td data-bbox="799 1296 1142 1498"> Cx4</td><td data-bbox="1142 1296 1485 1498"> Dx8</td></tr><tr><td data-bbox="799 1498 1142 1700"> Ex2</td><td data-bbox="1142 1498 1485 1700"> Fx2</td></tr><tr><td data-bbox="799 1700 1142 1901"> Gx12</td><td data-bbox="1142 1700 1485 1901"> Hx2</td></tr><tr><td data-bbox="799 1901 1142 2094"> Ix1</td><td data-bbox="1142 1901 1485 2094"></td></tr></table>	 Ax1	 Bx1	 Cx4	 Dx8	 Ex2	 Fx2	 Gx12	 Hx2	 Ix1	
 Ax1	 Bx1										
 Cx4	 Dx8										
 Ex2	 Fx2										
 Gx12	 Hx2										
 Ix1											