 
 




SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE




DO NOT USE KNIFE

ASSEMBLY INSTRUCTION


MODEL : EC 60120-S5V - EVA TV KAST / MEUBLE TV / TV CABINET

HARDWARE	A	B	C	D	E	F1 F2	G	H	I I1 I2	J	K	L	M	N	O
	 PLASTIC DOWEL M8X25 1X42	 CB SCREW M3.5X16 1X14	 CB SCREW M4X30 1X4	 CSK CAP M6X40 1X6	 CSK CAP M6X50 1X4	 MINIFIX 5654 20 SETS	 METAL SHELF SUPPORT 1X8	 CAP 1X10	 1139 ROLLER - WHITE 2 SETS	 PLASTIC RAIL (1110MM) 1X2	 POWER NAIL 6/8 1X33	 PLASTIC PIN 1X6	 ALLEN KEY 1X1	 HANDLE 11036 (PVC) - SILVER 1X1	 TRUSS HEAD CB SCREW M4X16 1X2

 
PART LIST

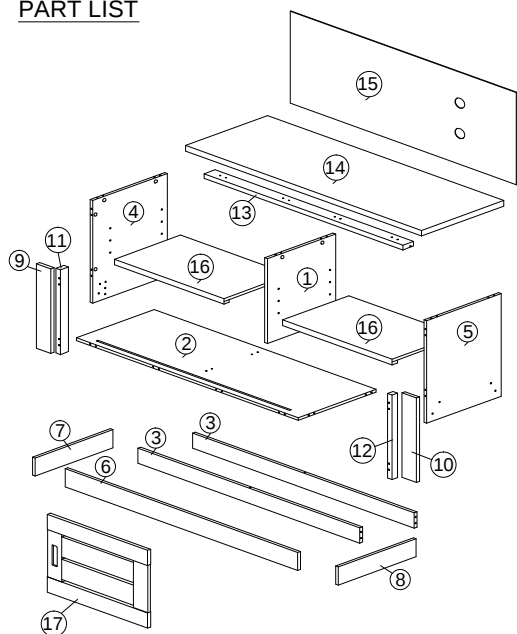

 
STEP 1

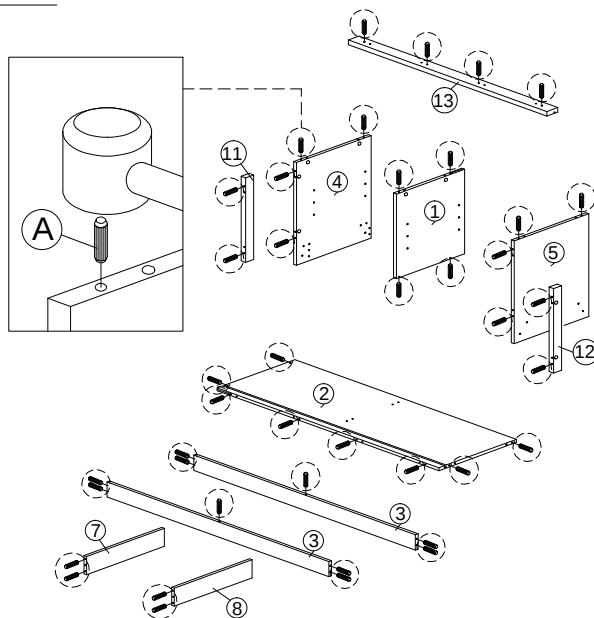

 
STEP 2

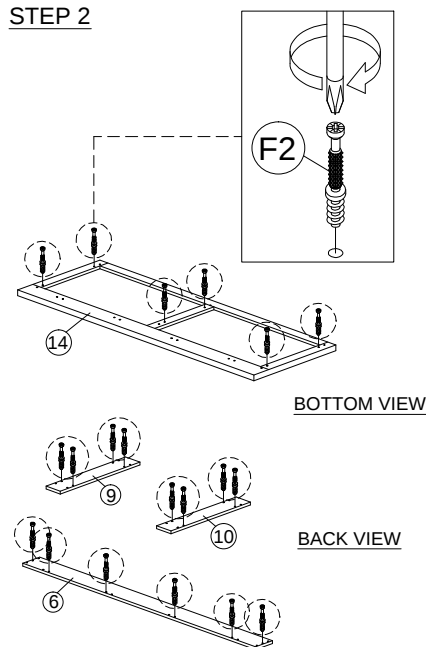

 
STEP 3

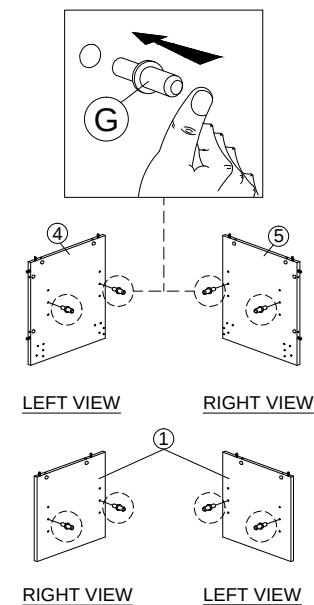

 
STEP 4

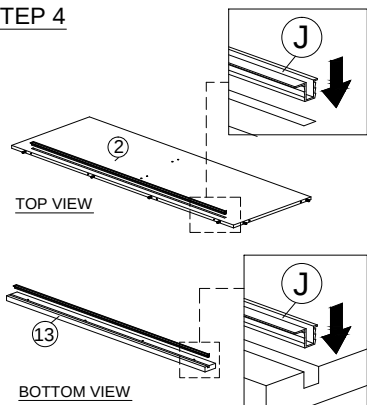

 
STEP 5

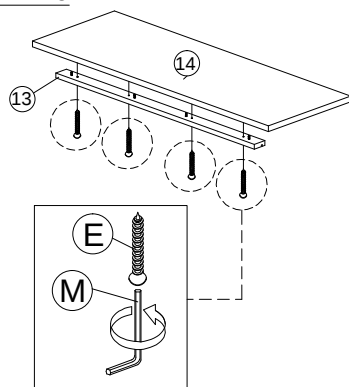

 
STEP 6

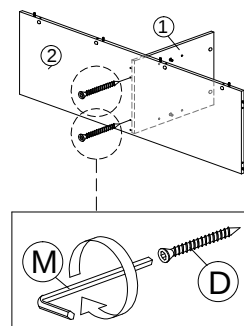

 STEP 7

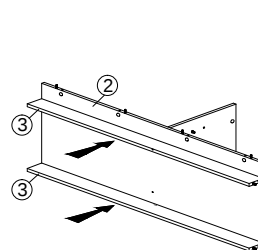


 STEP 8

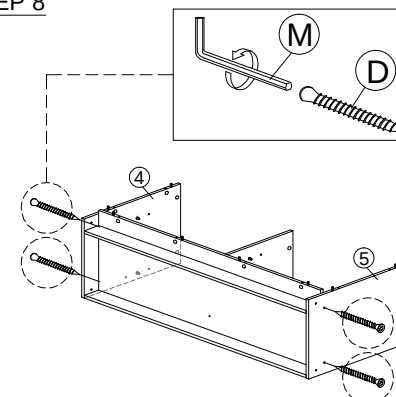




SOFT, DRY CLOTH

 

CHEMICAL

 

HEAT



KEEP DRY



HANDLE WITH CARE



 
 
 
DO NOT USE KNIFE

ASSEMBLY INSTRUCTION



MODEL : EC 60120-S5V - EVA TV KAST / MEUBLE TV / TV CABINET

STEP 17



1. SCREW AT THE CENTER BRACKET.
2. DO NOT FULLY TIGHTEN THE SCREW.
3. SO THAT, MAKE IT EASY TO ADJUST UP & DOWN.

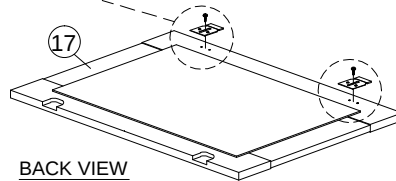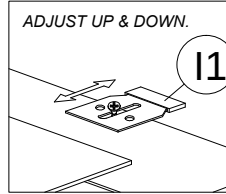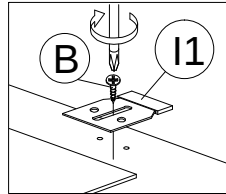

  STEP 18


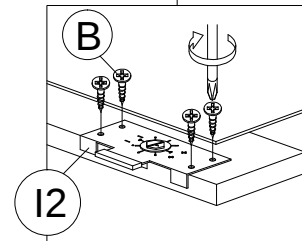
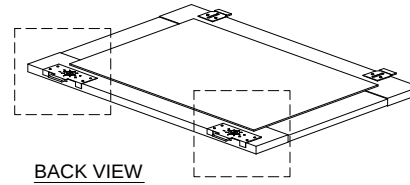


  STEP 19

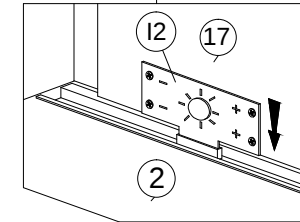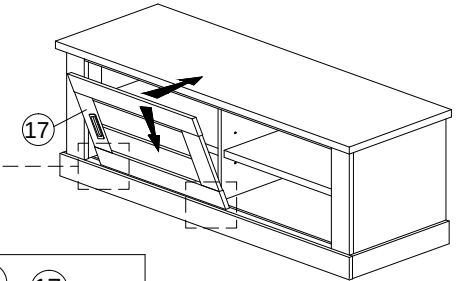


INSIDE VIEW
SLOT THE SLIDING DOOR GUIDE (I2)
INTO THE PLASTIC RAIL AT PANEL (2)

  
 
STEP 20

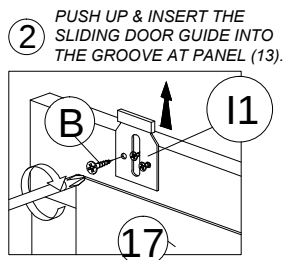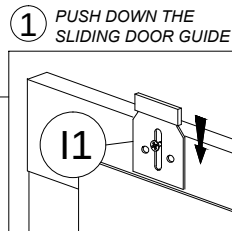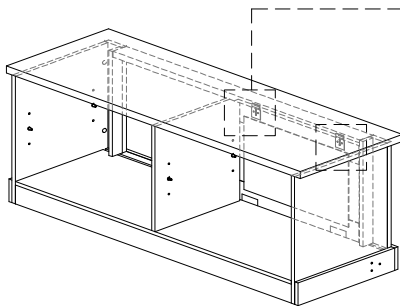

 
STEP 21

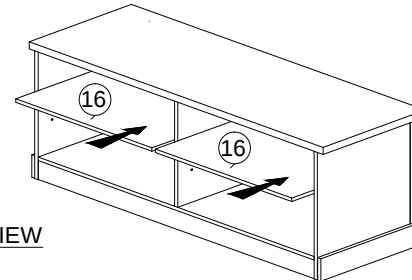

  STEP 22

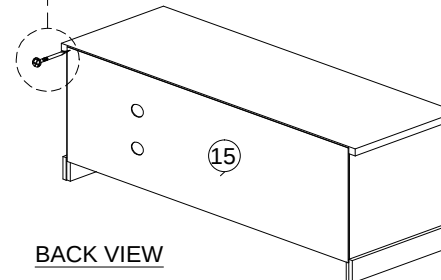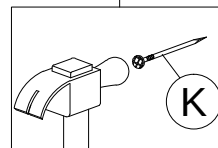


COMPLETED

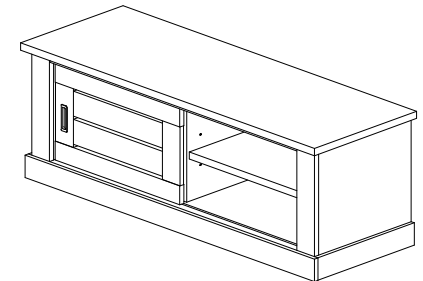 




SOFT, DRY CLOTH

 

CHEMICAL

 

HEAT



KEEP DRY



HANDLE WITH CARE

 


DO NOT USE KNIFE


ASSEMBLY INSTRUCTION

MODEL : EC 60120-S5V - EVA TV KAST / MEUBLE TV / TV CABINET


STEP 9

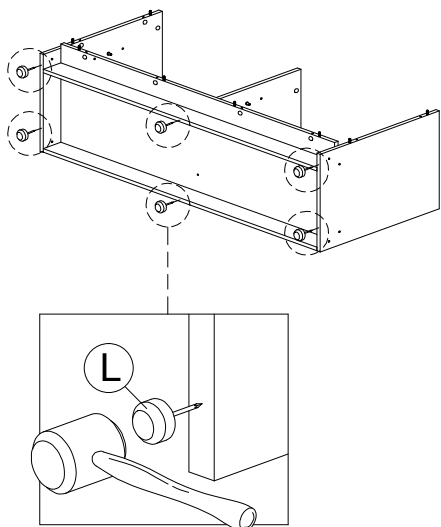

 
STEP 10

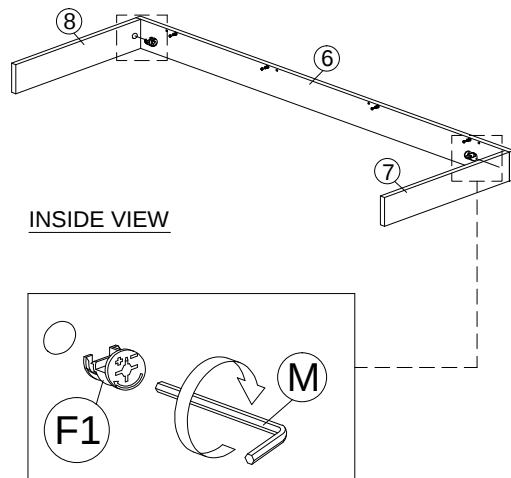

 
STEP 11

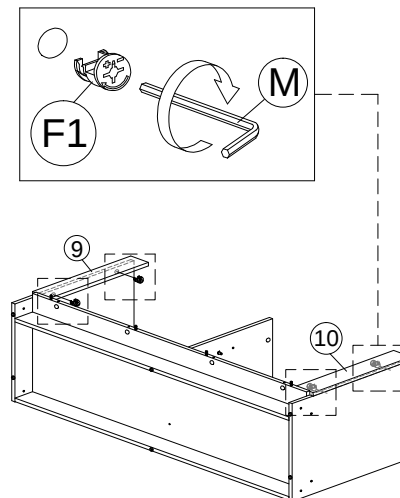

 
STEP 12

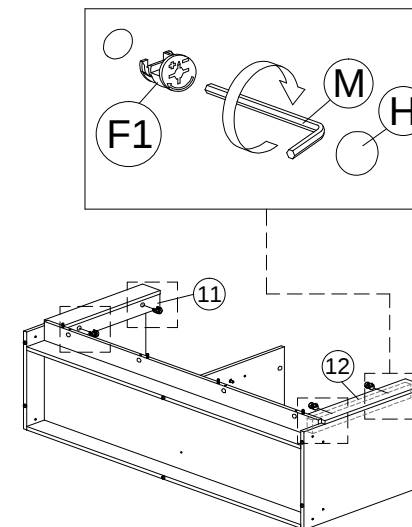

 
STEP 13

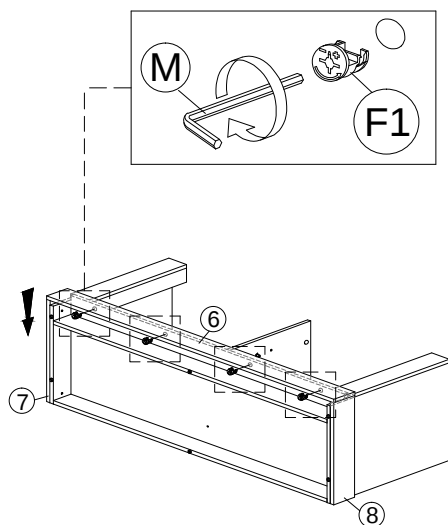

 STEP 14

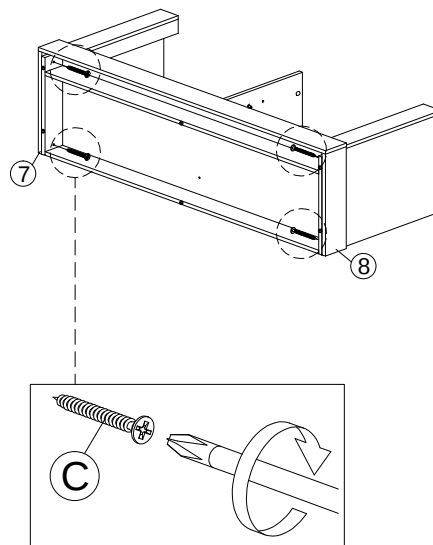

 STEP 15

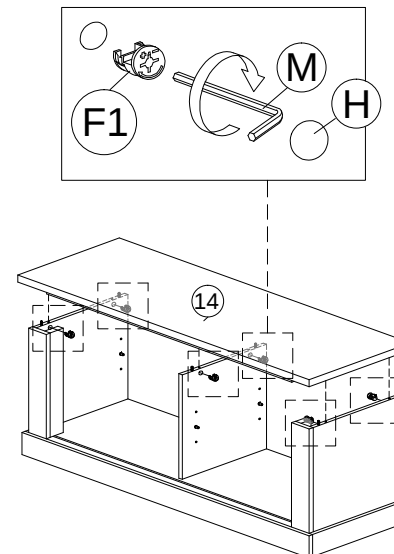

STEP 16

