


ASSEMBLY INSTRUCTION

MODEL : WR 80114-4M-S5V - EVI KLEERKAST / ARMOIRE 2 D/P / 2 SLIDING DOORS


WARDROBE WITH 4 MIRRORS

HARDWARE	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V V1	V2
	1X18	1X128	1X26	1X16	1X2	1X4	1X12	1X4	26 SETS	20 SETS	1X26	1X1	1X30	1X20	1X12	1X10	1X1	1X1	1X4	2 SETS	1X28	4 SETS	4 SETS
	PLASTIC DOWEL M8X25	CB SCREW M3.5X12	CB SCREW M4X25	WASHER M4	V-IRON BRACKET	PYRAMID ANGLE CORNER BLOCK	PLASTIC CORNER BLOCK	'U' PLASTIC RAIL (1139-15) - 2133MM	MINIFIX 5654	Q-FIT VB3500	CAP	ALLEN KEY	POWER NAIL 5/8"	METAL SHELF SUPPORT	I-BRACKET (75 x 20MM)	C 163 PLASTIC ROUND LEG (H12MM)-BLACK	H PROFILE (2070MM)	CHROME PIPE (1048MM)	METAL BAR (1835MM)	DOOR PLASTIC RAIL (2009MM)	CB SCREW M3.5X20	SLIDING DOOR GUIDE - 1139 ROLLER - WHITE	


PART LIST

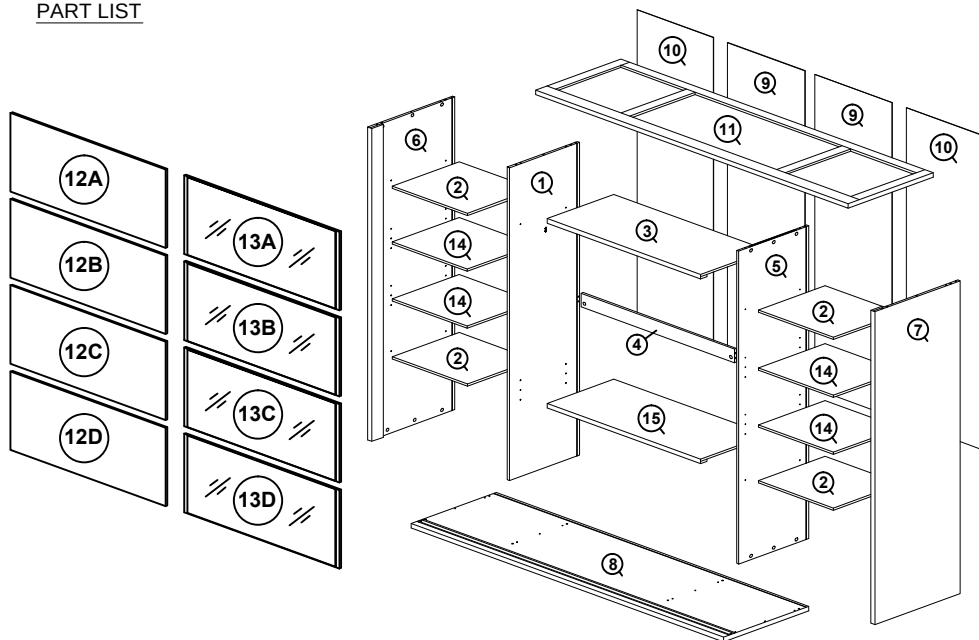


STEP 1

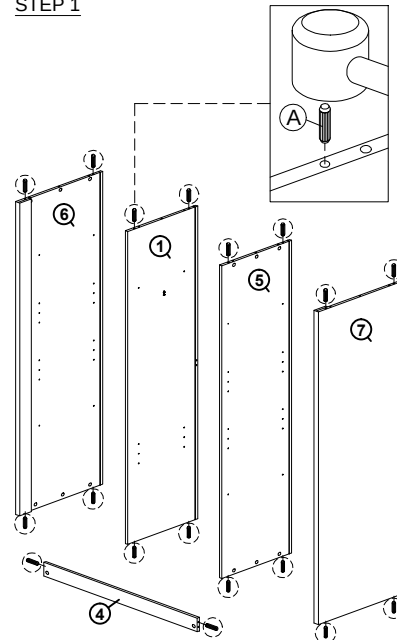


STEP 2

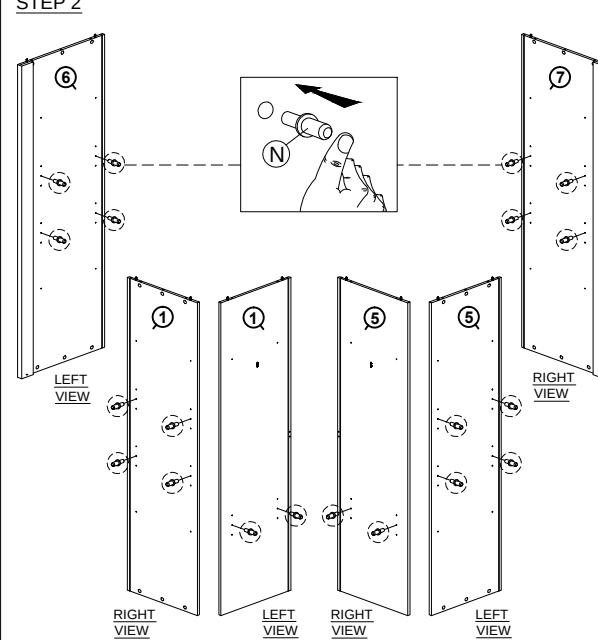


STEP 3

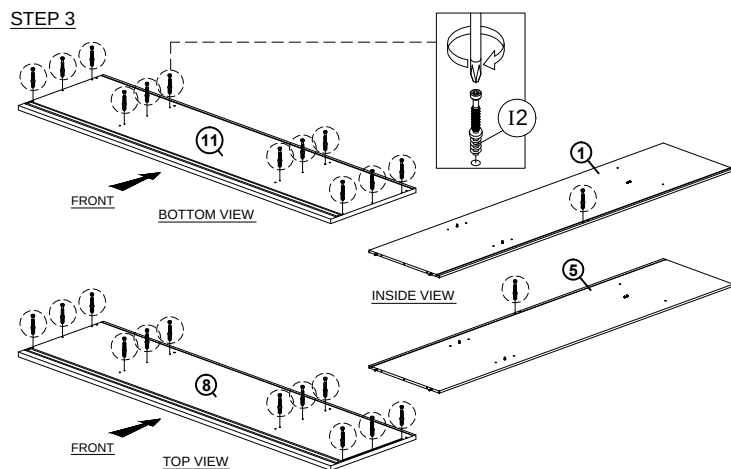


STEP 4

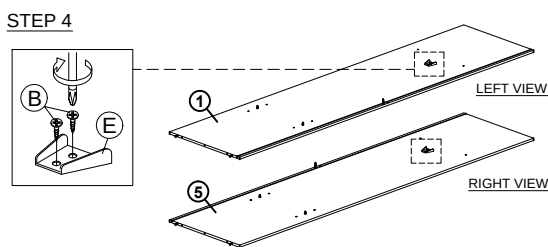


STEP 5


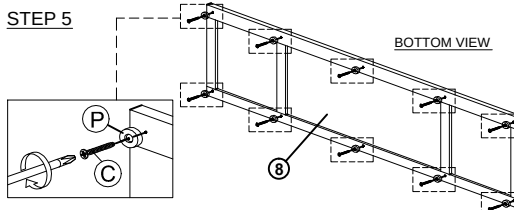


STEP 6

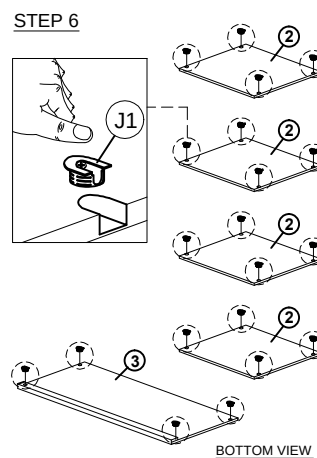

STEP 7-i

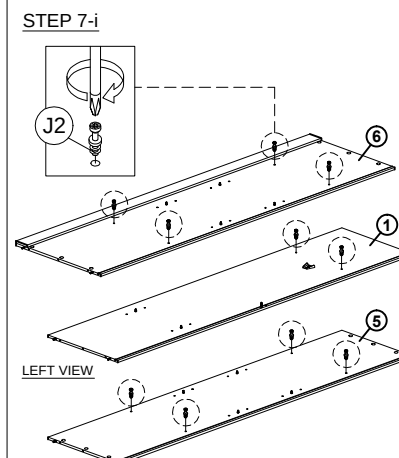





ASSEMBLY INSTRUCTION

MODEL : WR 80114-4M-S5V - EVI KLEERKAST / ARMOIRE 2 D/P / 2 SLIDING DOORS
WARDROBE WITH 4 MIRRORS


STEP 7-ii

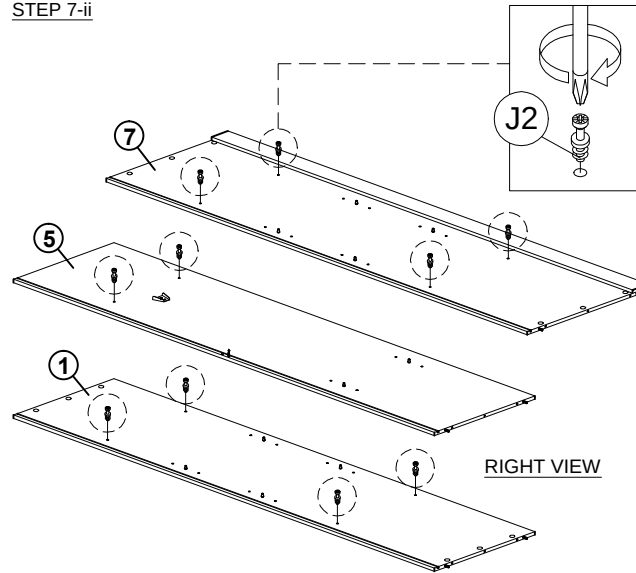


STEP 8

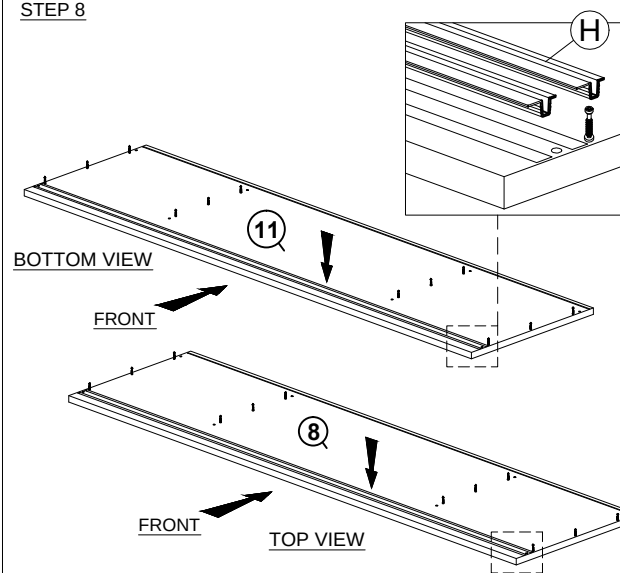


STEP 9

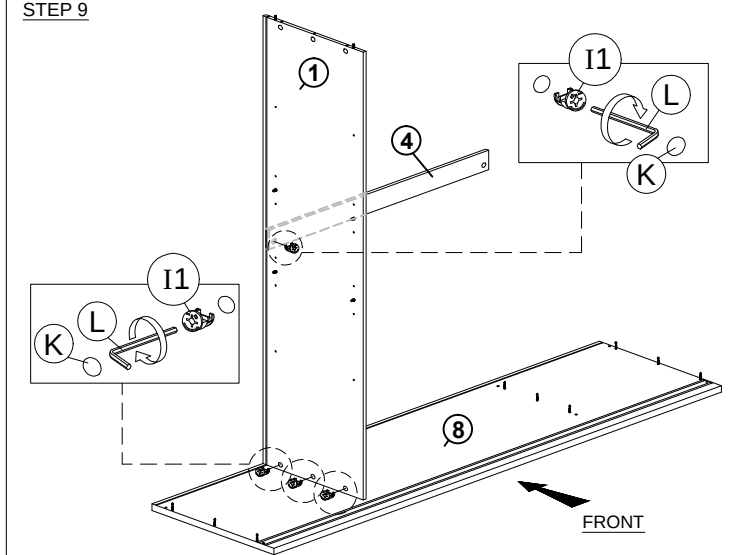


STEP 10

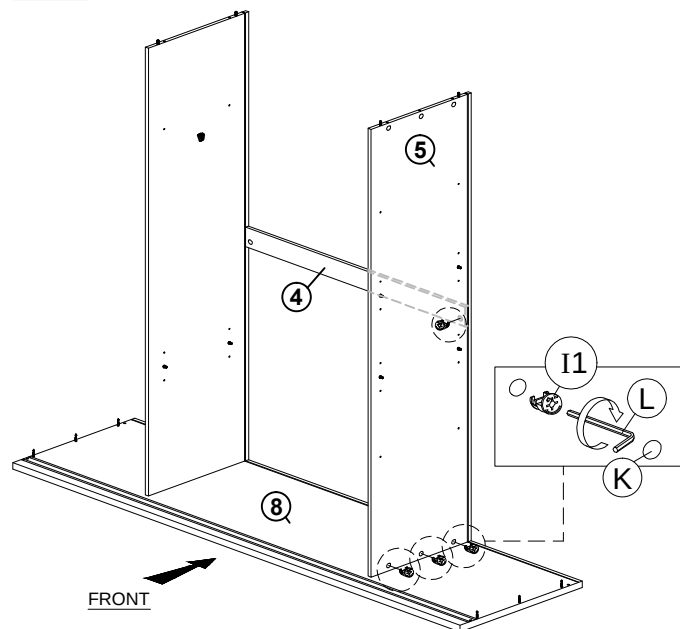

STEP 11

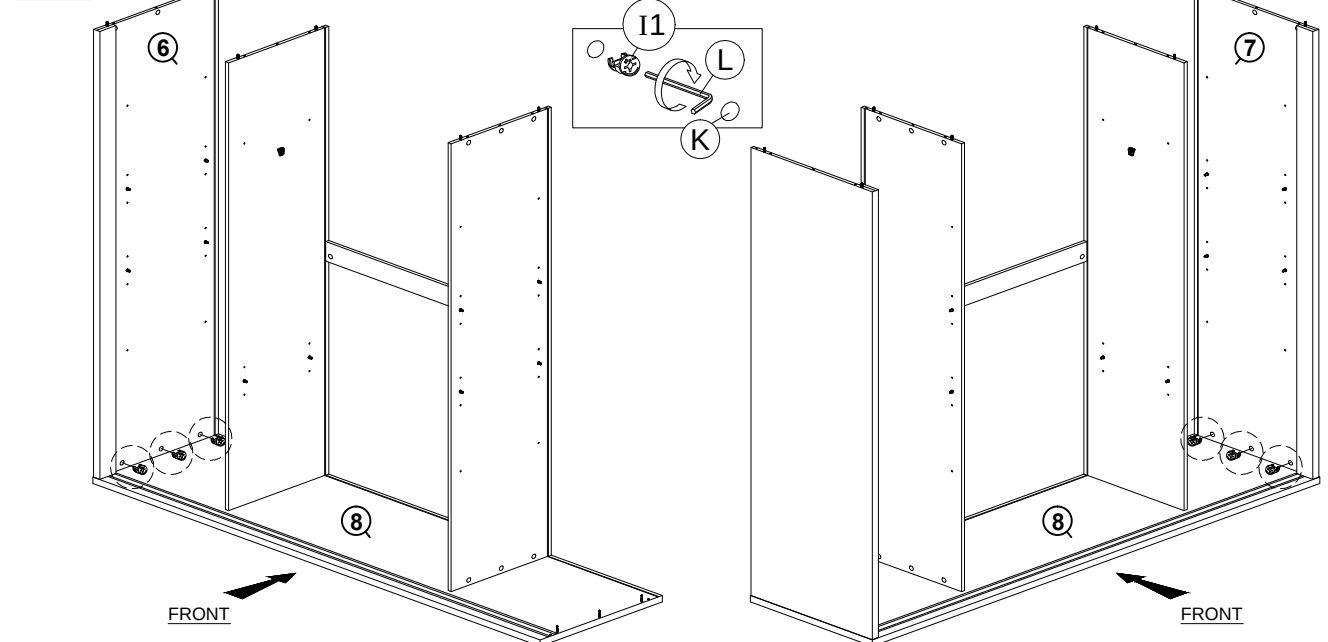




ASSEMBLY INSTRUCTION


MODEL : WR 80114-4M-S5V - EVI KLEERKAST / ARMOIRE 2 D/P / 2 SLIDING DOORS

WARDROBE WITH 4 MIRRORS

STEP 12

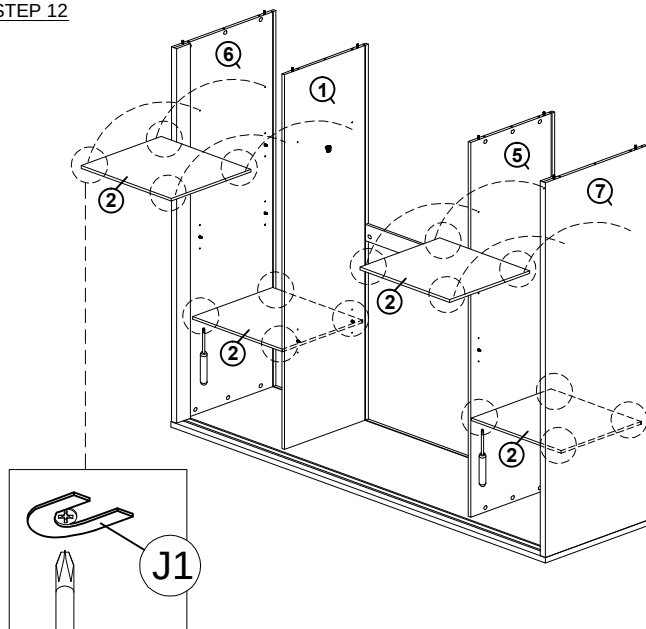


STEP 13

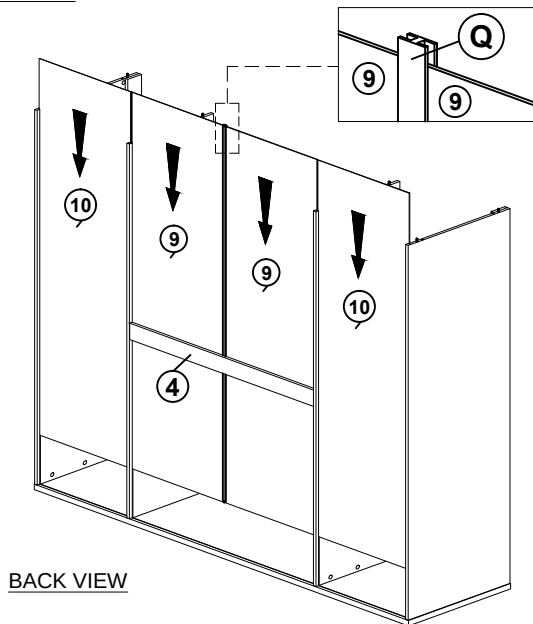


BACK VIEW

STEP 14

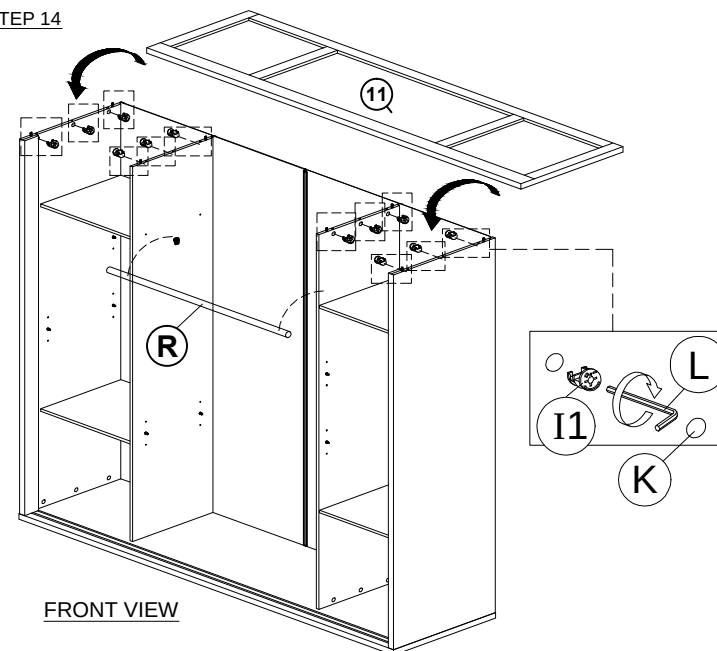


FRONT VIEW

STEP 15

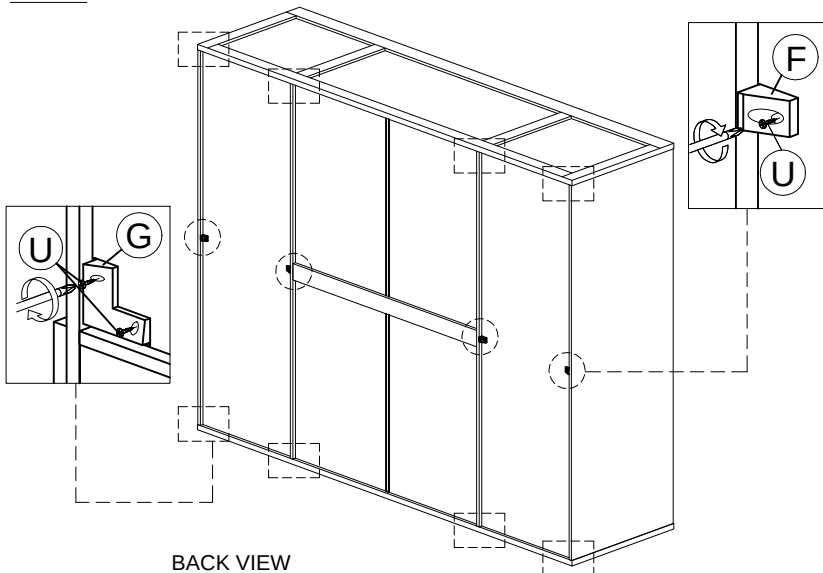


BACK VIEW

STEP 16


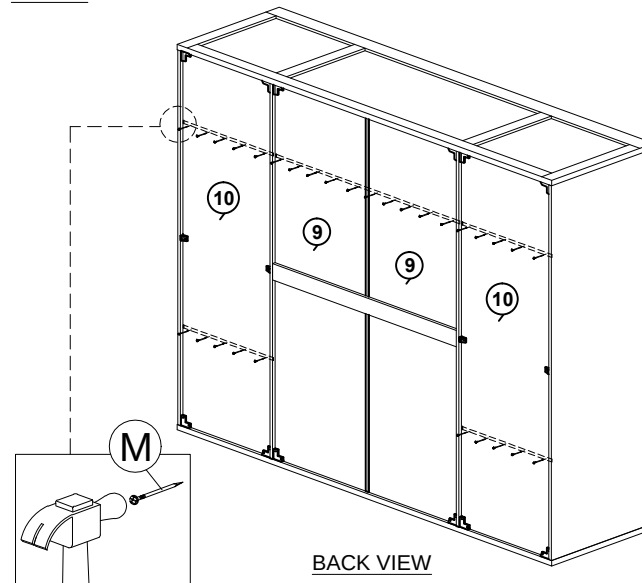


BACK VIEW

STEP 17

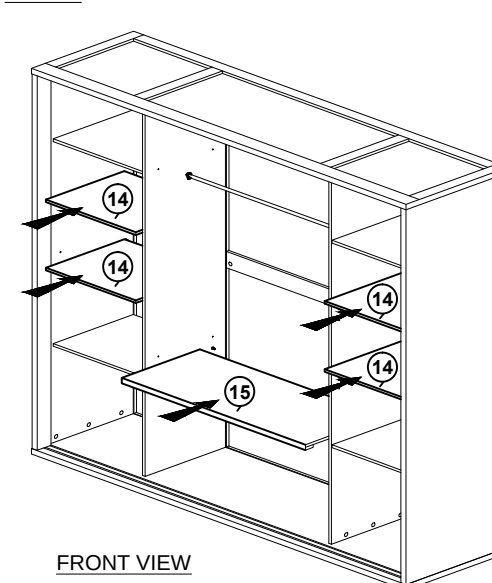



FRONT VIEW



ASSEMBLY INSTRUCTION

MODEL : WR 80114-4M-S5V - EVI KLEERKAST / ARMOIRE 2 D/P / 2 SLIDING DOORS
WARDROBE WITH 4 MIRRORS




STEP 18

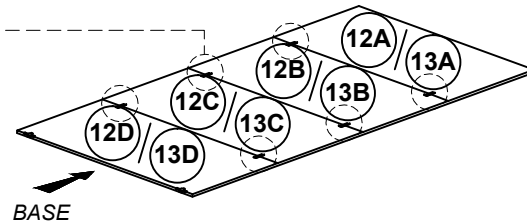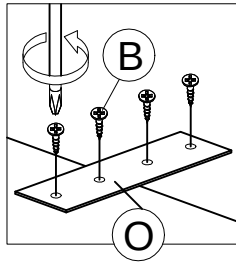

BACK VIEW



STEP 20

1. SCREW AT THE CENTER SLIDING DOOR GUIDE.
2. DO NOT FULLY TIGHTEN THE SCREW.
3. SO THAT, MAKE IT EASY TO ADJUST UP & DOWN.

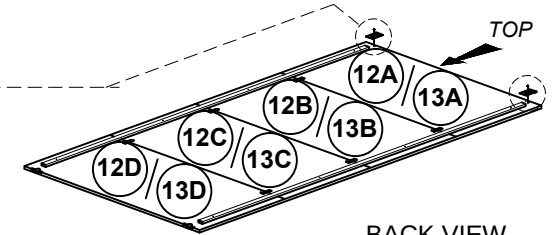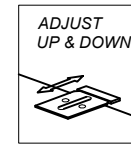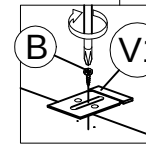




BACK VIEW

STEP 19

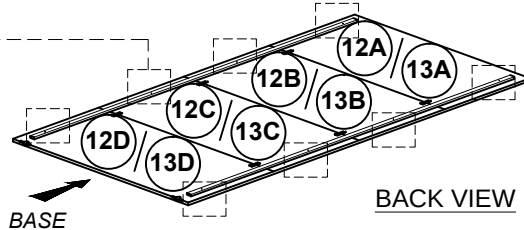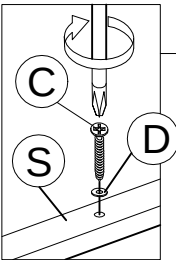


BACK VIEW

STEP 21

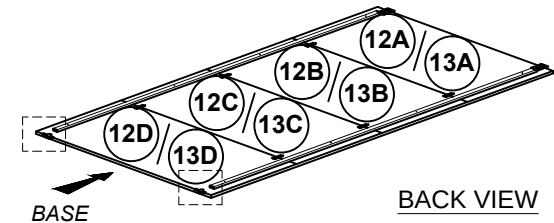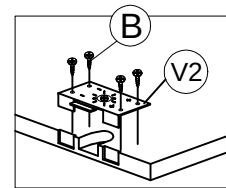

BACK VIEW


STEP 22

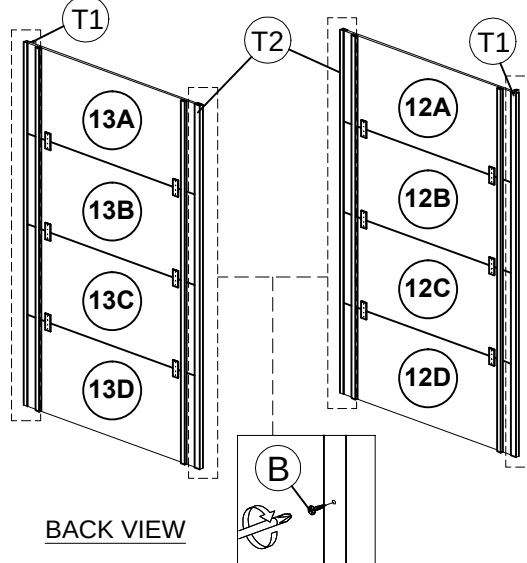


BACK VIEW

STEP 23


1. PUSH DOWN THE SLIDING DOOR GUIDE




2. PUSH UP & INSERT THE SLIDING DOOR GUIDE INTO THE GROOVE AT PANEL (11)



- SLOT THE SLIDING DOOR GUIDE (V2) INTO THE PLASTIC RAIL AT PANEL (8)




INSIDE VIEW

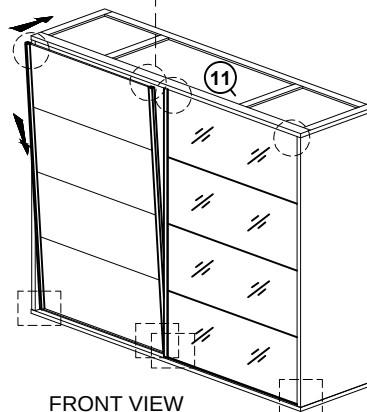

FRONT VIEW

STEP 24

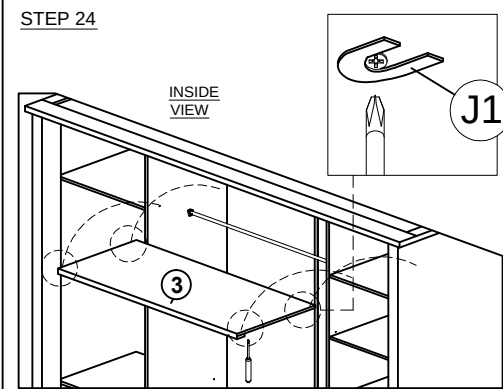

INSIDE VIEW

COMPLETED

