








montage instructies
instructions de montage
assembly instructions
montage anleitung








EMMA

S2

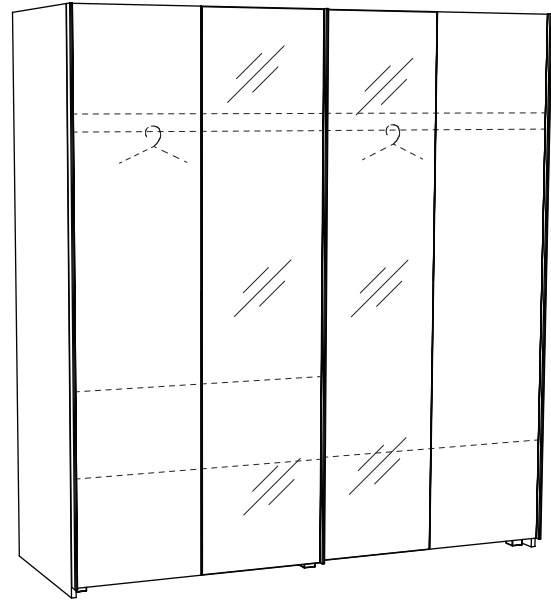

S2 200 x 216 x 69 cm

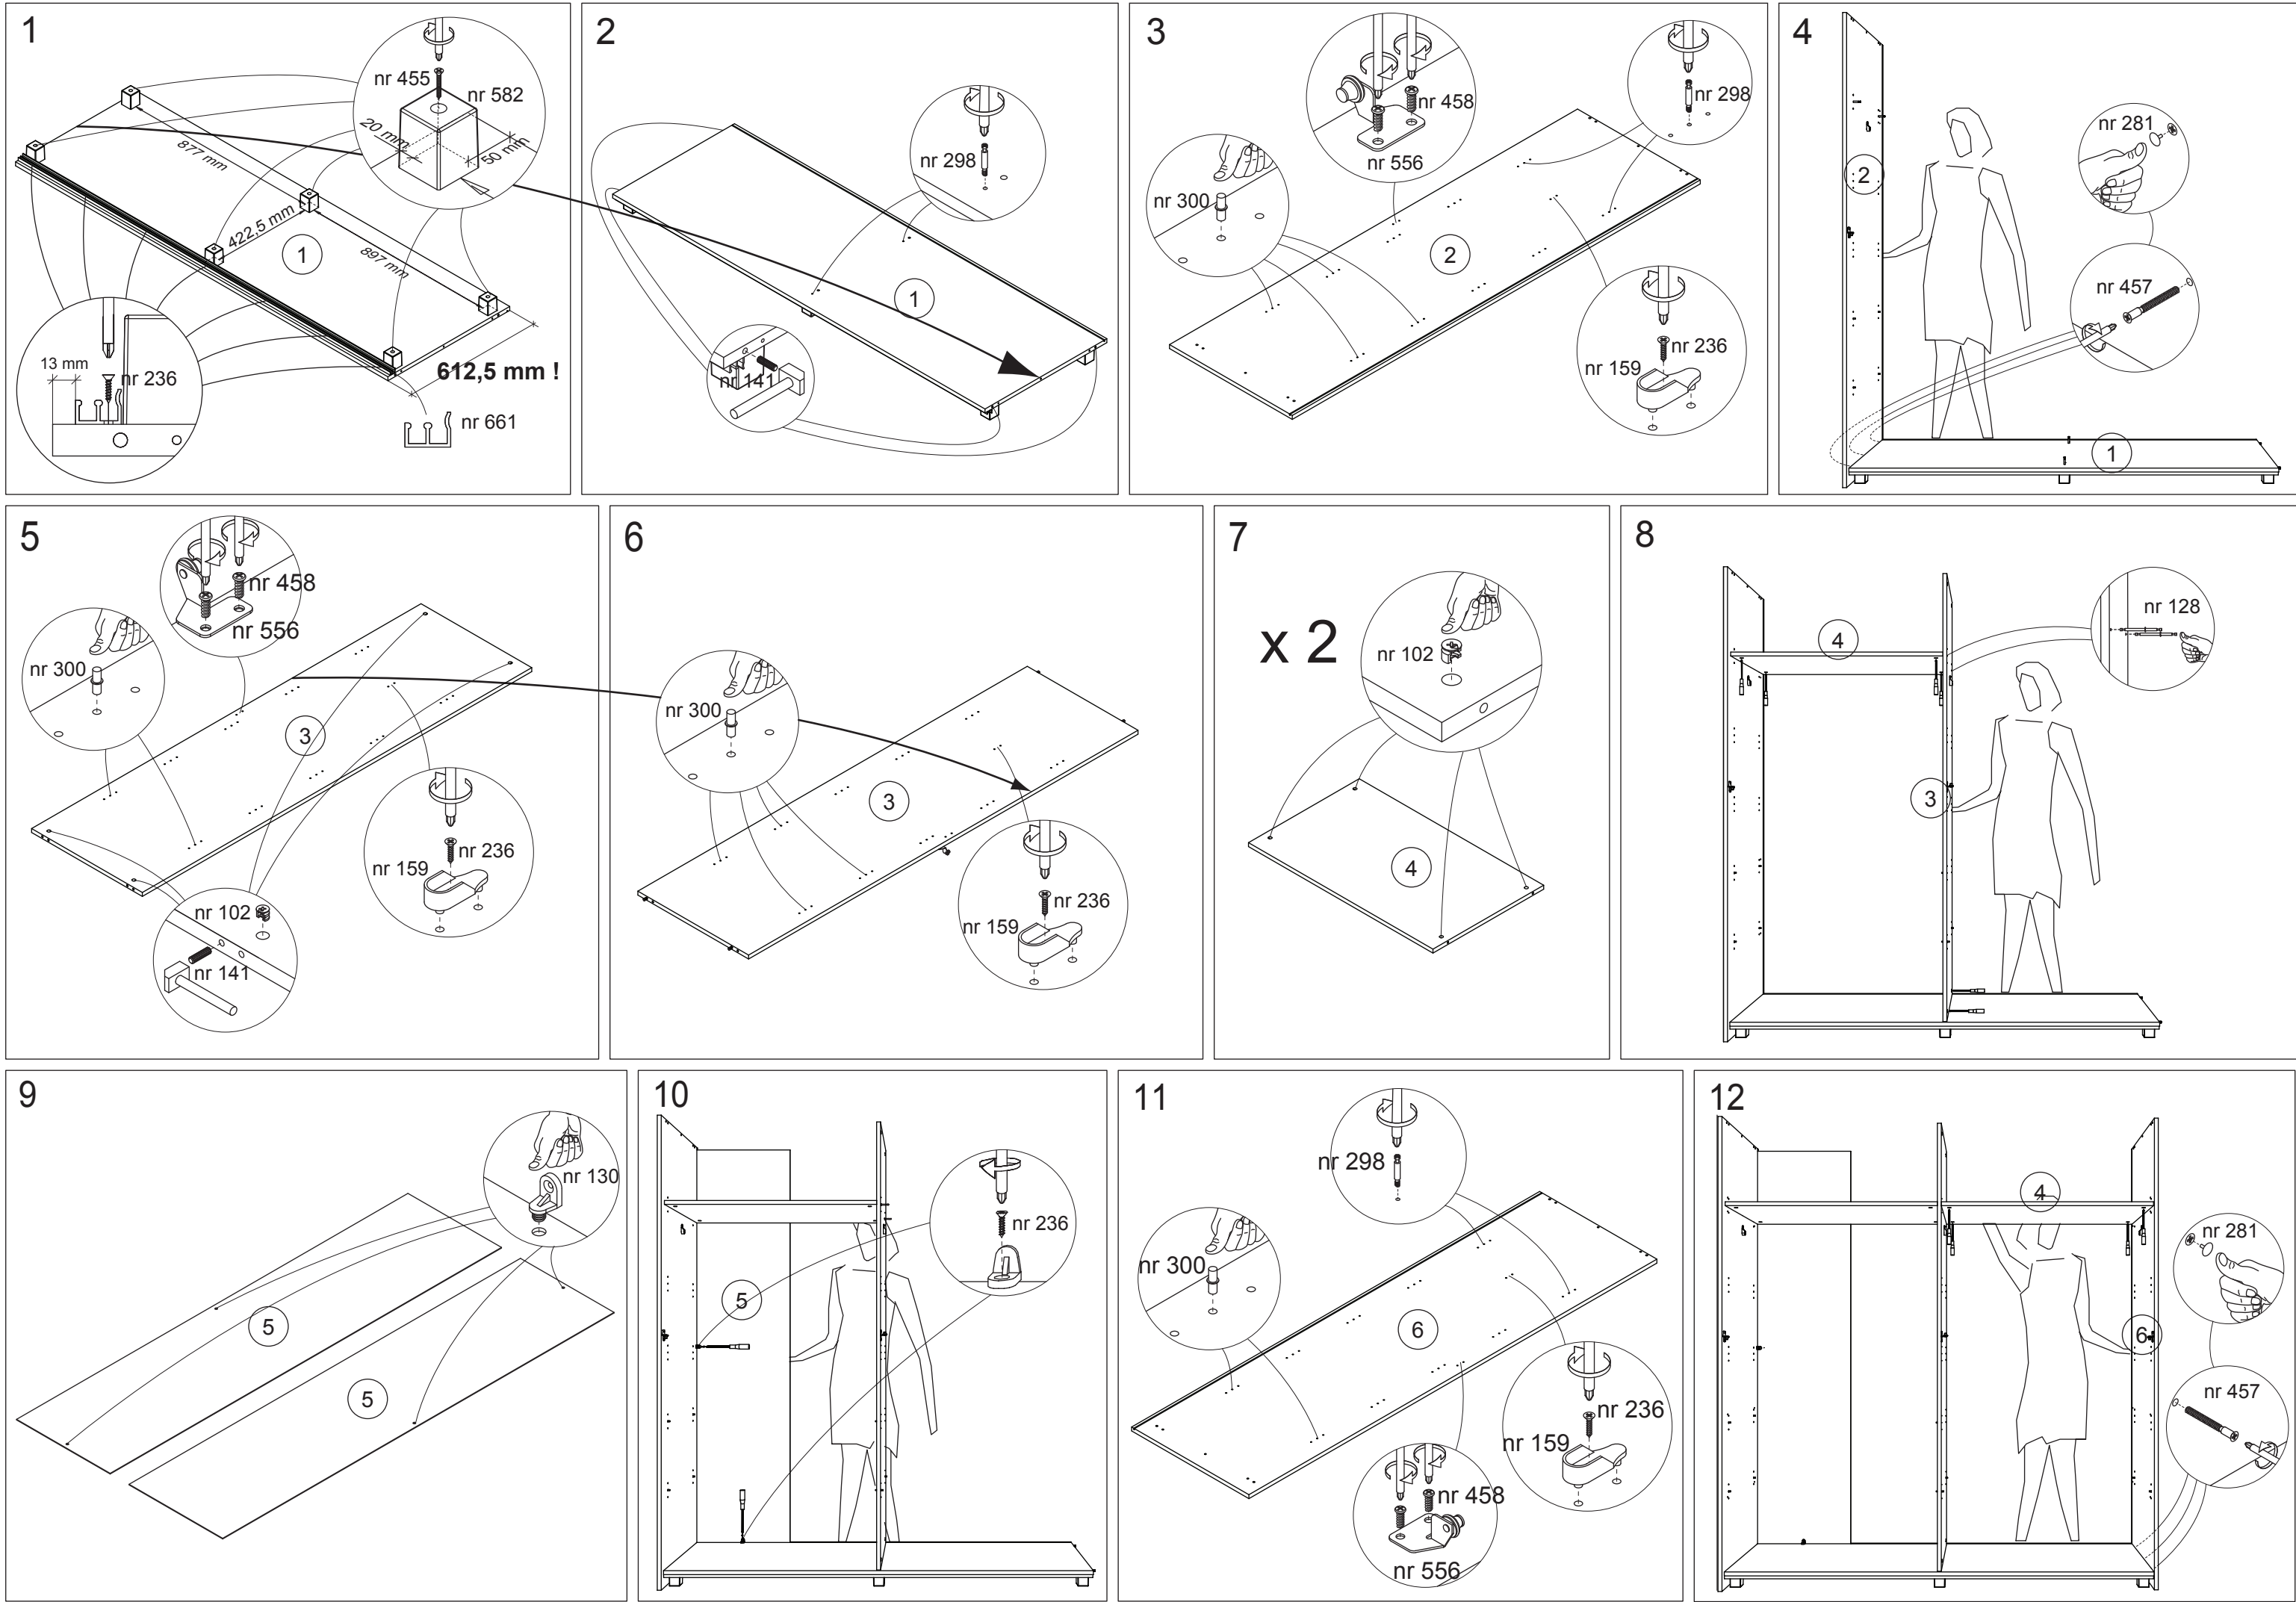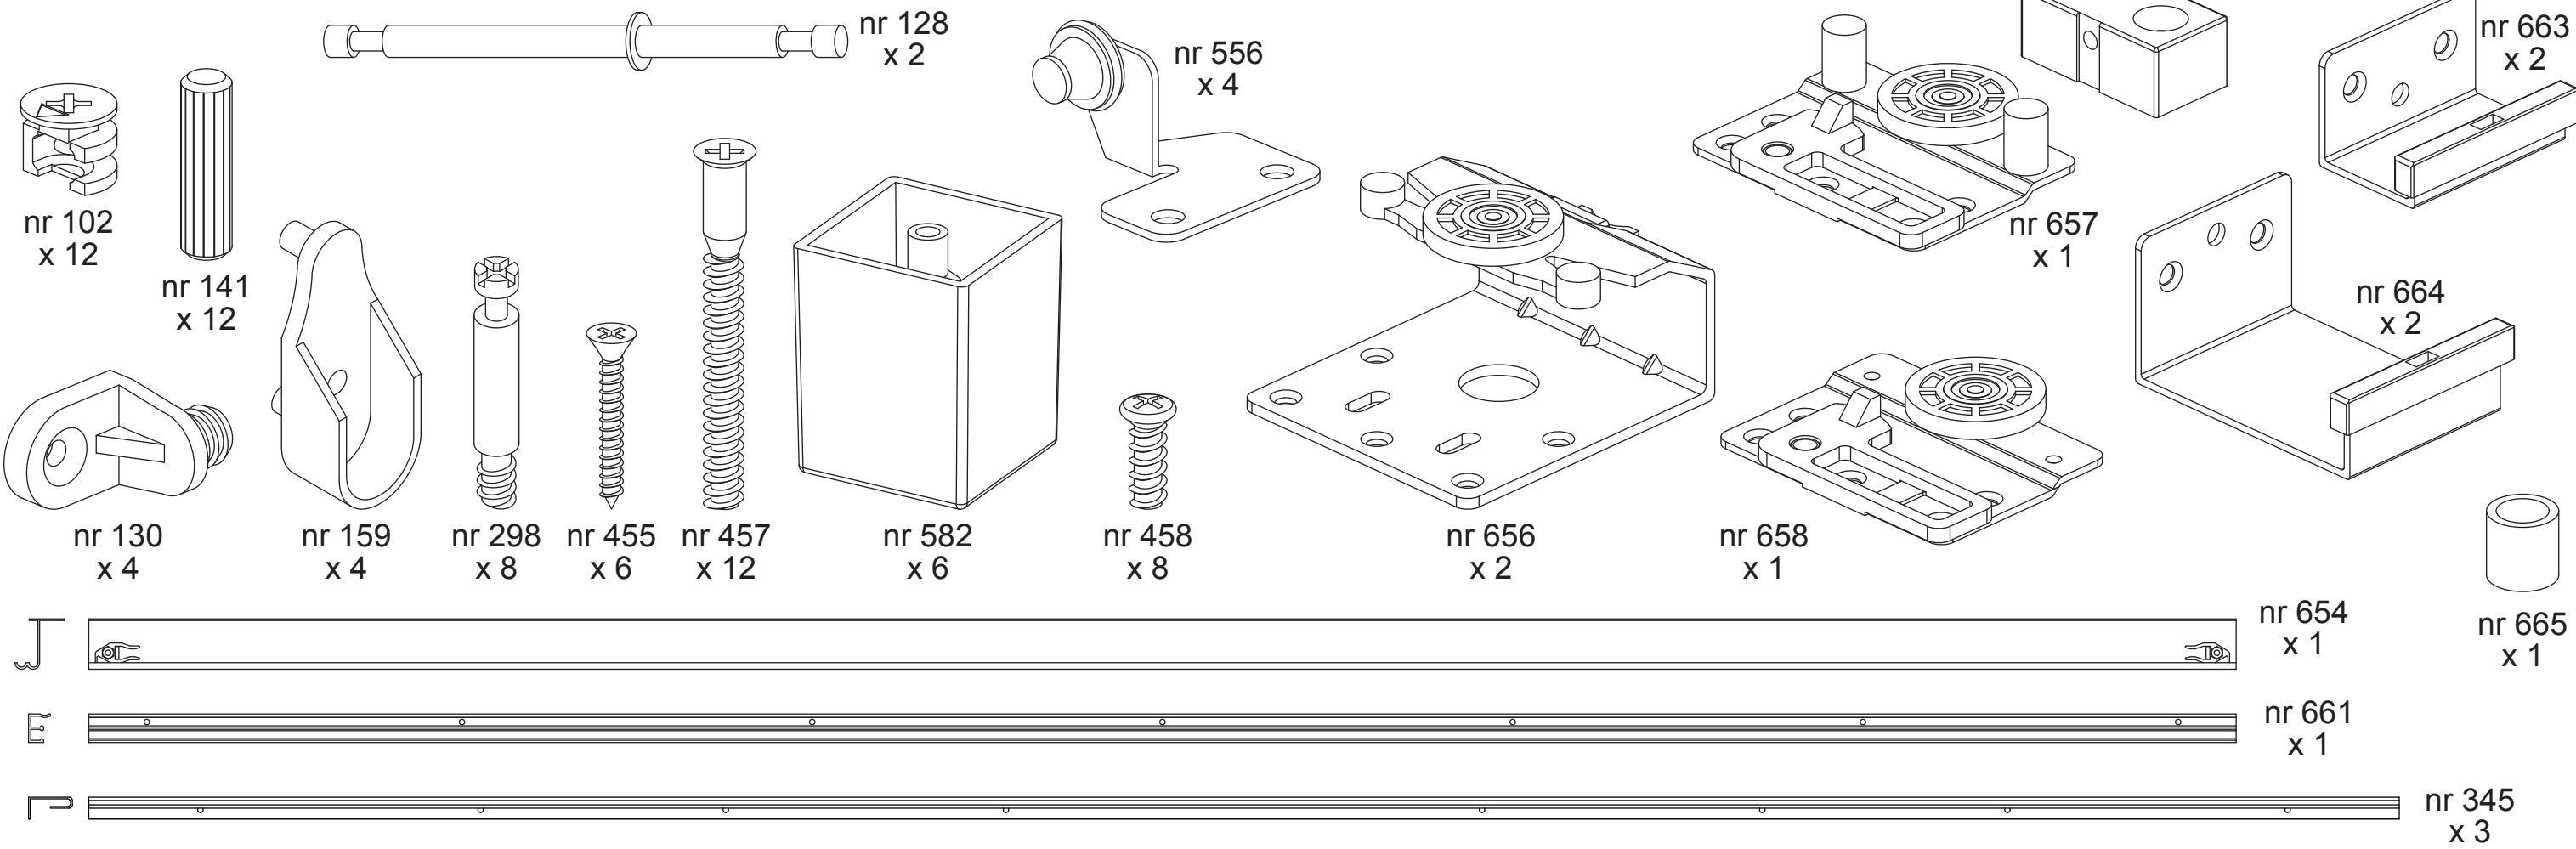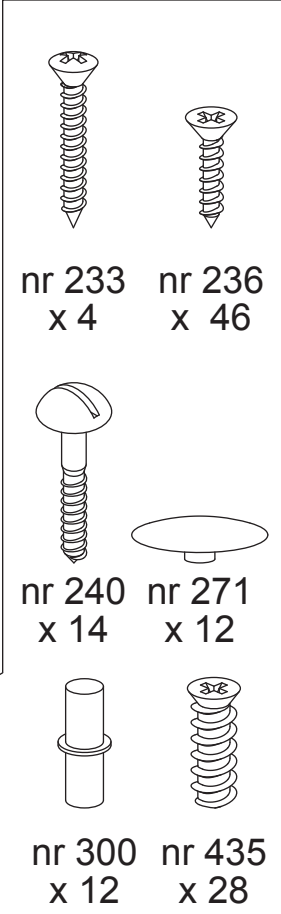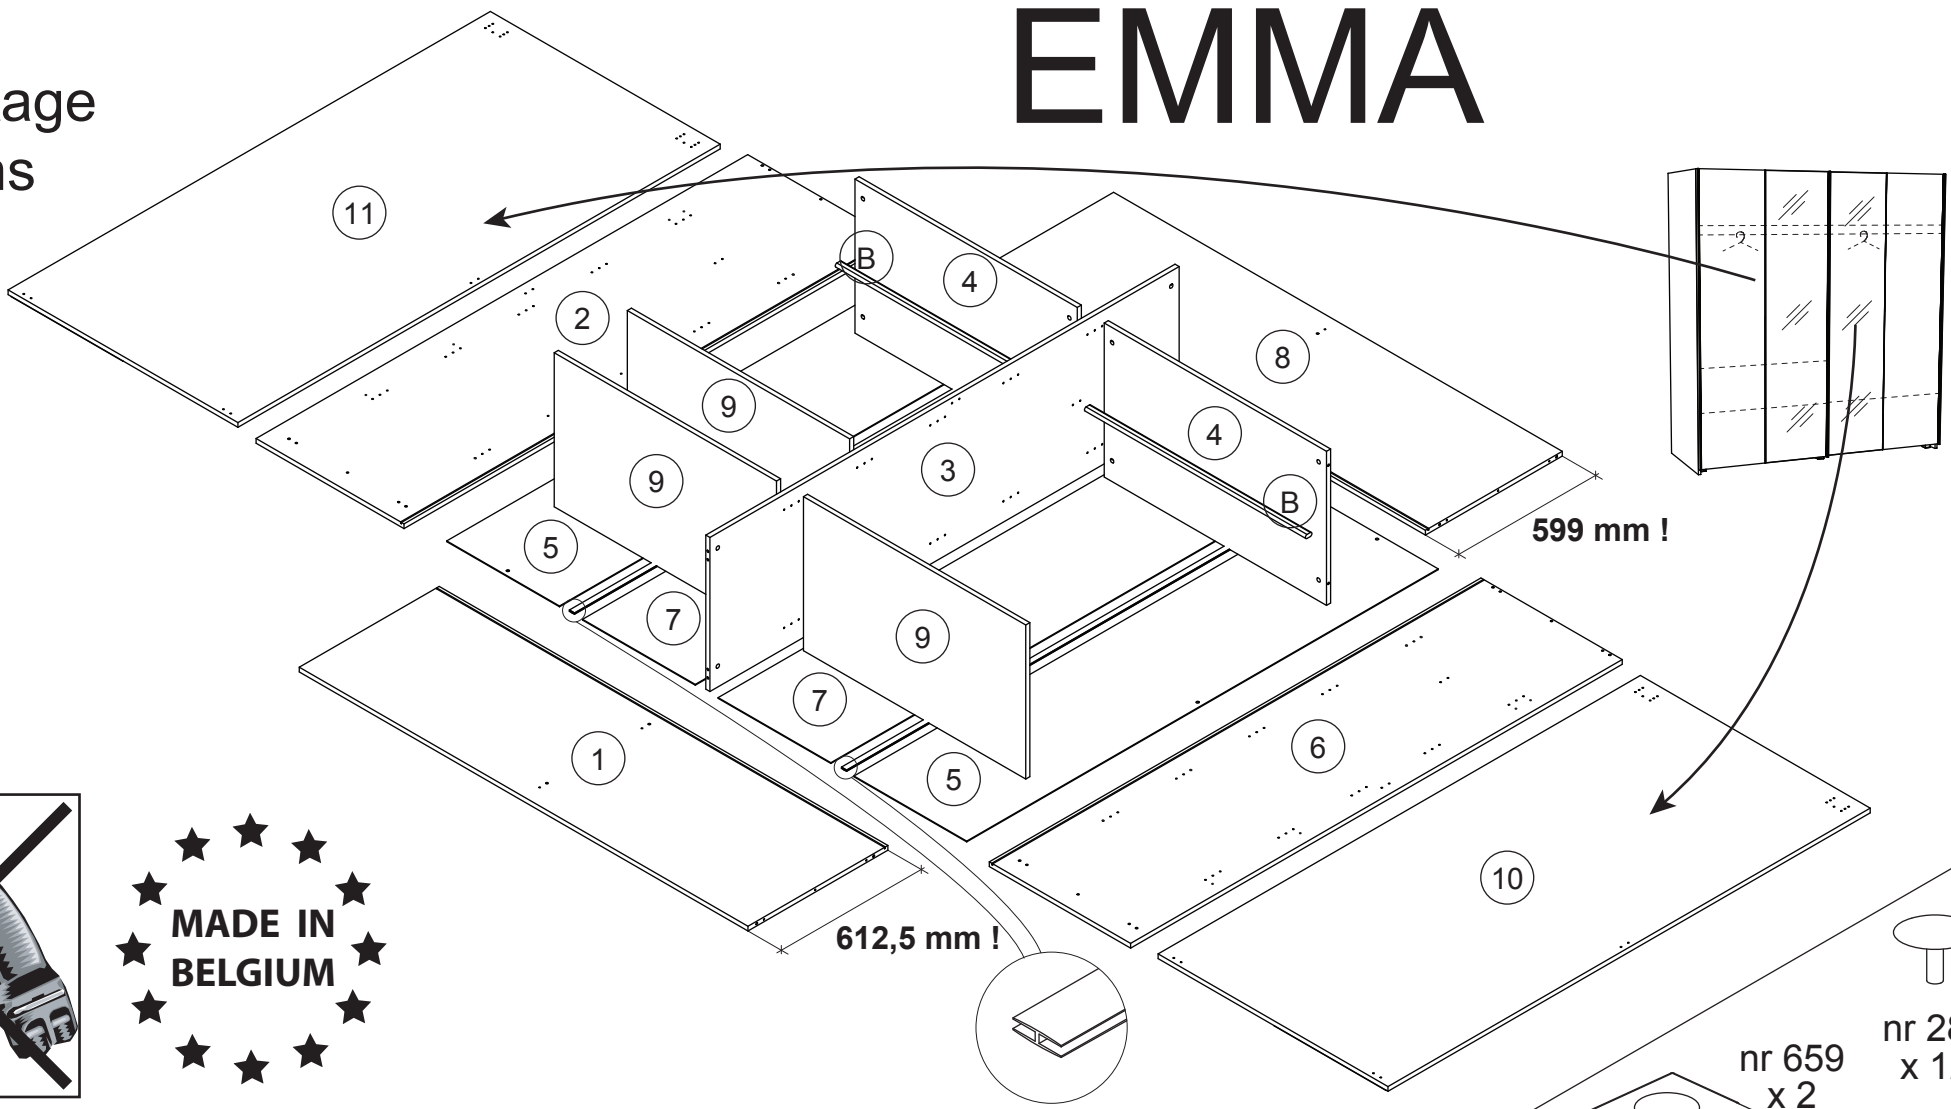

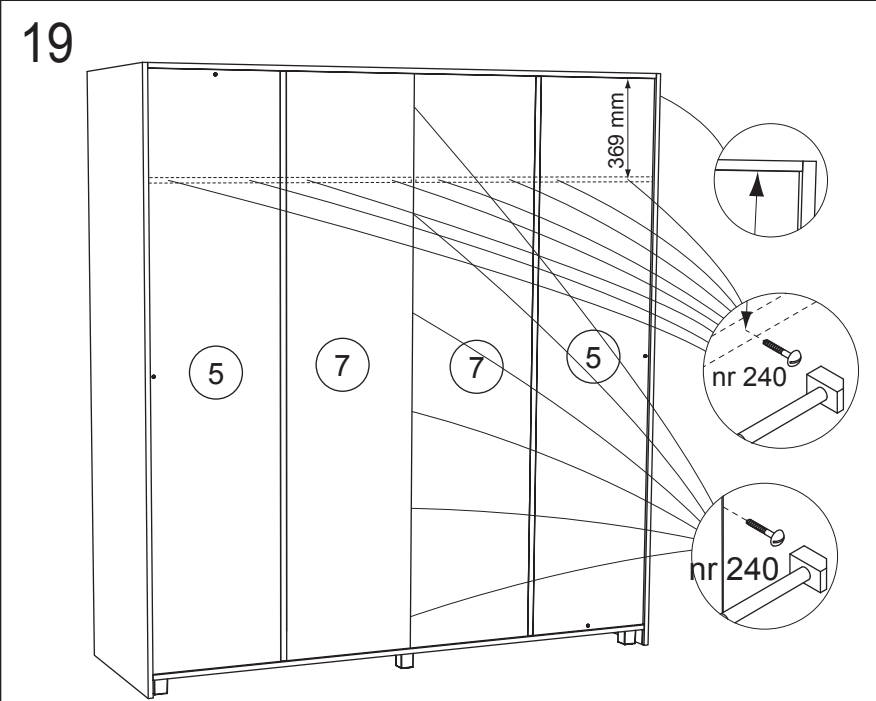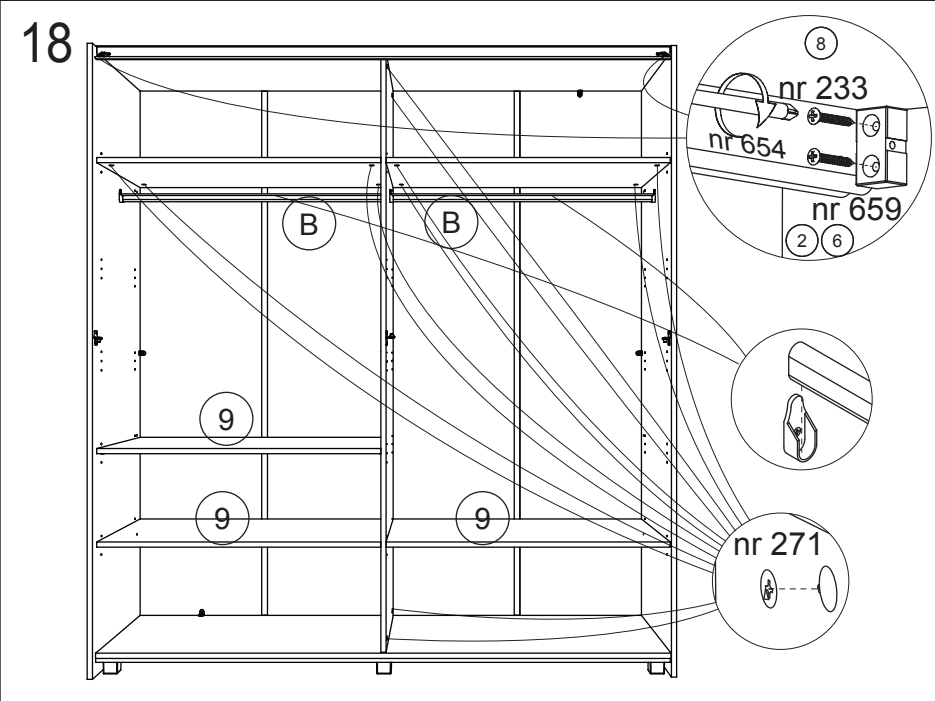
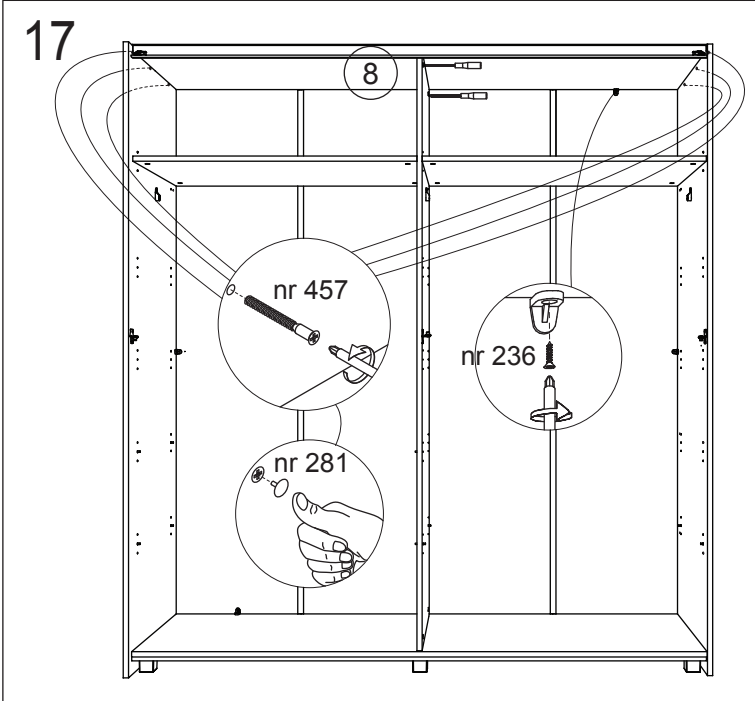
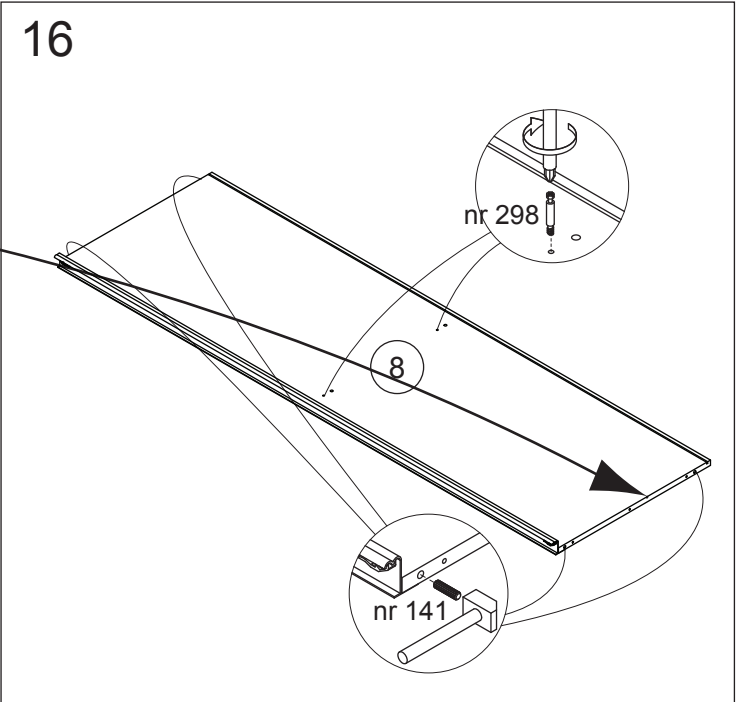
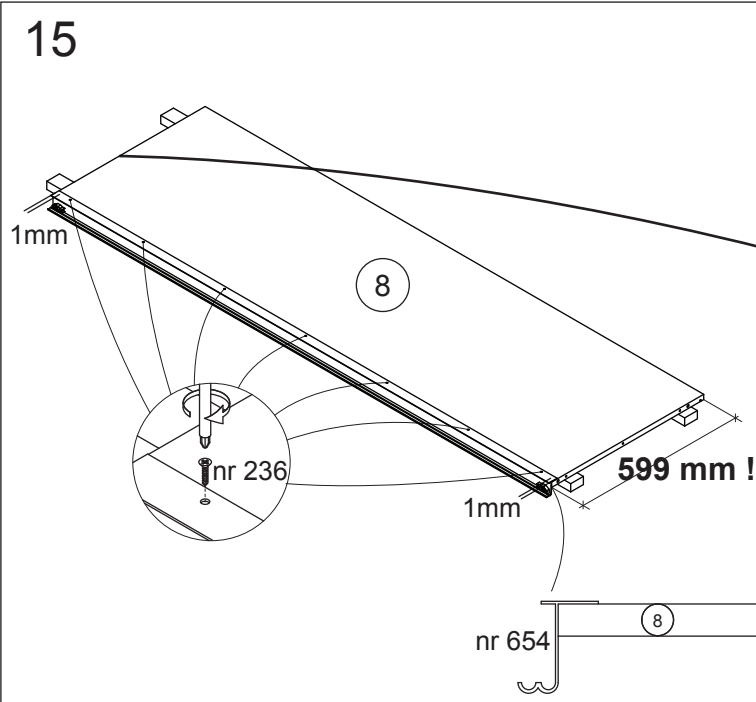
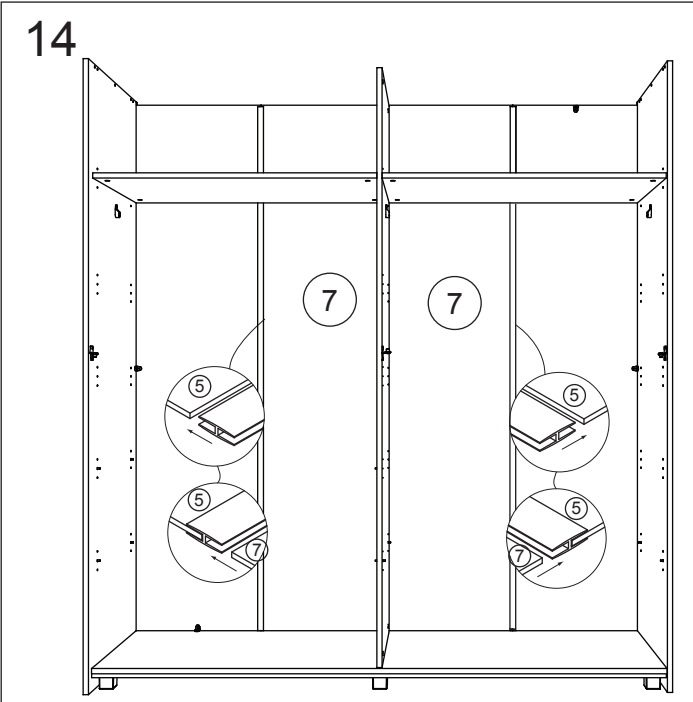
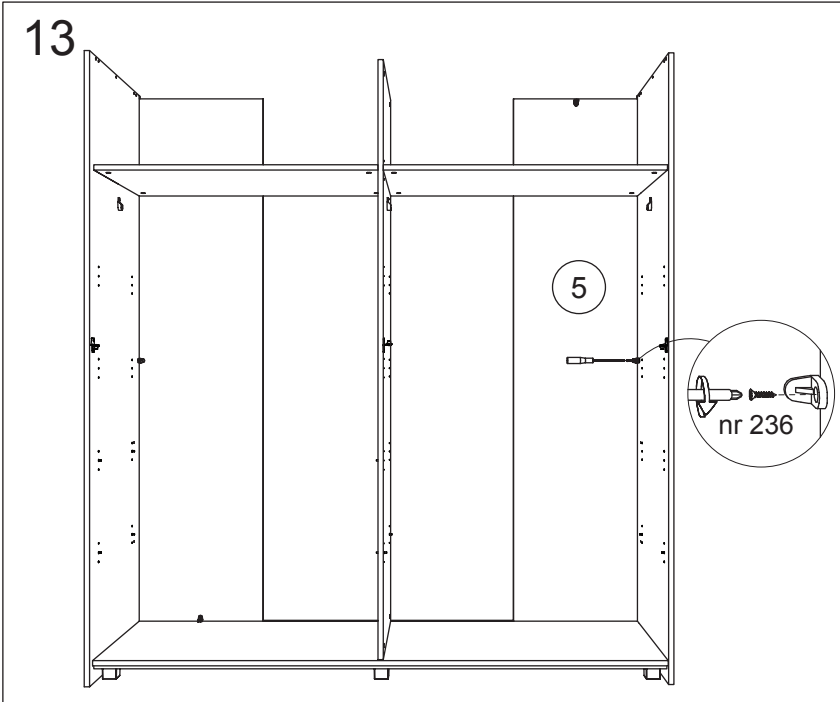


Voor de regeling van het sluiten van de deuren, moet u nu de kast goed waterpas zetten.

Pour le règlement de fermeture des portes, il faut mettre l'armoire de niveau maintenant.

To adjust the closing of the doors, you have to put the robe at level now.

Der Schrank soll jetzt waage-recht stehen, für die Regulung des Schliessens der Türe

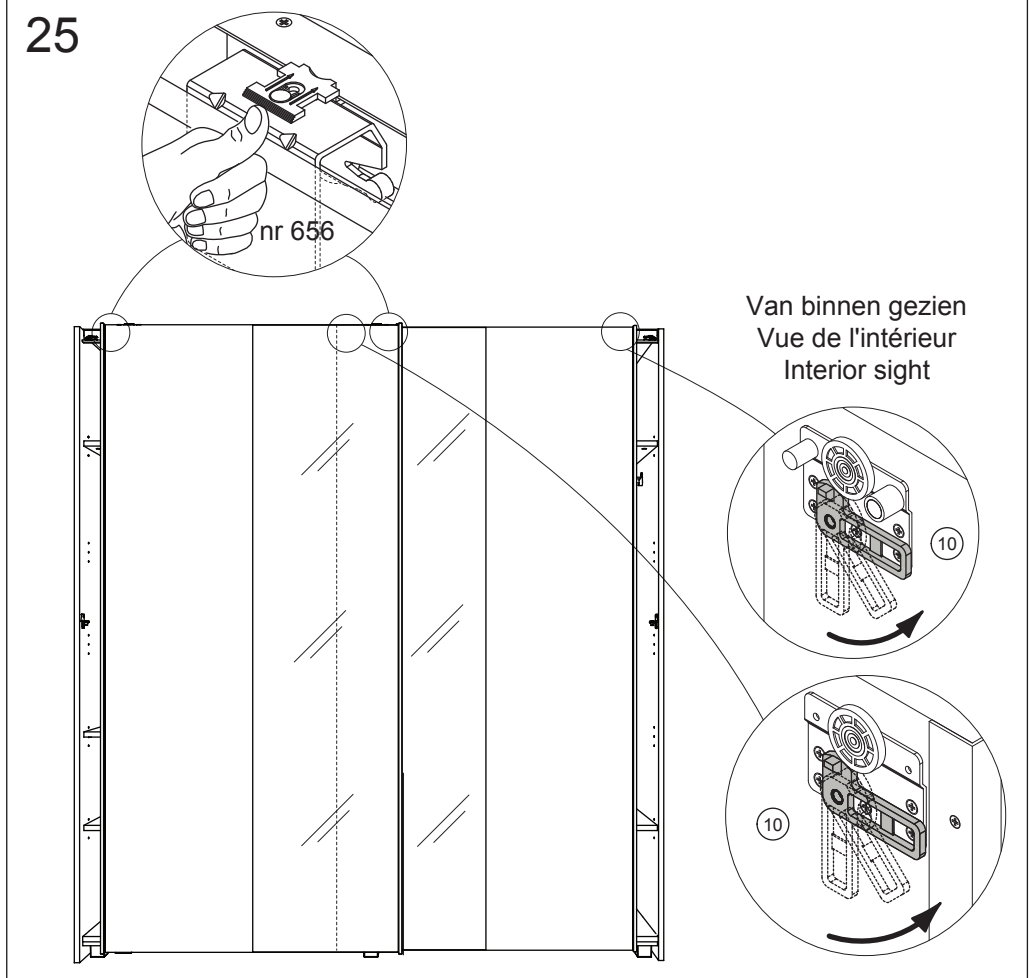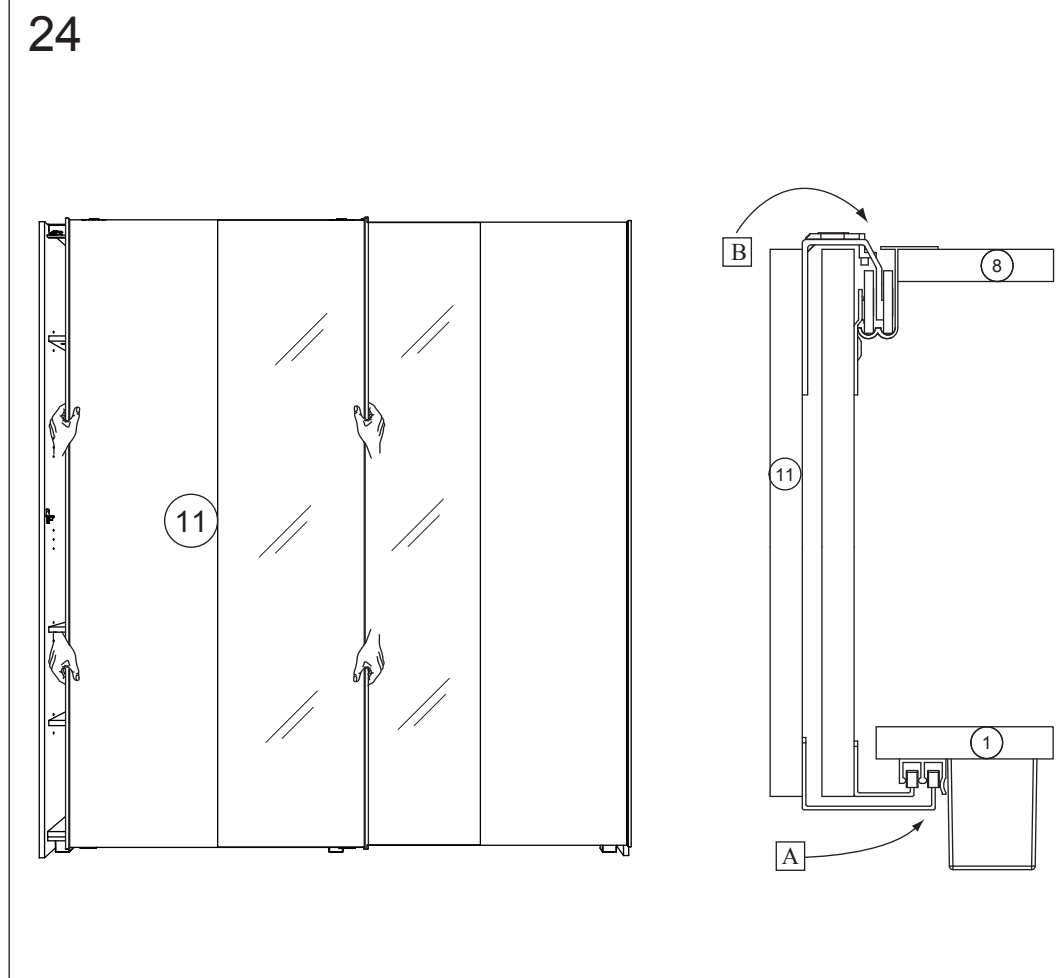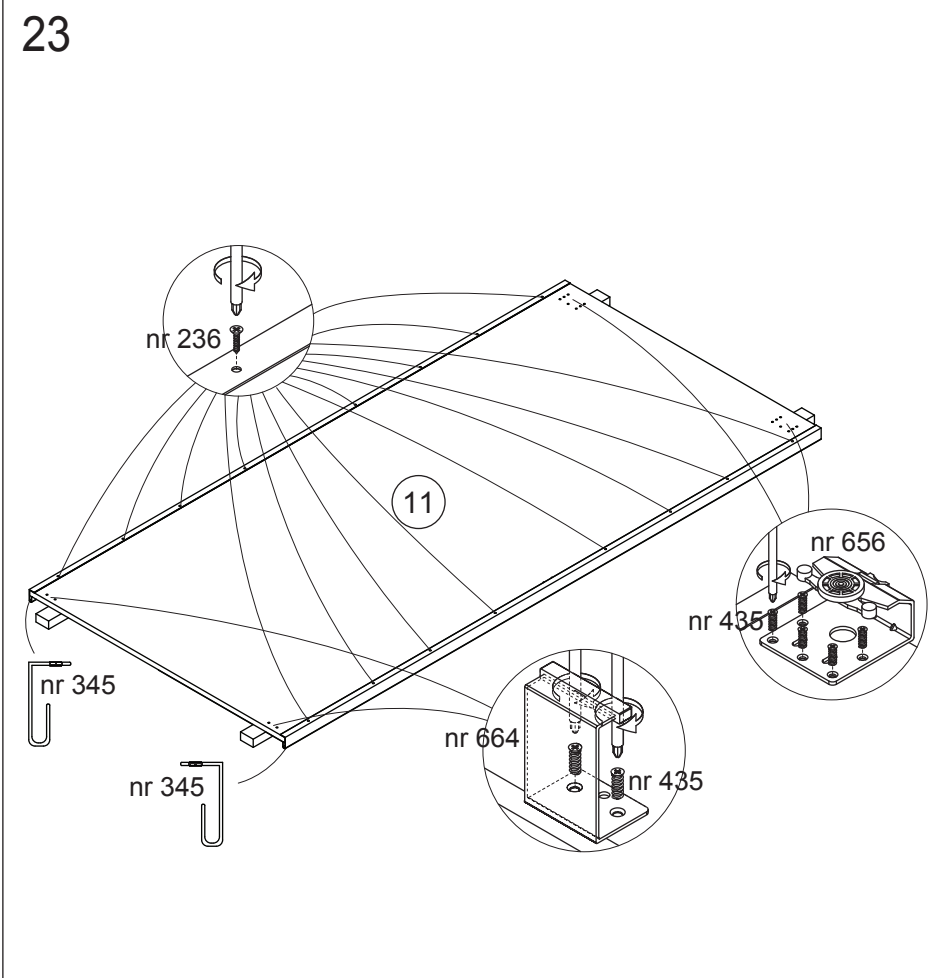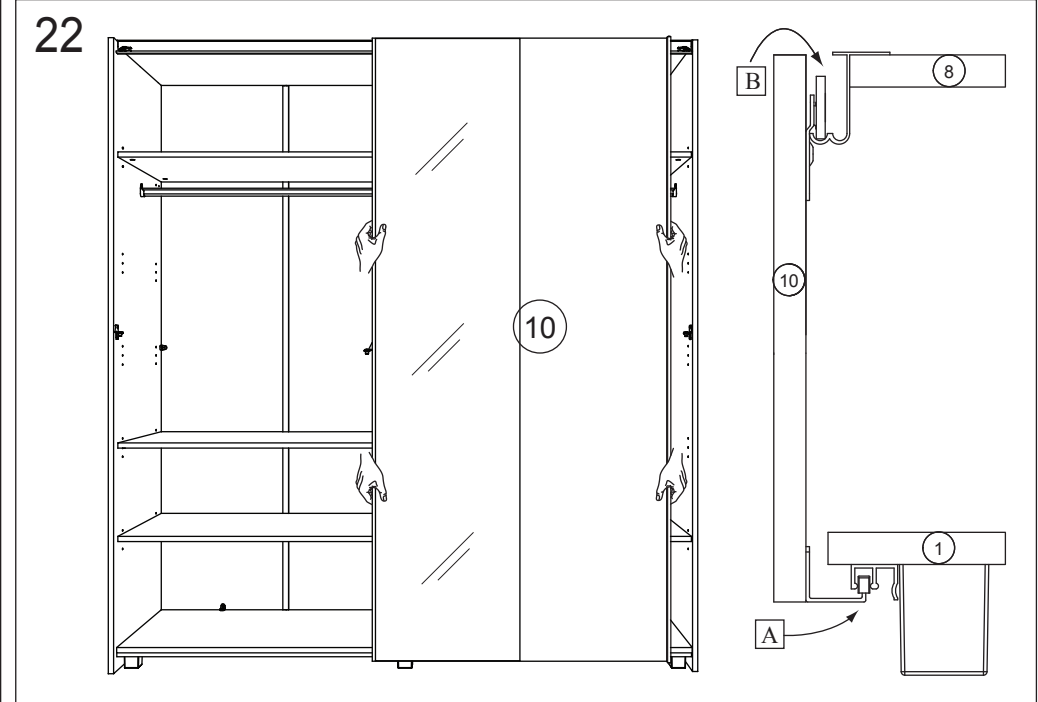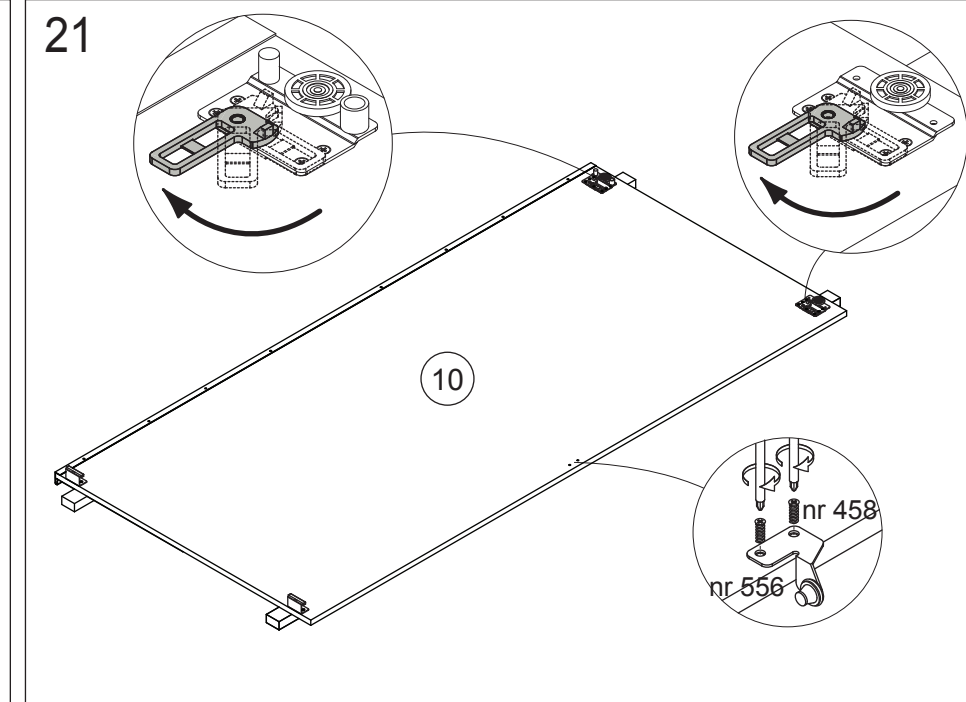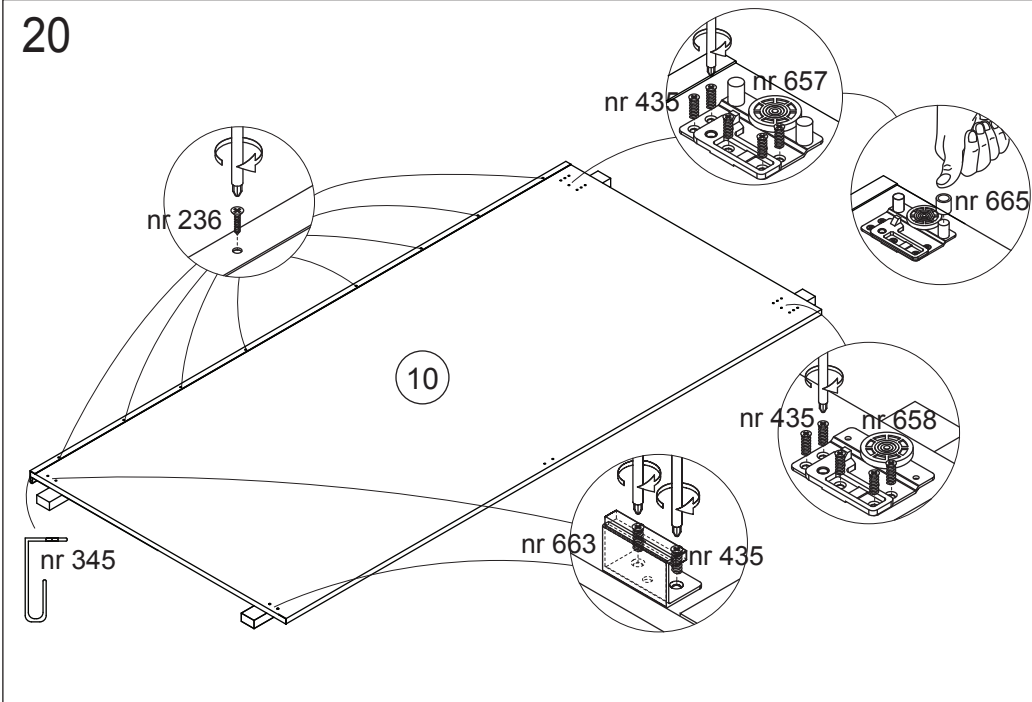

Van binnen gezien
Vue de l'intérieur
Interior sight