


ASSEMBLY INSTRUCTION


MODEL : WR 80112-2M-S5V - EVI KLEERKAST / ARMOIRE 4 D/P / 4 DOORS WARDROBE WITH MIRRORS

HARDWARE	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U
	PLASTIC DOWEL M6x25 1X30	C8 SCREW M3.5x16 1X102	C8 SCREW M3.5x20 1X16	ABS DRAWER PIN (15MM) 1X8	V-BRACKET 1X2	CABINET STOPPER 1X2	HANDLE VSC 18 (224MM) - ATC 1X2	L-SHAPE HANDLE (ATC) 1X1	P/H SCREW M4x20 1X4	MINIFIX 5654 26 SETS	Q-FIT VB3500 20 SETS	CAP 1X26	C163 PLASTIC LEG (BLACK) 1X8	ALLEN KEY 1X1	CHROME PIPE (1078MM) 1X1	PLASTIC CORNER BLOCK 1X12	PYRAMID ANGLE CORNER BLOCK 1X6	HINGES (OUTSIDE) 5/8 16 SETS	POWER NAIL 5/8 1X32	CB SCREW M3.5 x 25 1X8	METAL SHELF SUPPORT 1X20


PART LIST

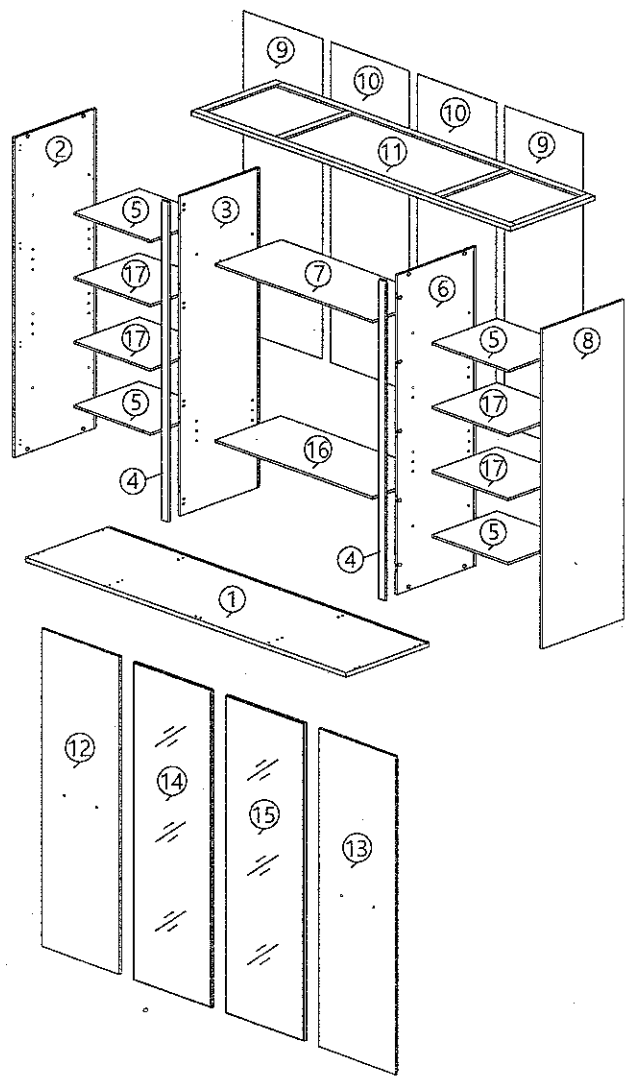


STEP 1

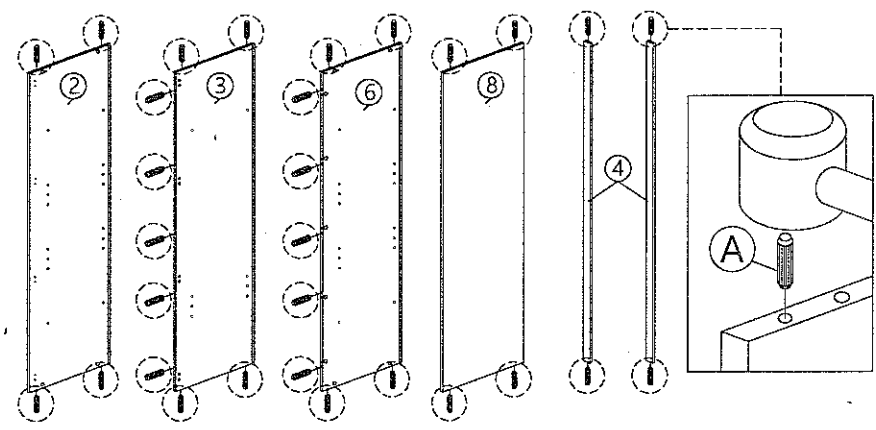


STEP 2





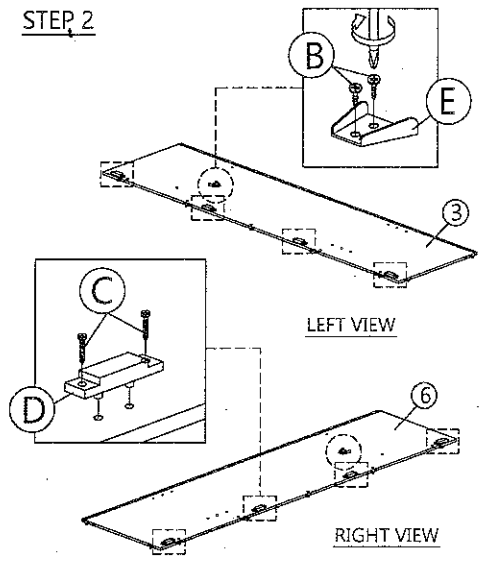


STEP 3

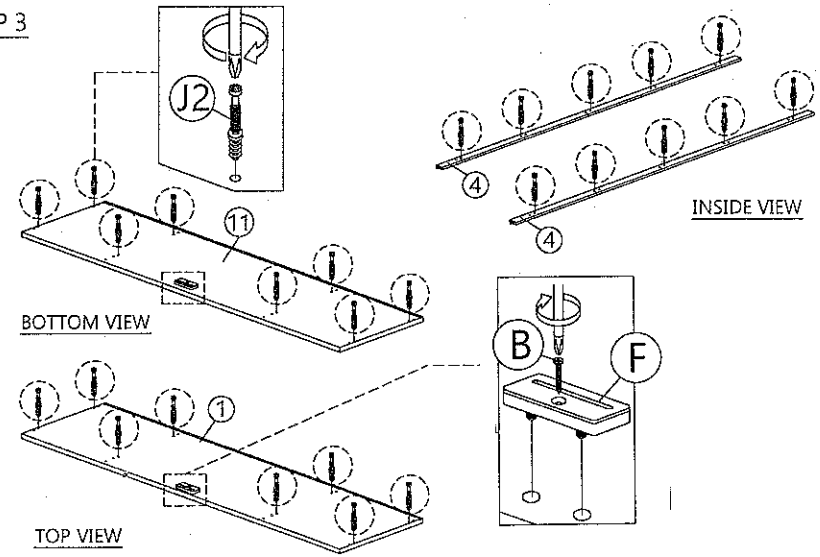

STEP 4

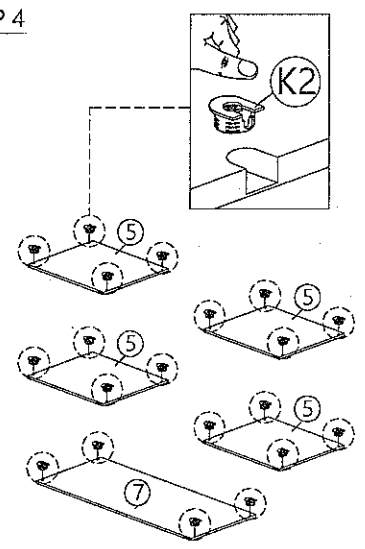





ASSEMBLY INSTRUCTION

MODEL : WR 80112-2M-S5V - EVI KLEERKAST / ARMOIRE 4 D/P / 4 DOORS WARDROBE WITH MIRRORS


STEP 5

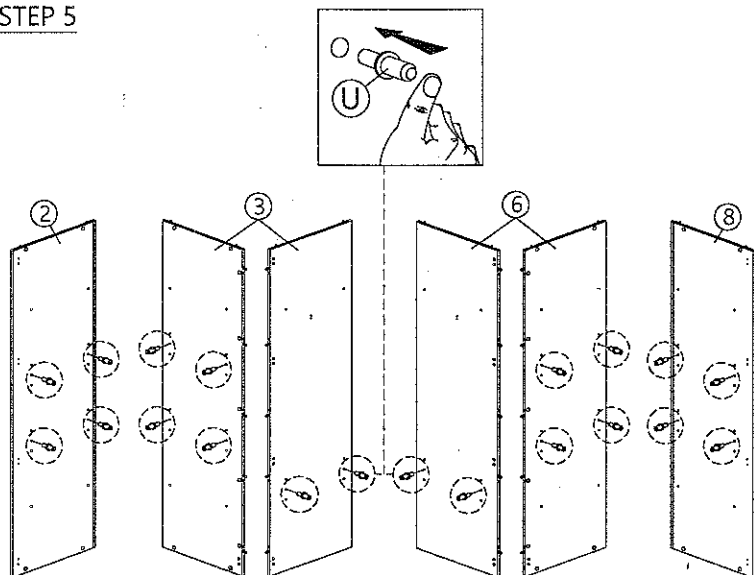


STEP 6

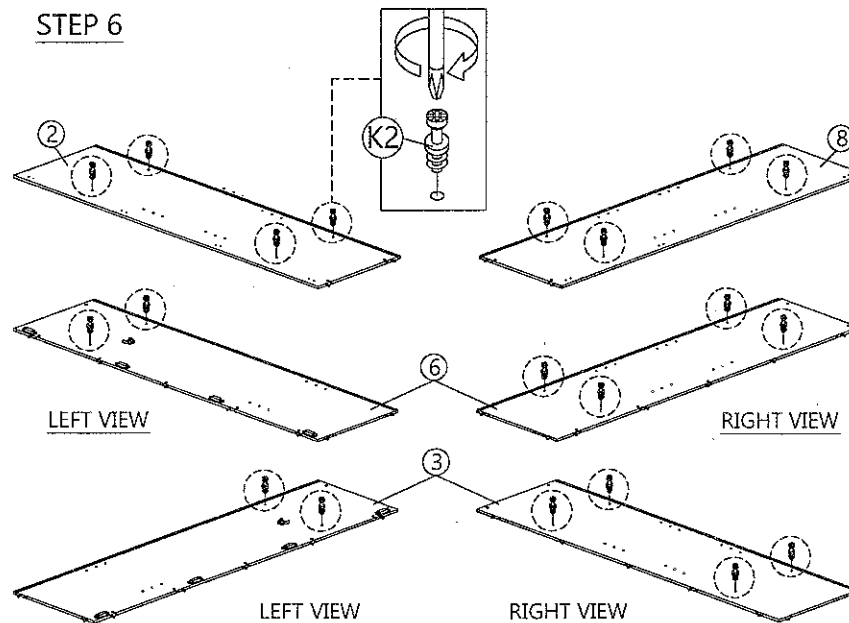


STEP 7

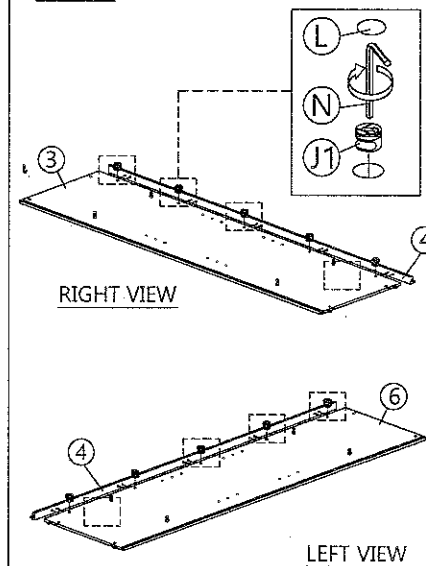


STEP 8

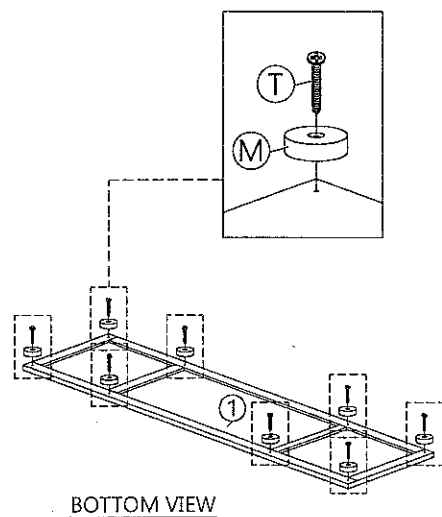


STEP 9


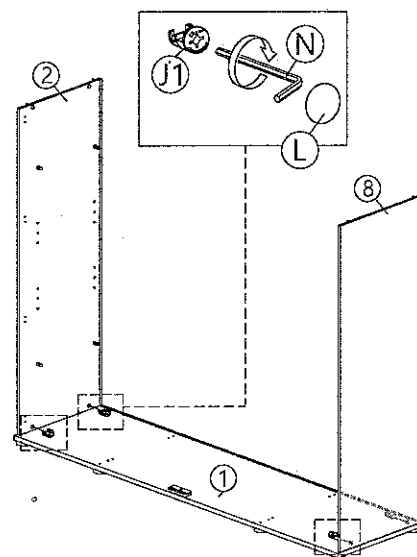


STEP 10

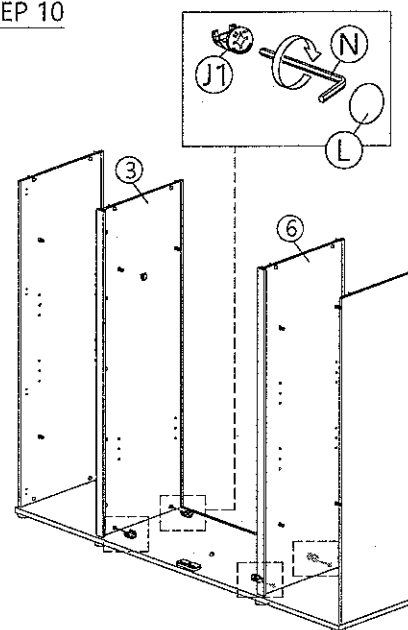

STEP 11

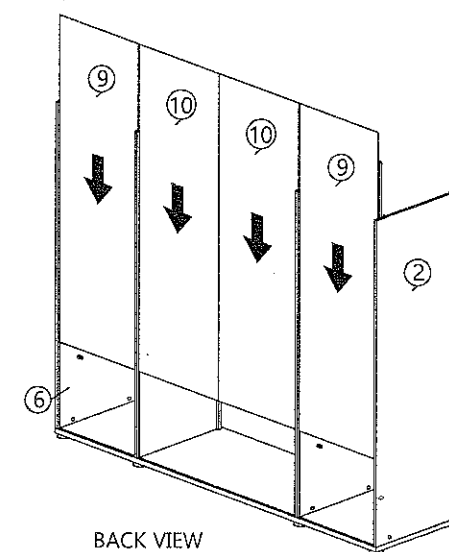





ASSEMBLY INSTRUCTION

MODEL : WR 80112-2M-S5V - EVI KLEERKAST / ARMOIRE 4 D/P / 4 DOORS WARDROBE WITH MIRRORS


STEP 12

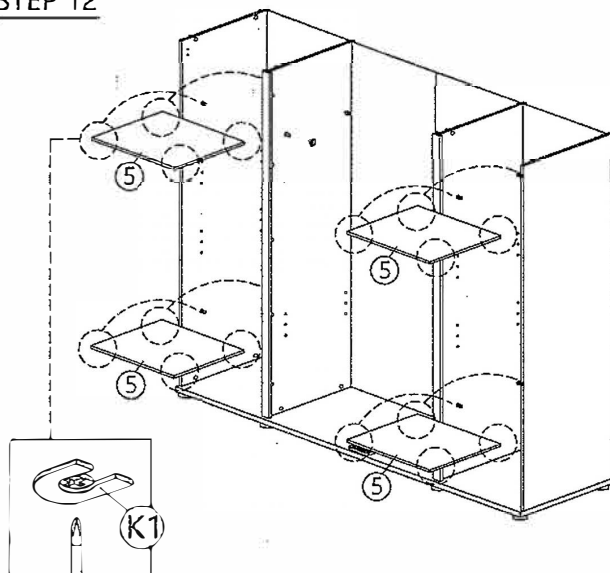


STEP 13

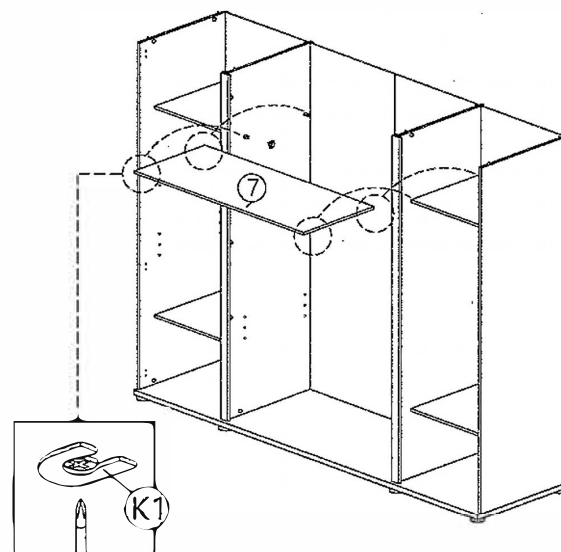


STEP 14

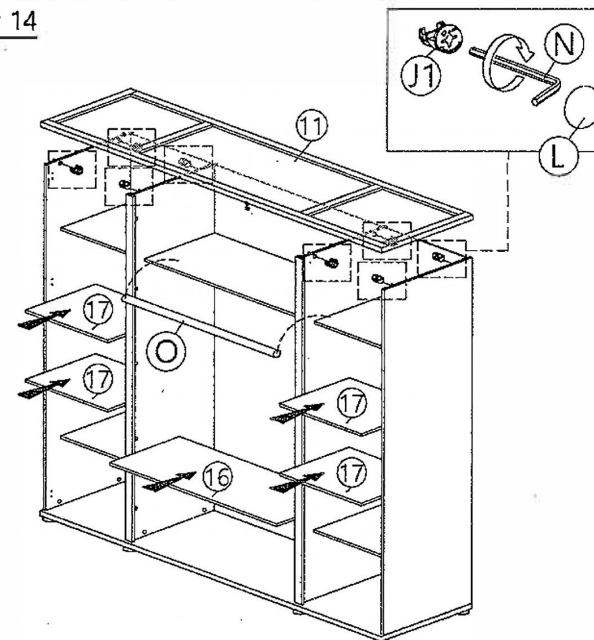


STEP 15





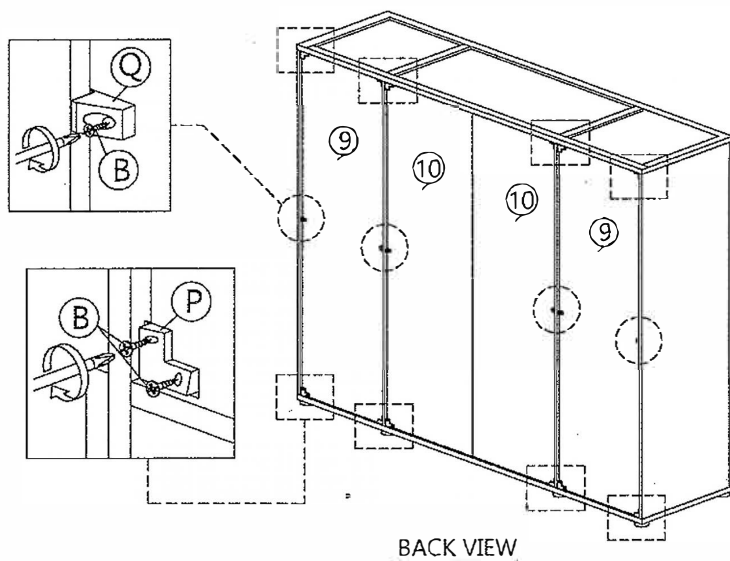


STEP 16

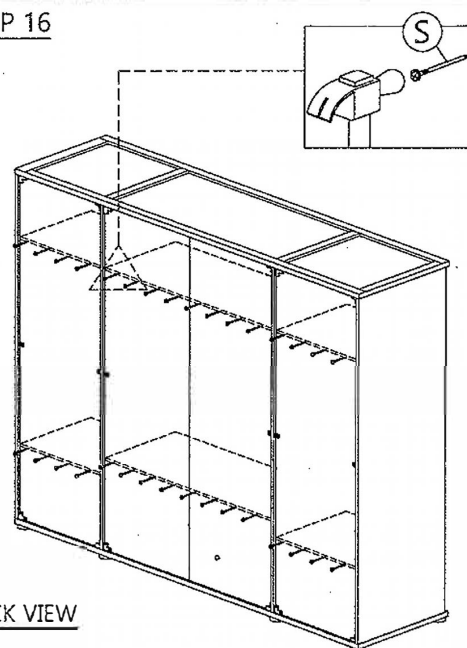

STEP 17

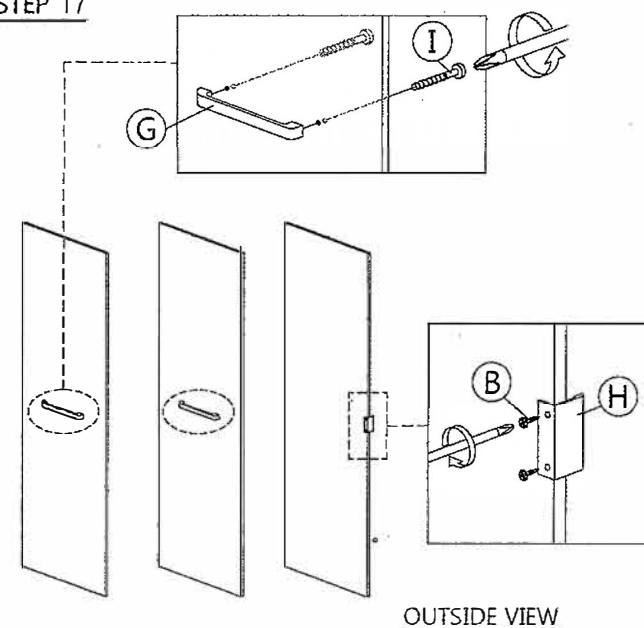



SOFT, DRY CLOTH

CHEMICAL

HEAT

KEEP DRY


HANDLE WITH CARE

DO NOT USE KNIFE


ASSEMBLY INSTRUCTION

MODEL : WR 80112-2M-S5V - EVI KLEERKAST / ARMOIRE 4 D/P / 4 DOORS WARDROBE WITH MIRRORS


STEP 18

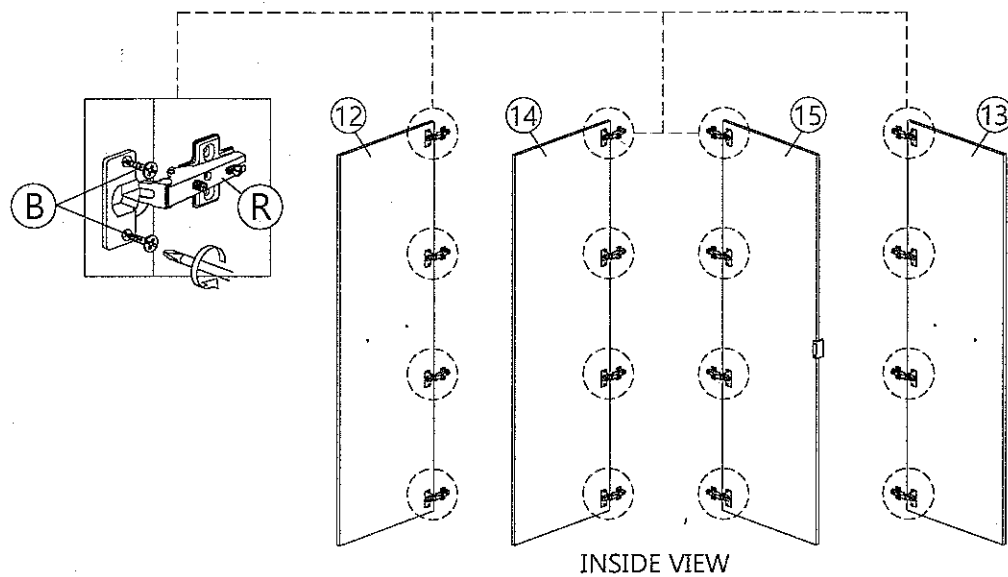

STEP 19

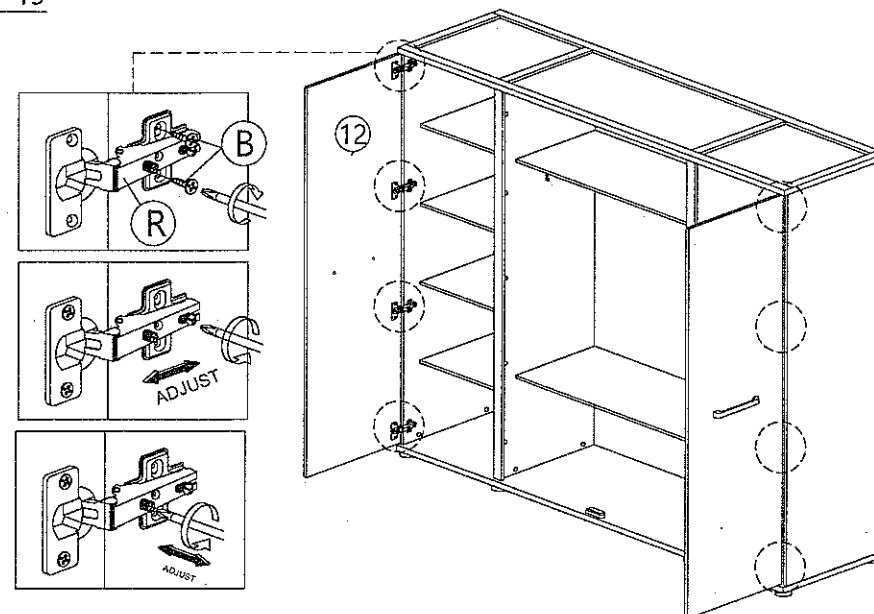

STEP 20

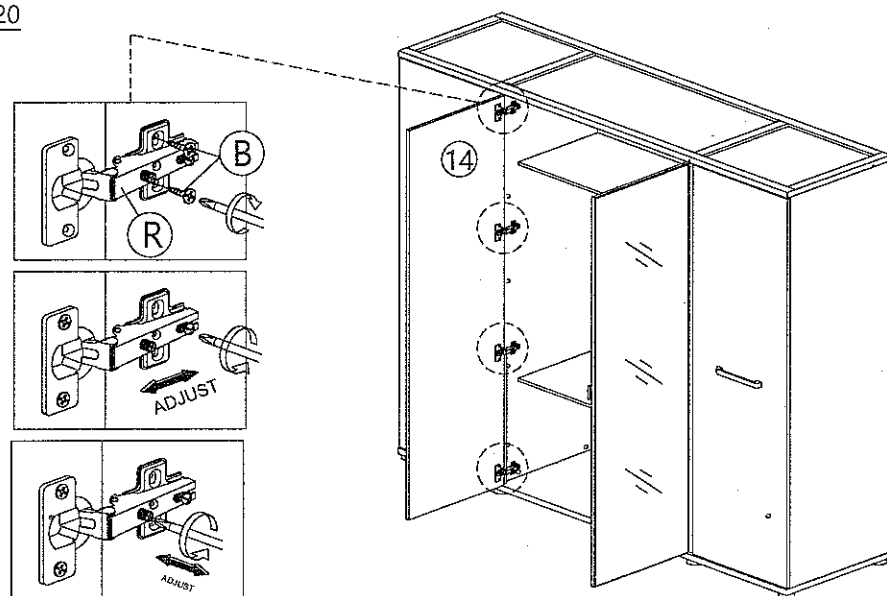

COMPLETED

