




montage instructies
instructions de montage
assembly instructions
montage anleitung




KATO

S20


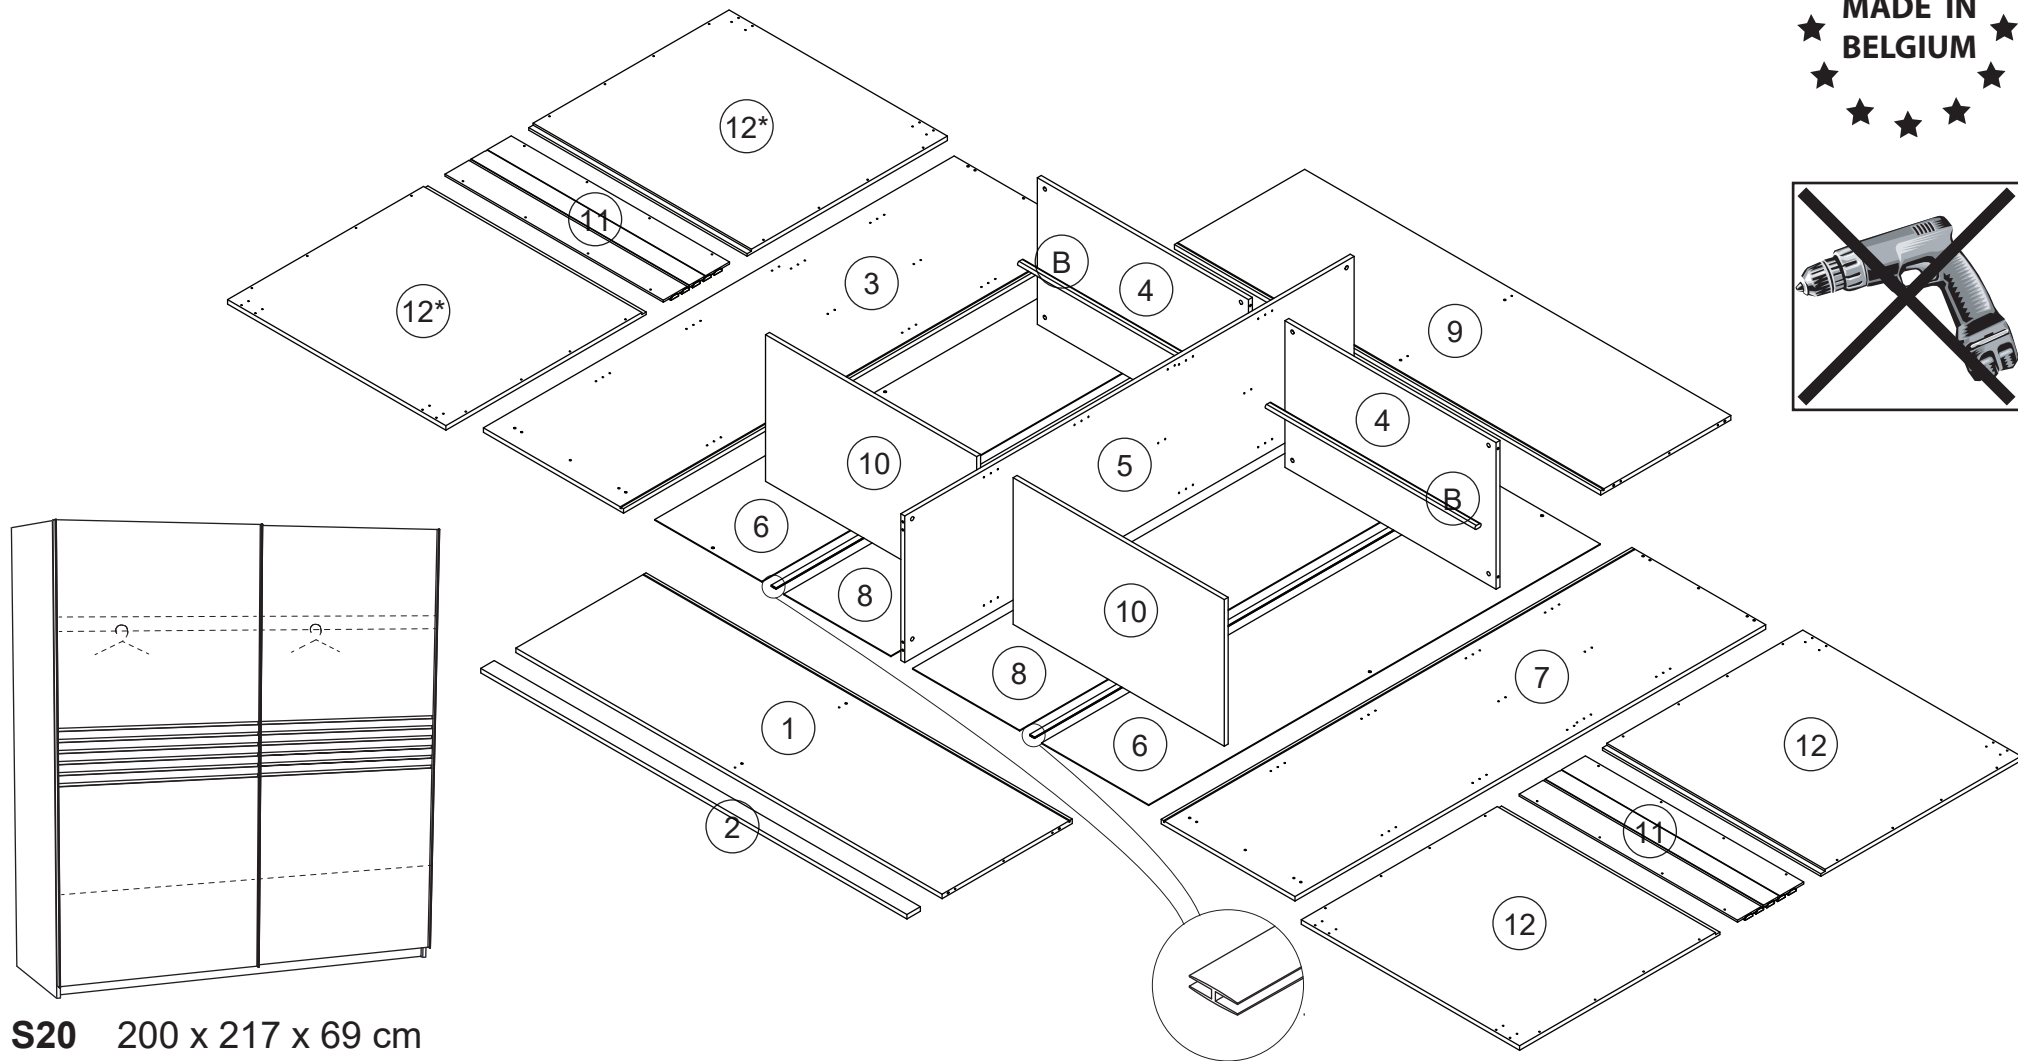














S20 200 x 217 x 69 cm










Hettich 9242681

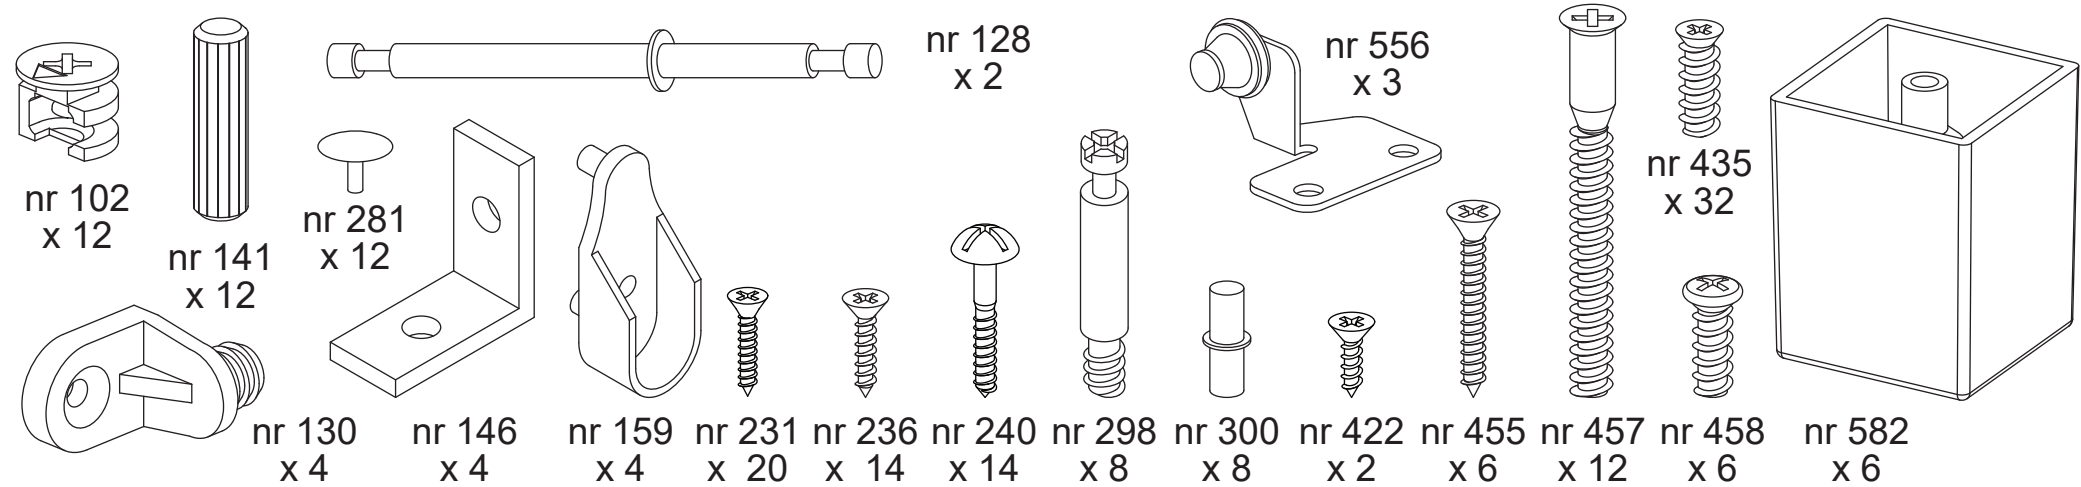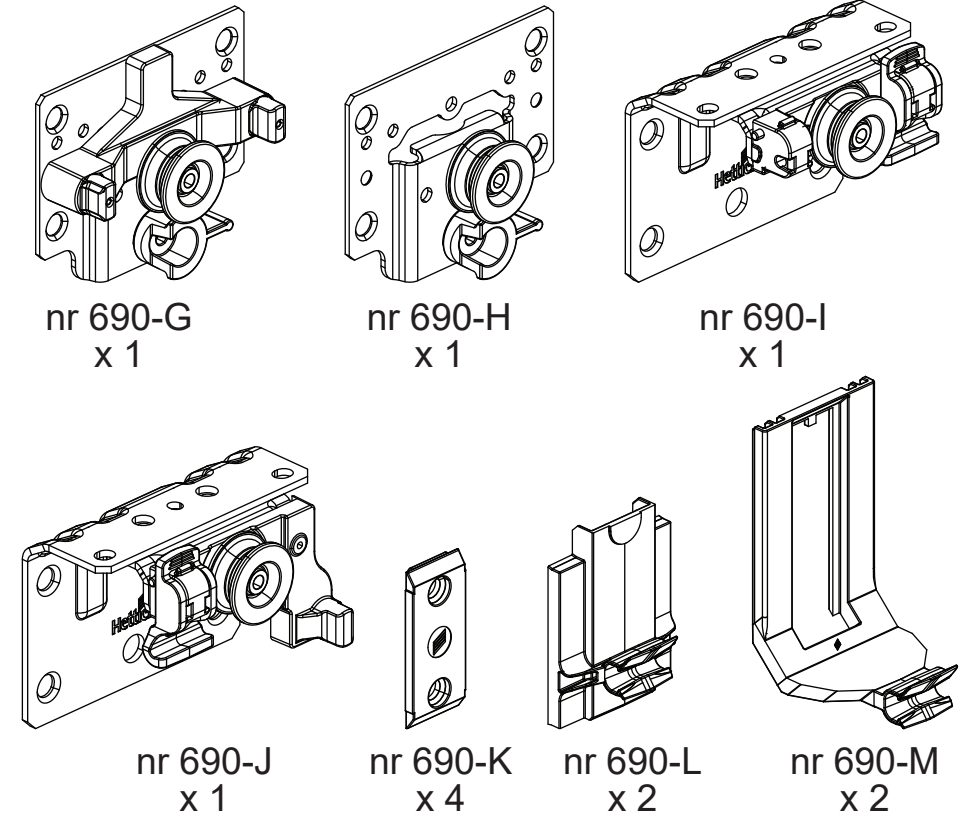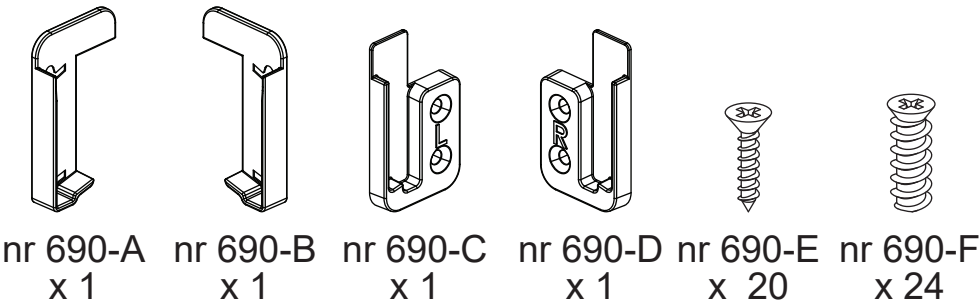

Hettich 9242219

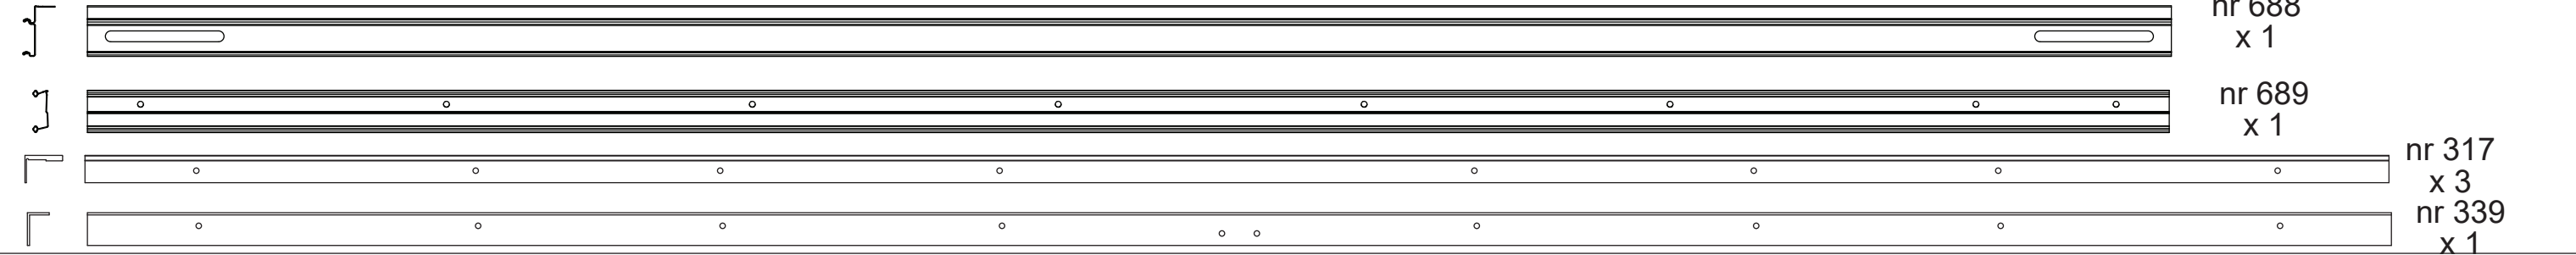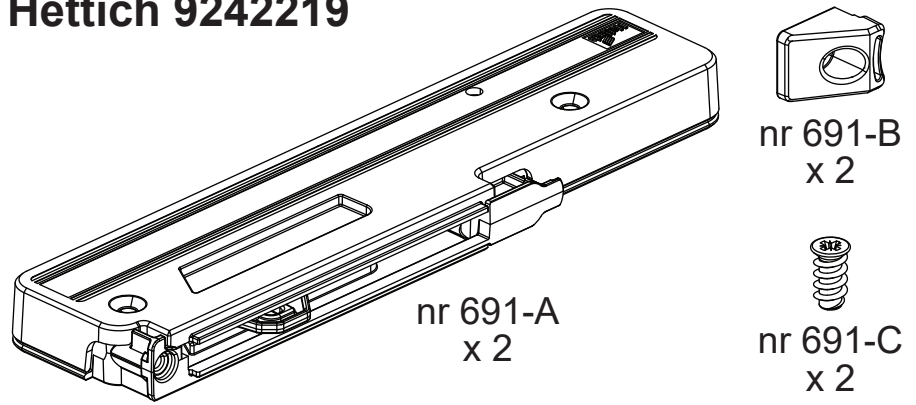

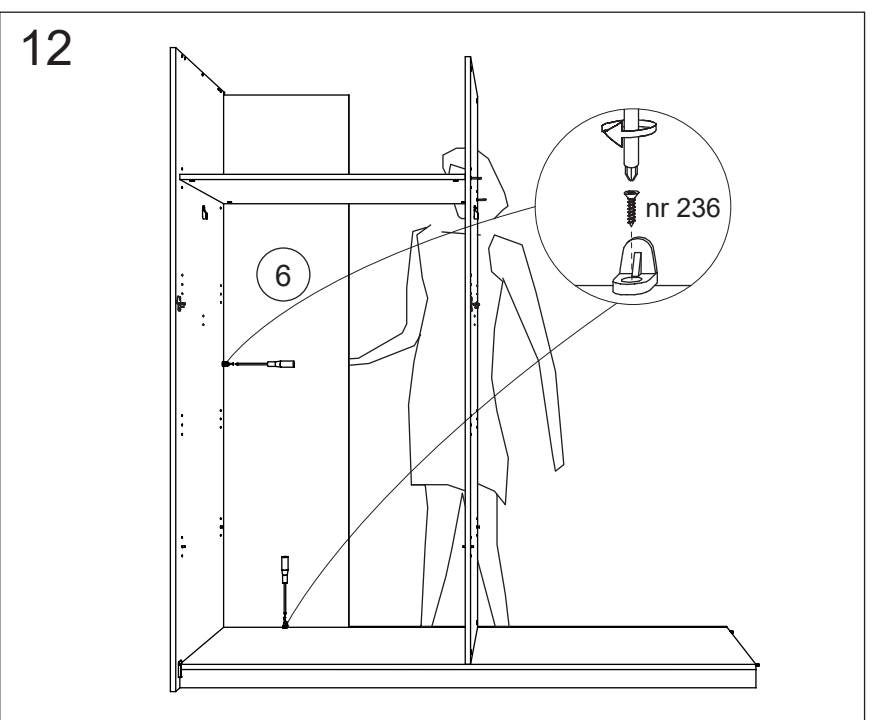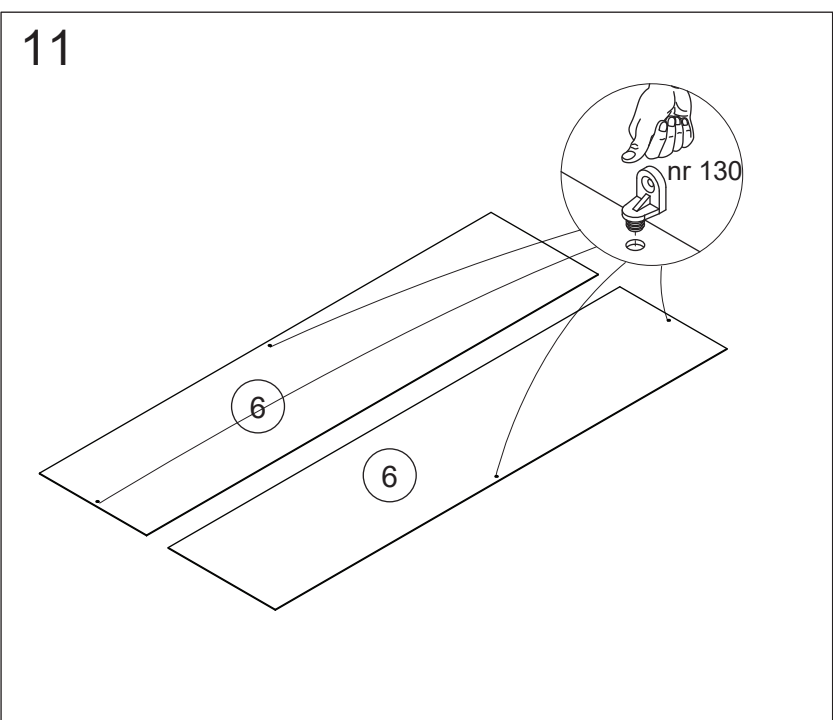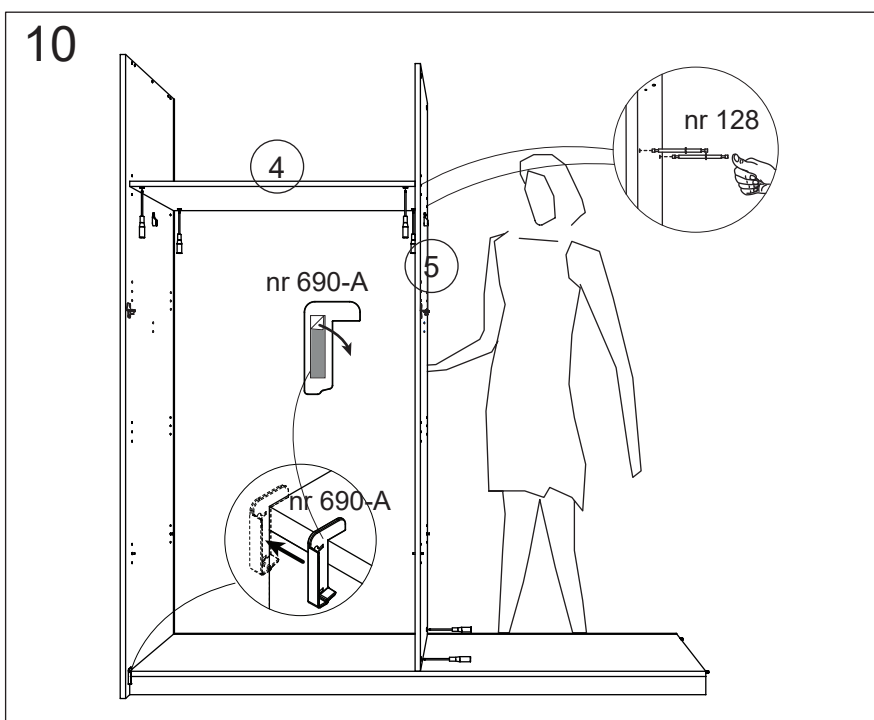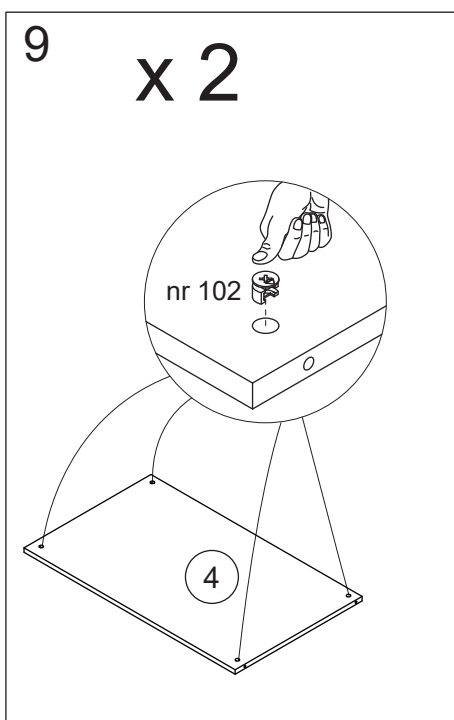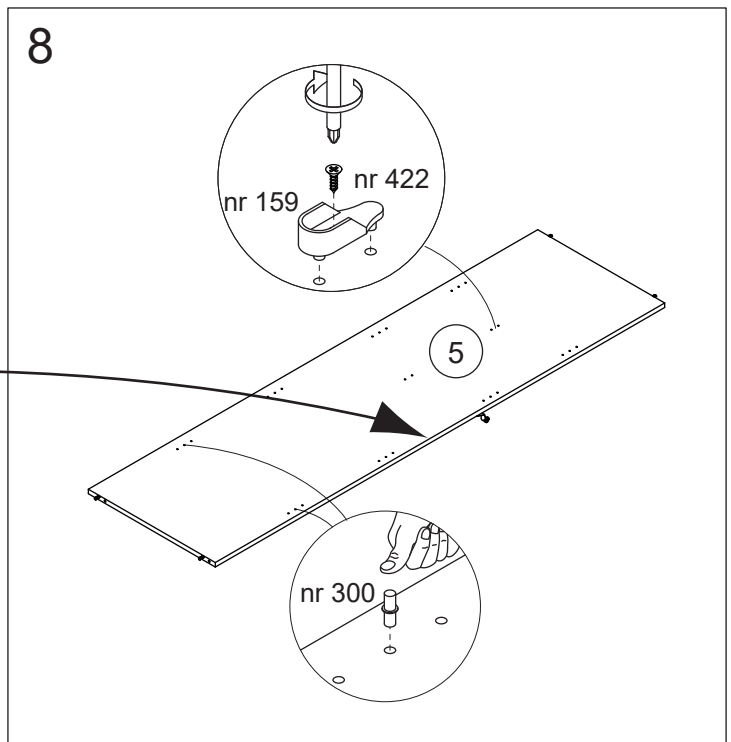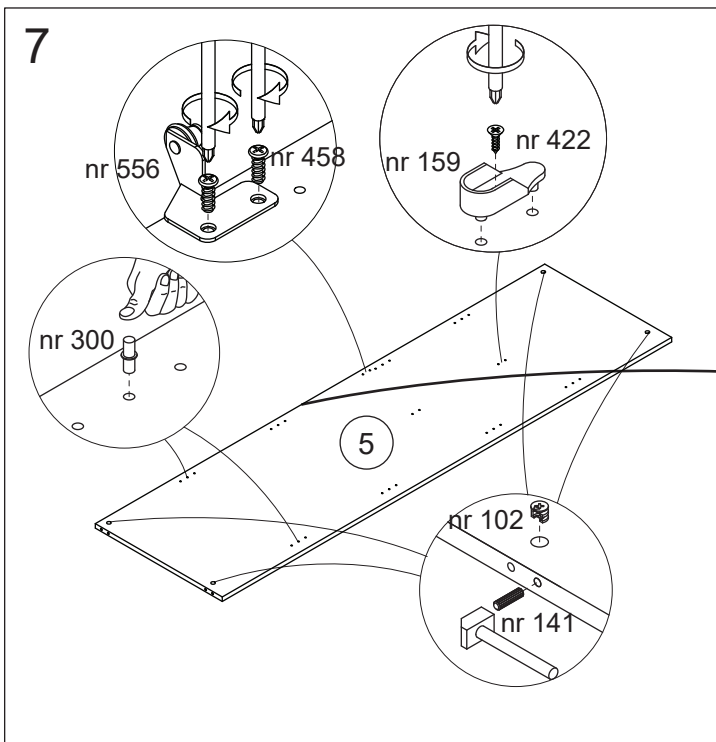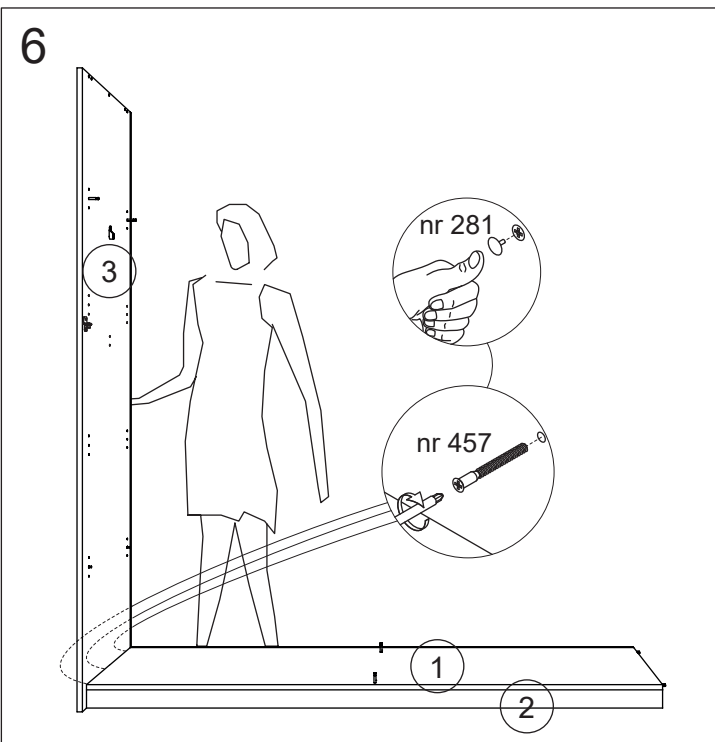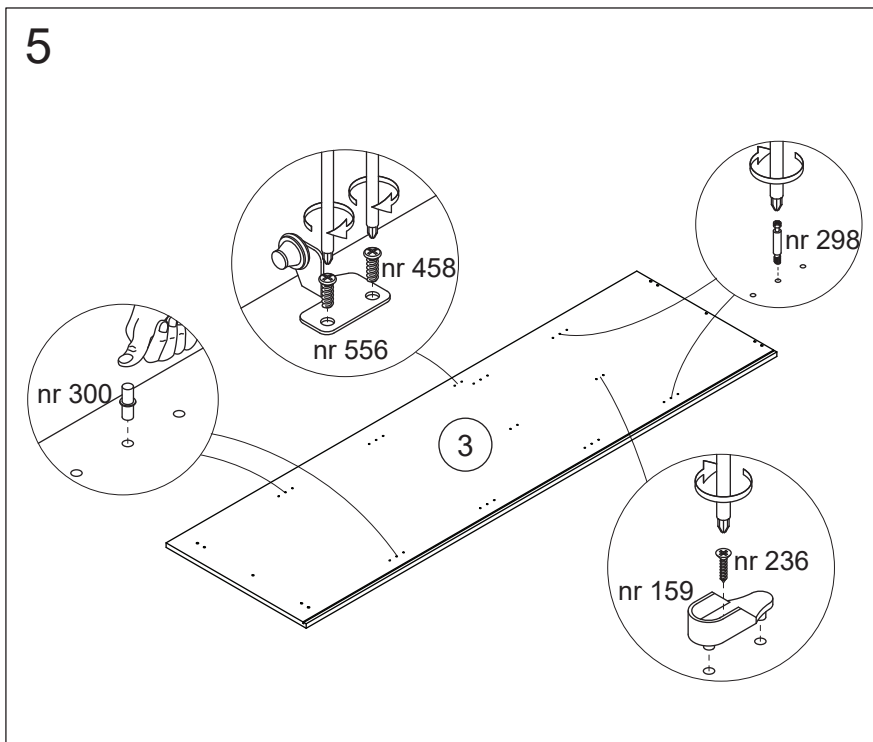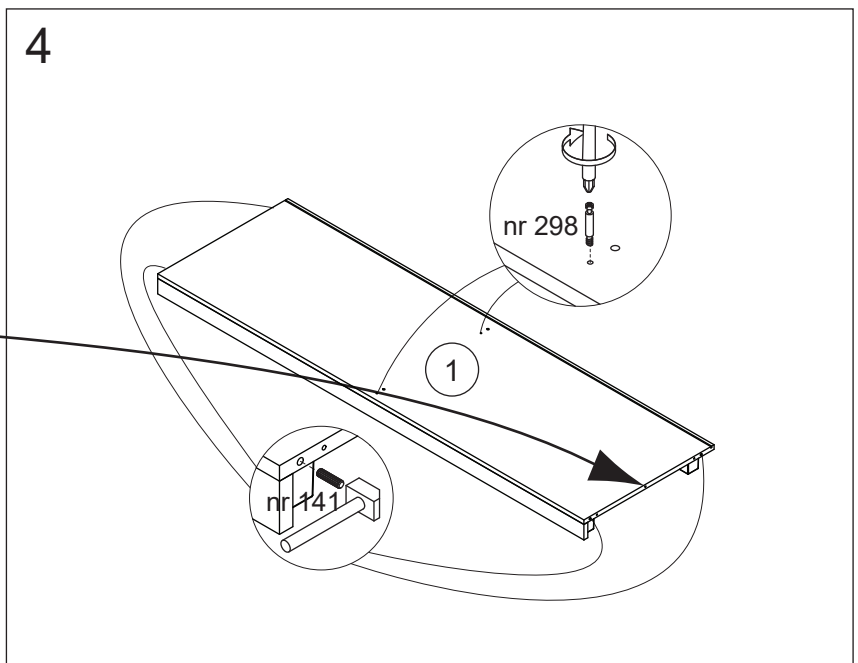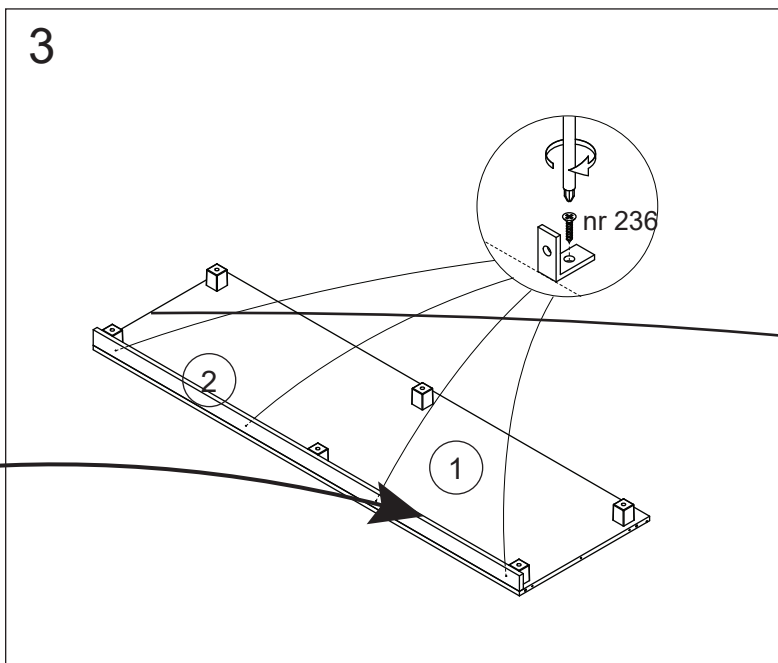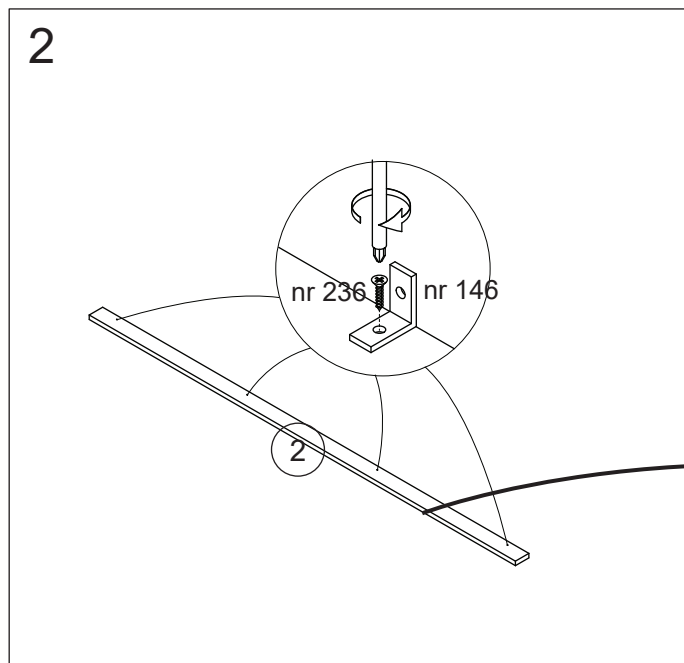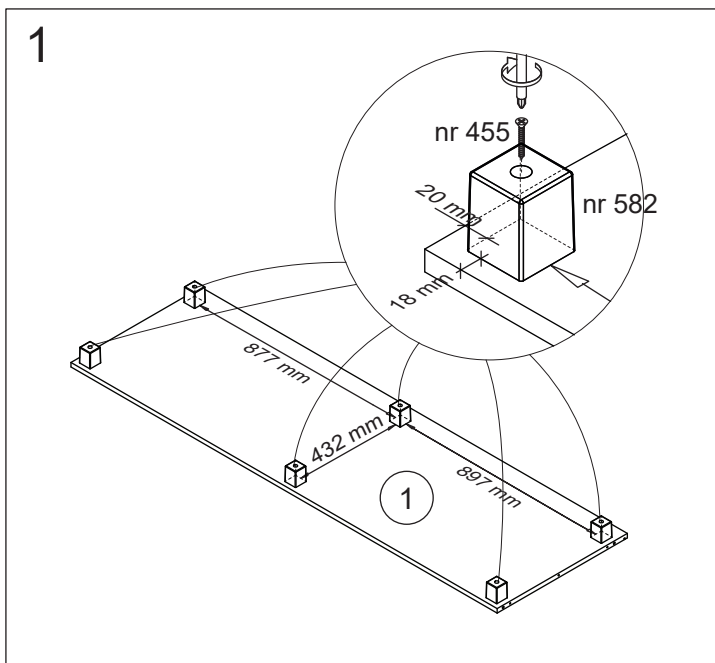

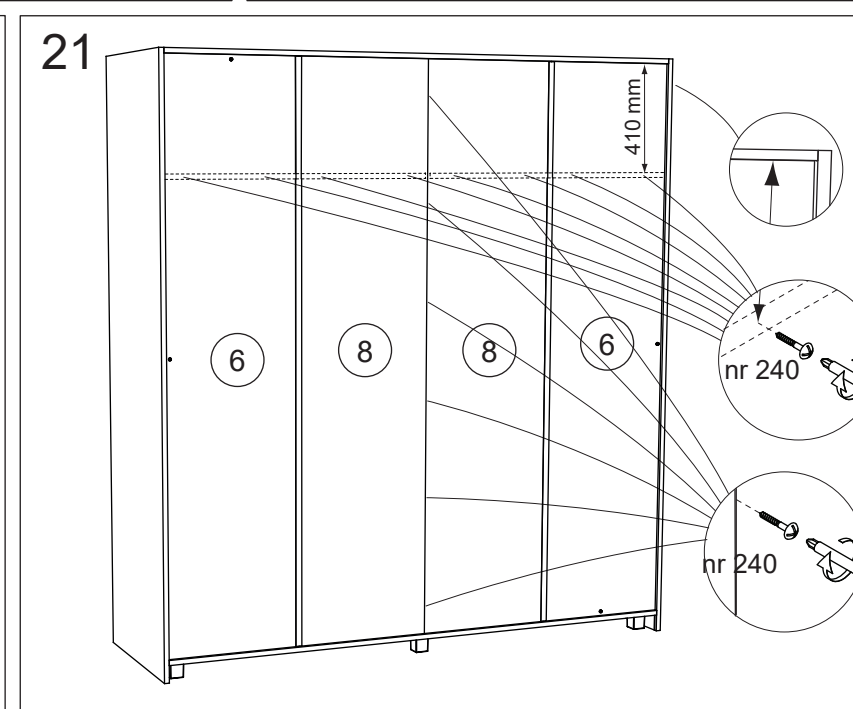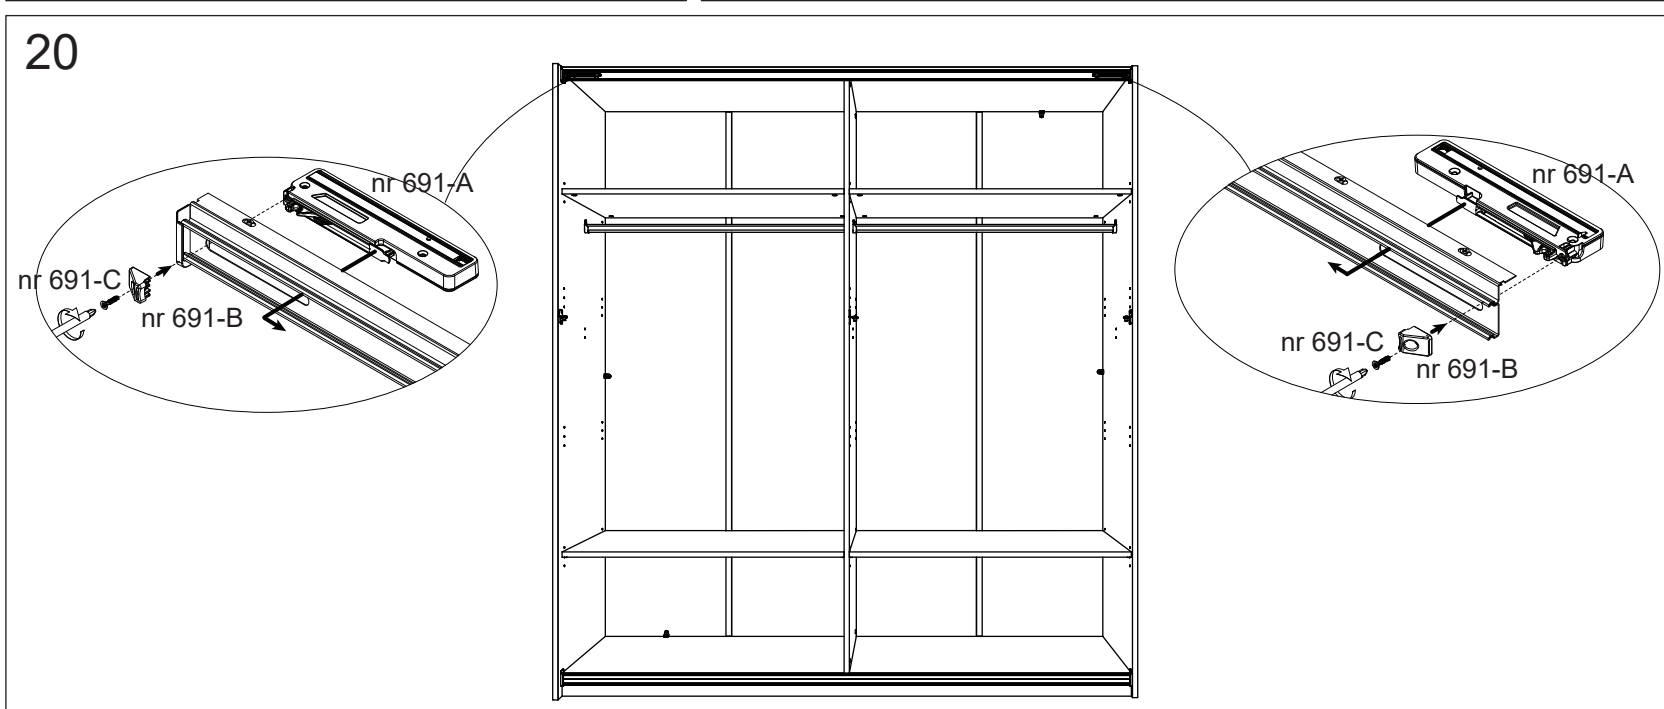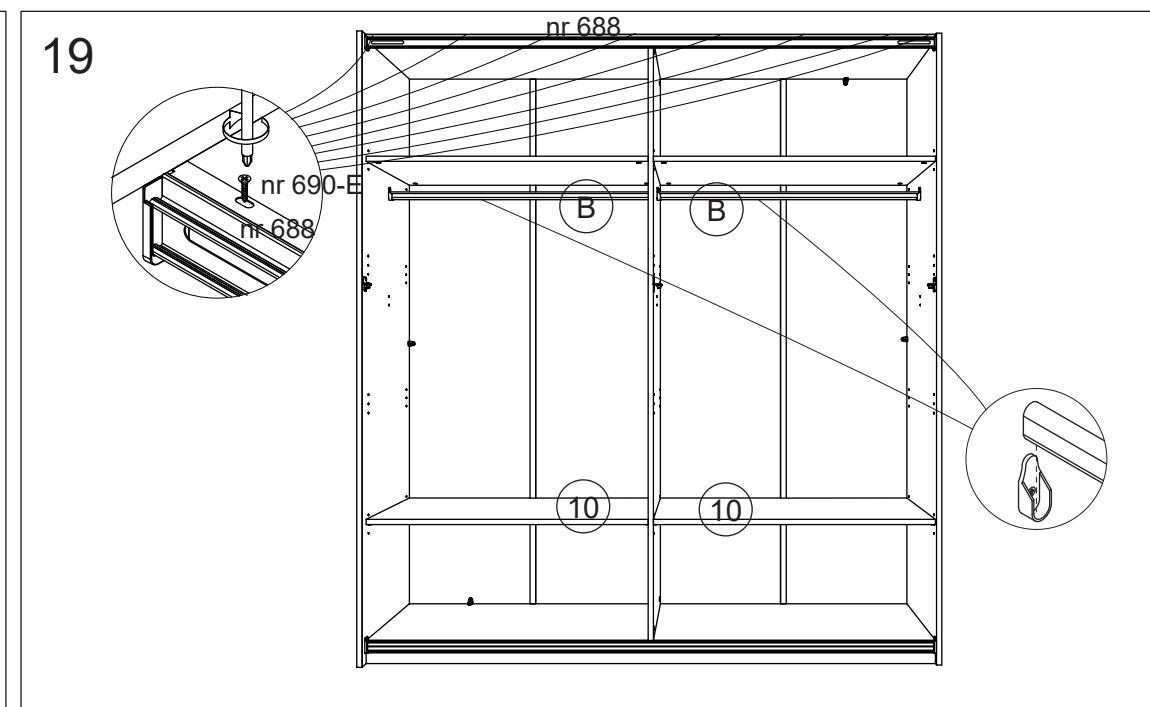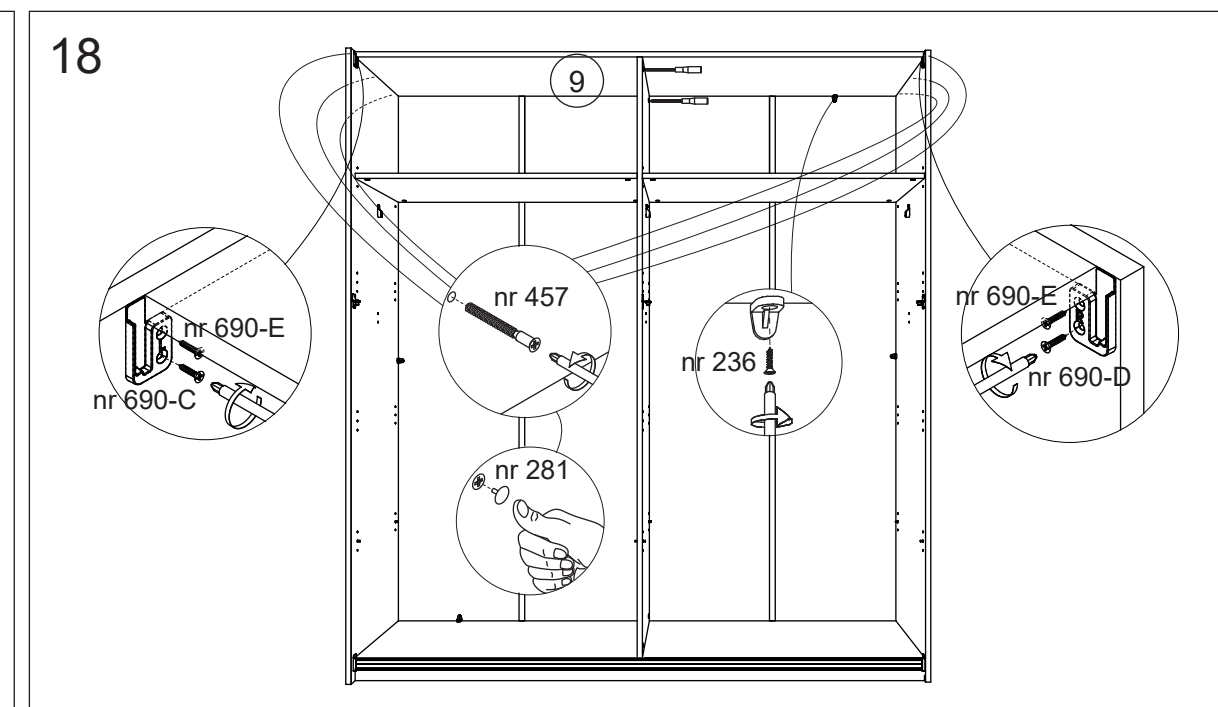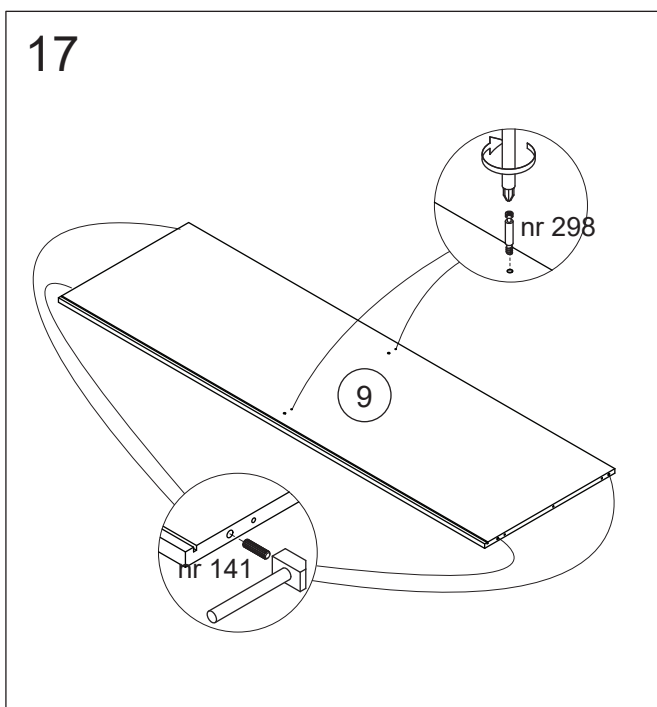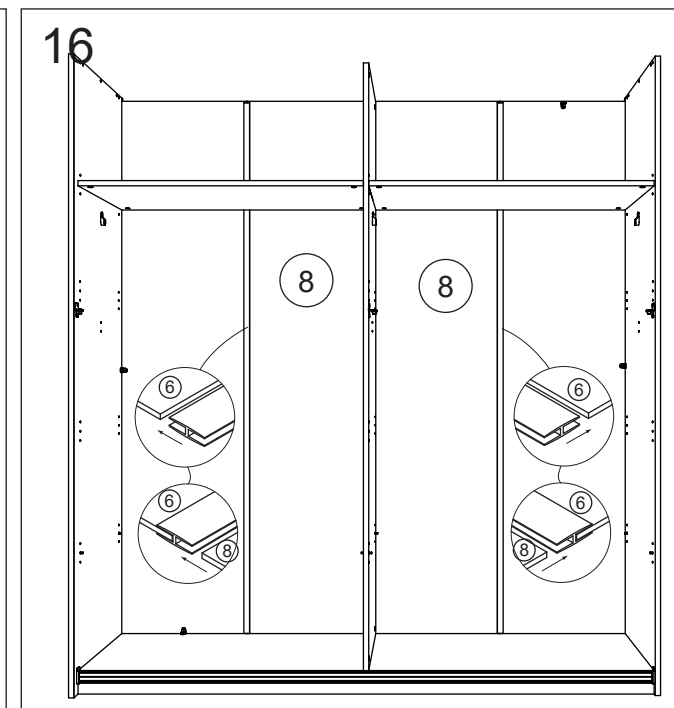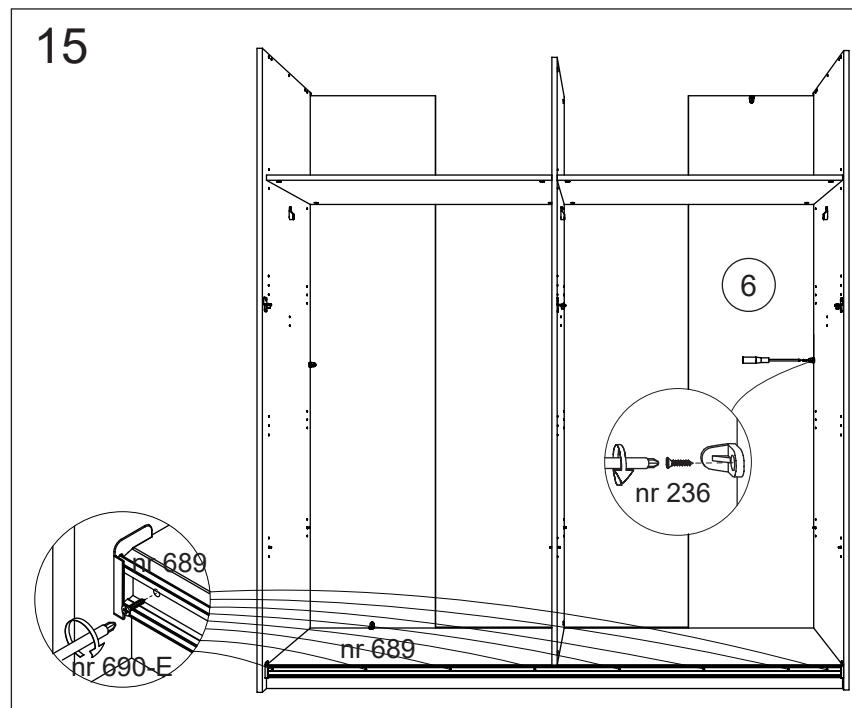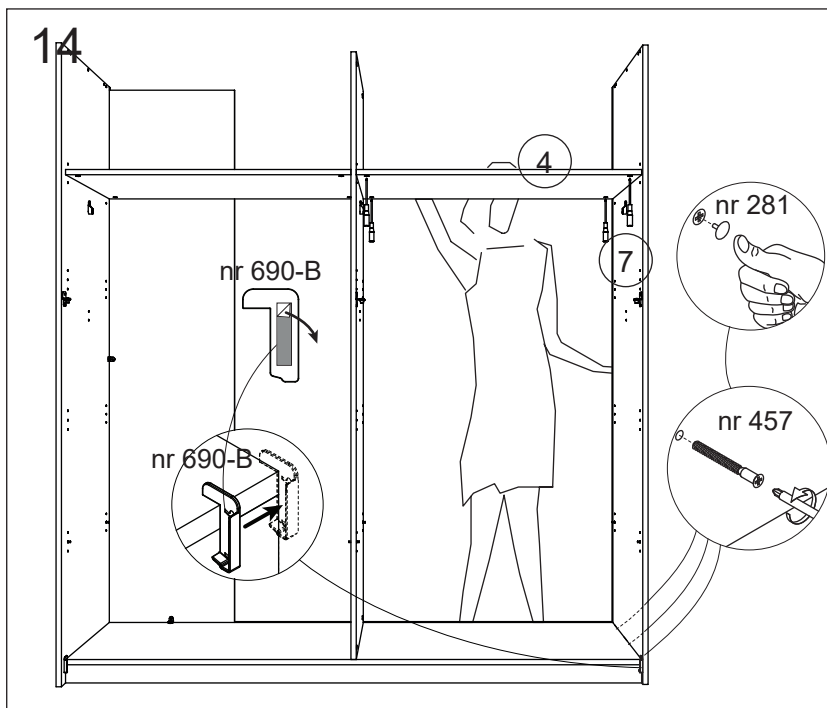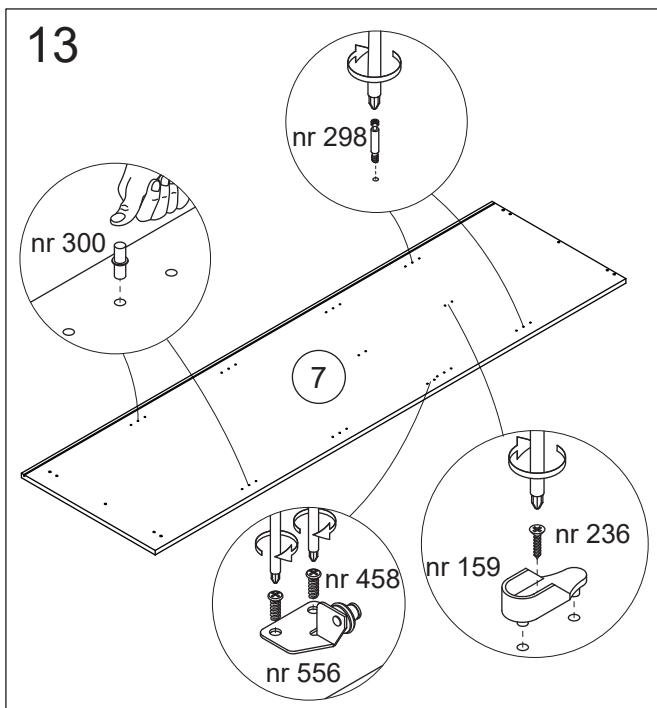

Voor de regeling van het sluiten van de deuren, moet u nu de kast goed waterpas zetten.


Pour le règlement de fermeture des portes, il faut mettre l'armoire de niveau maintenant.

To adjust the closing of the doors, you have to put the robe at level now.


Der Schrank soll jetzt waagrecht stehen, für die Reglung des Schliessens der Türe

22


x 2

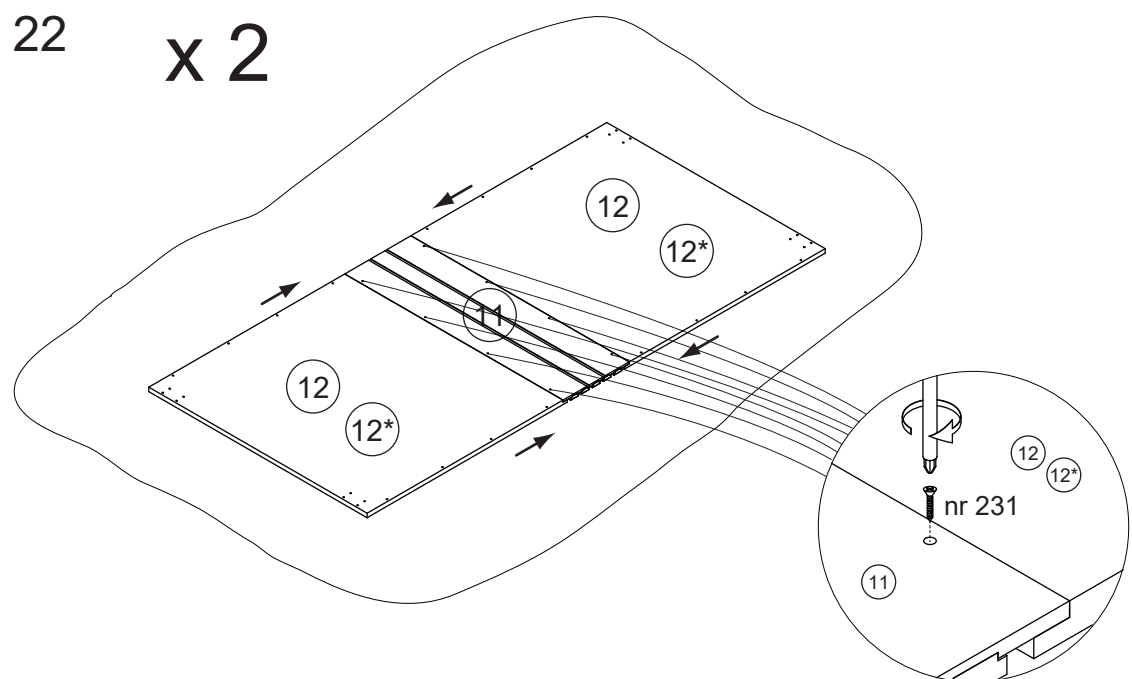


23

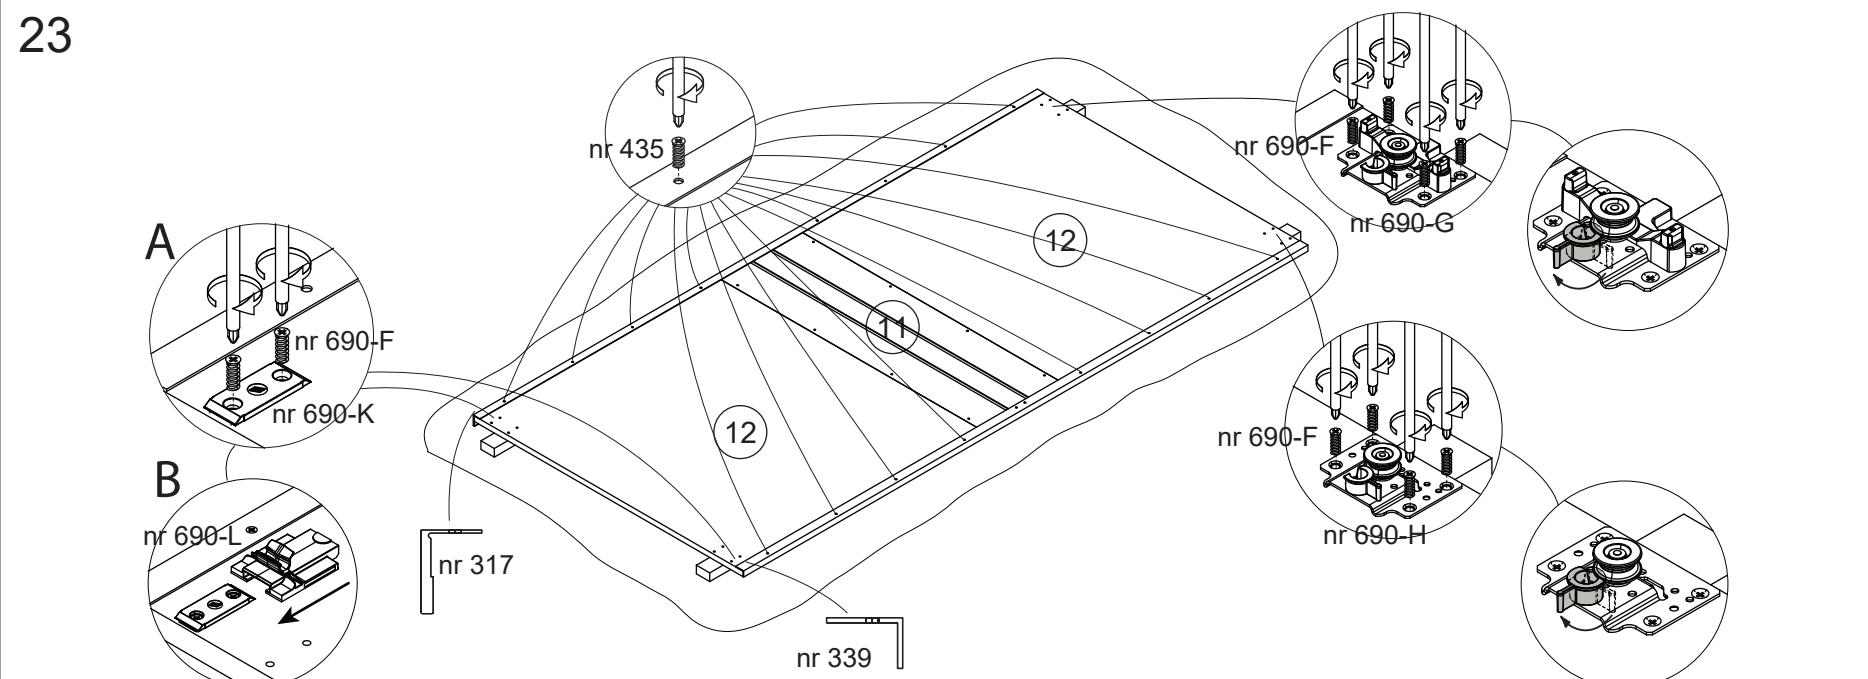


24

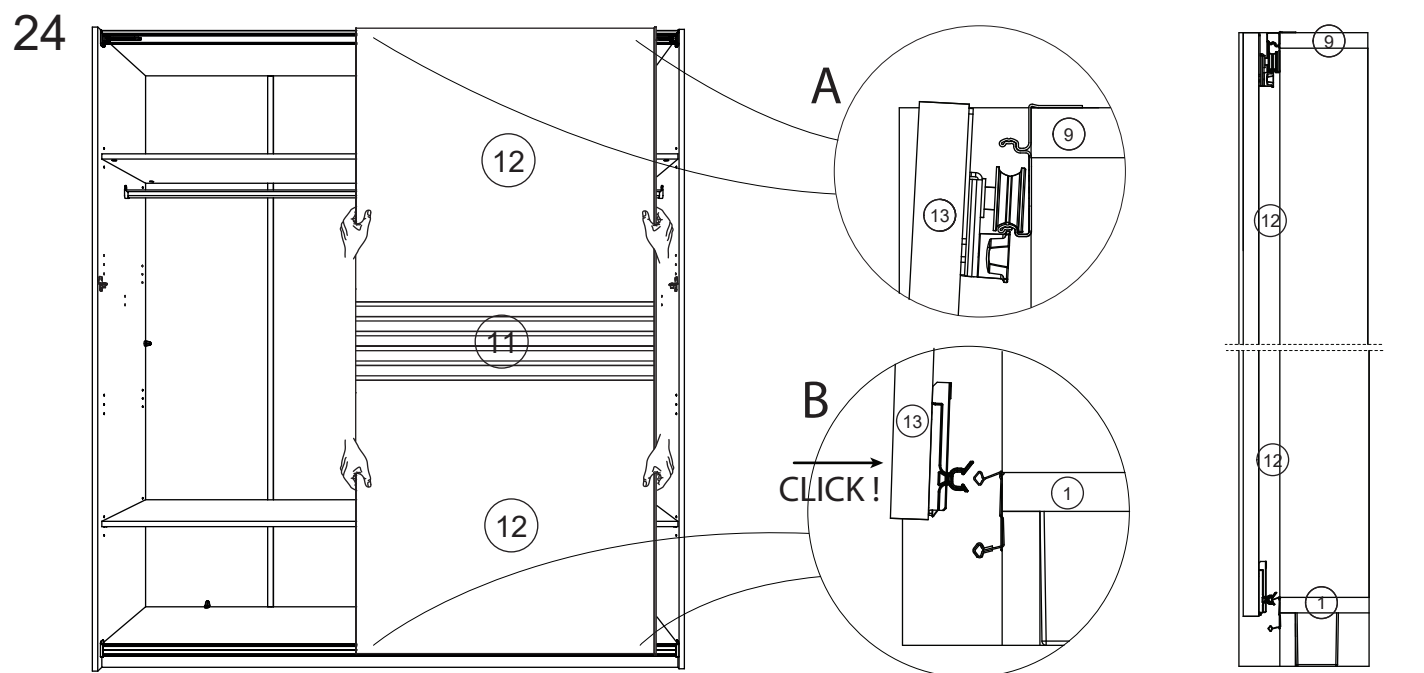

25

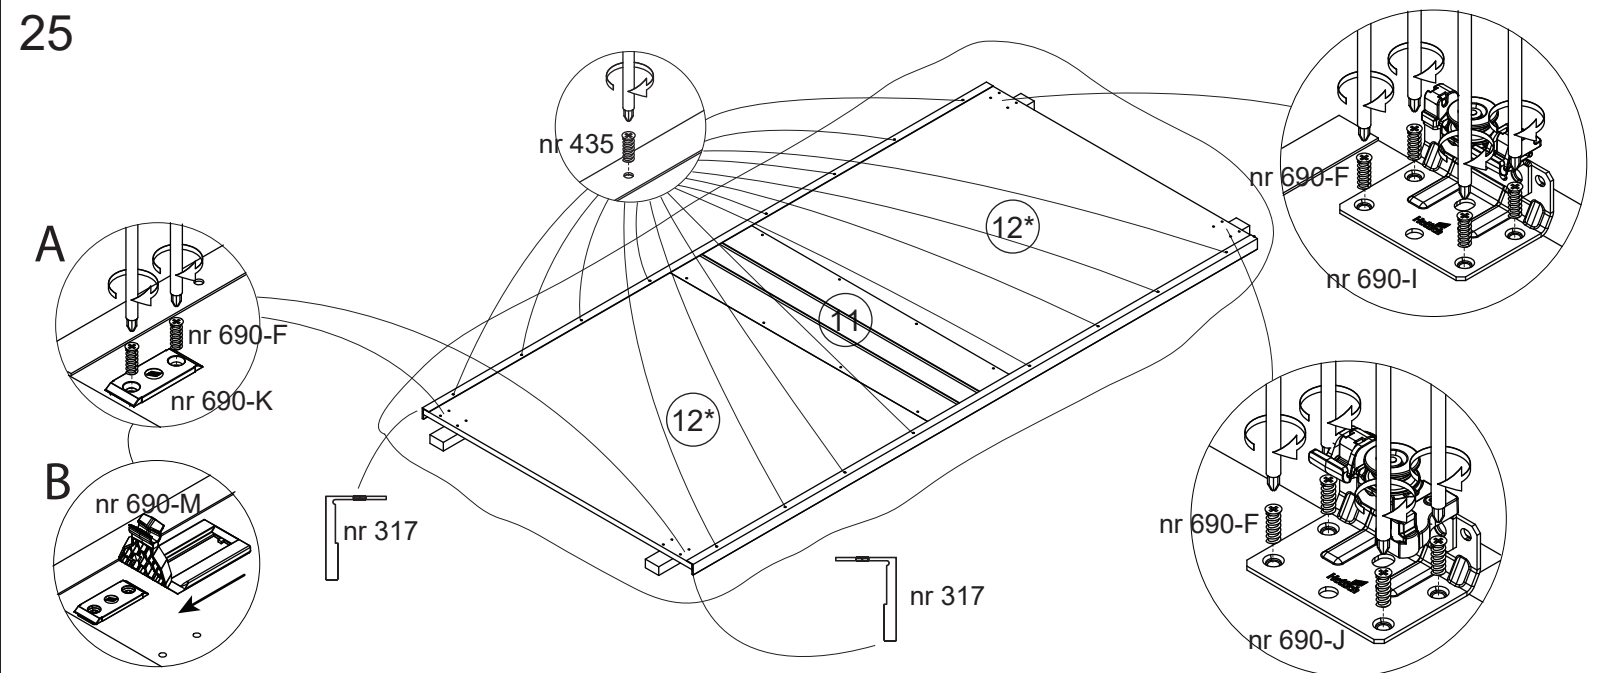

26

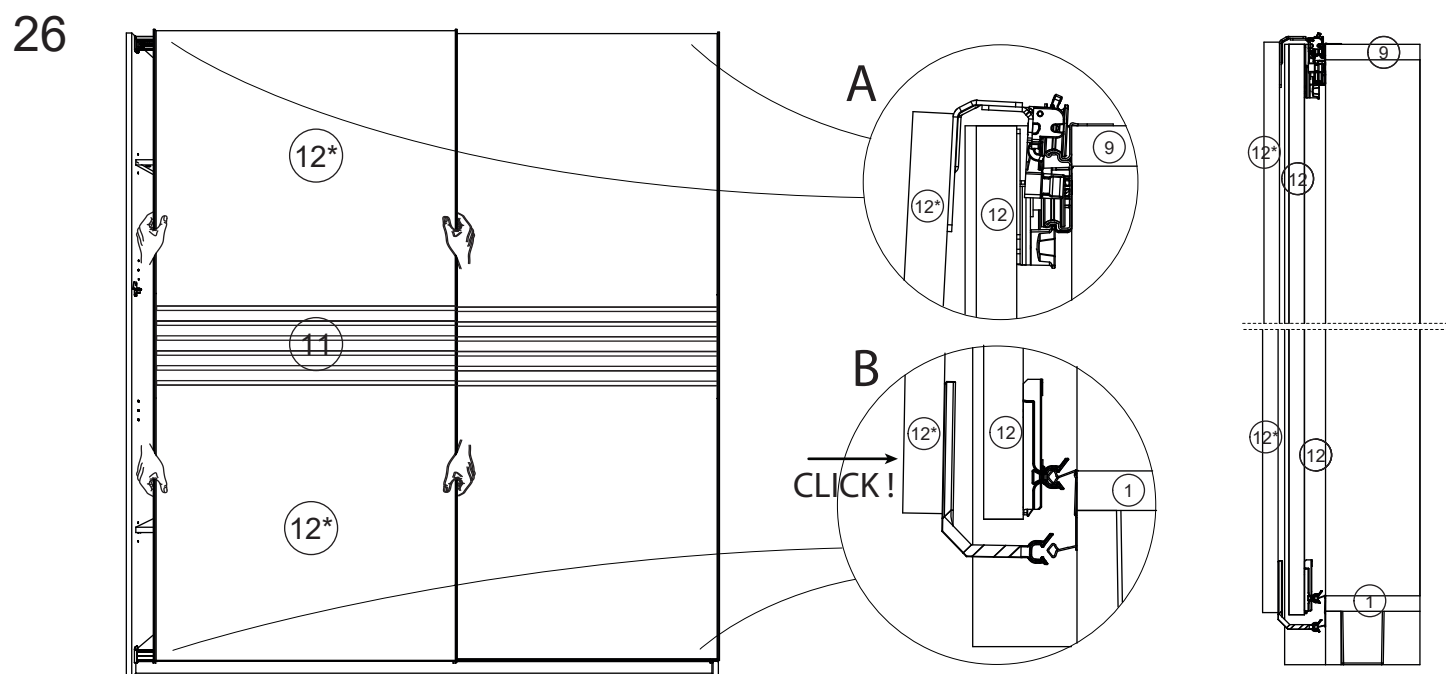

27

