



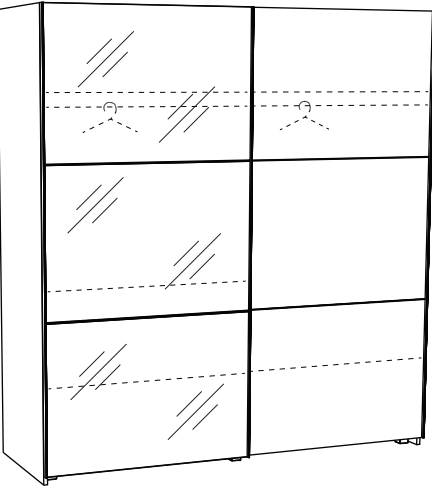




montage instructies
instructions de montage
assembly instructions
montage anleitung













HELGA








S20

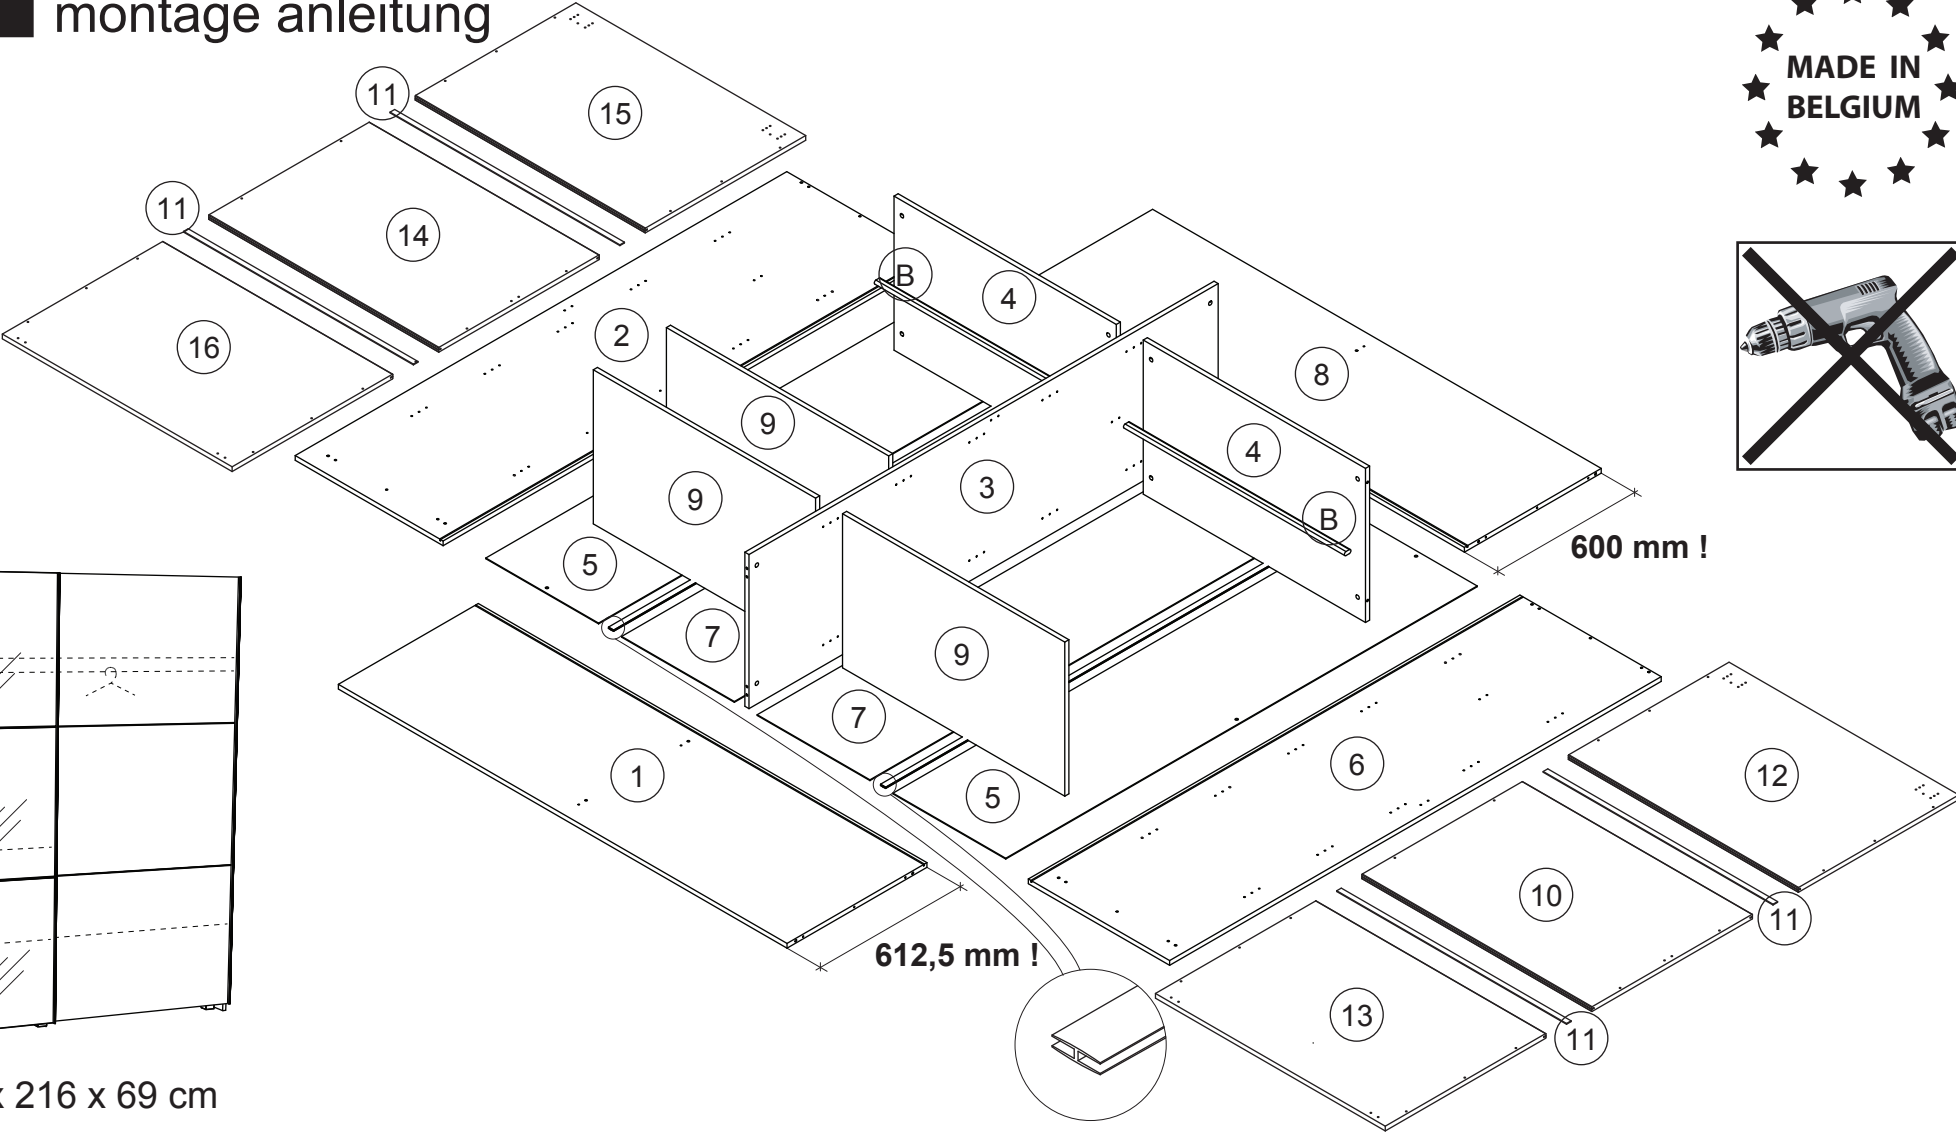

S20 200 x 216 x 69 cm

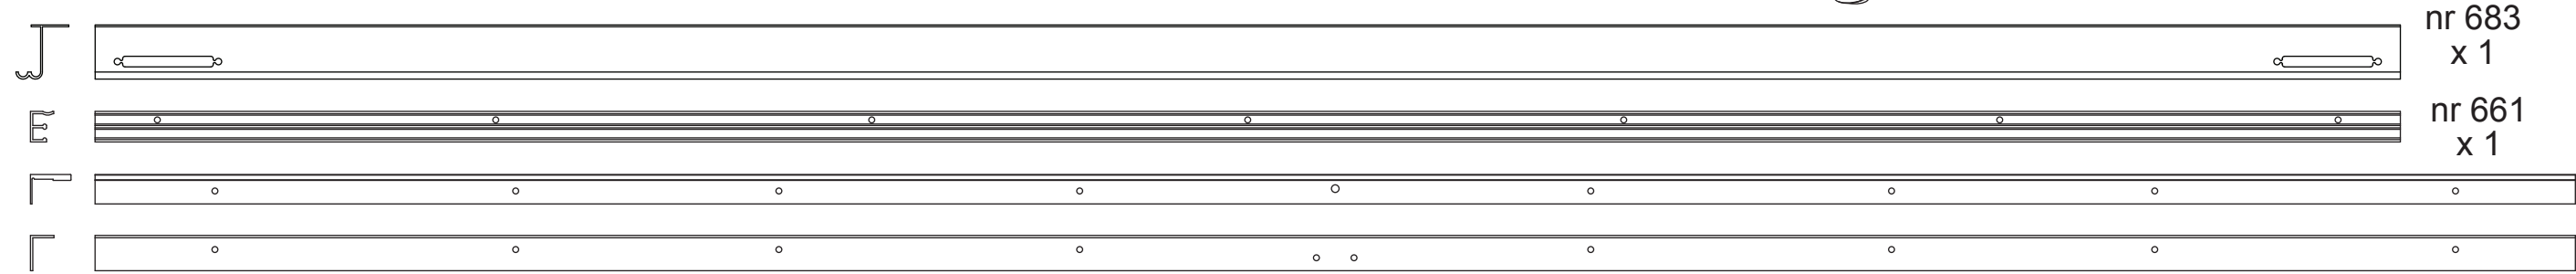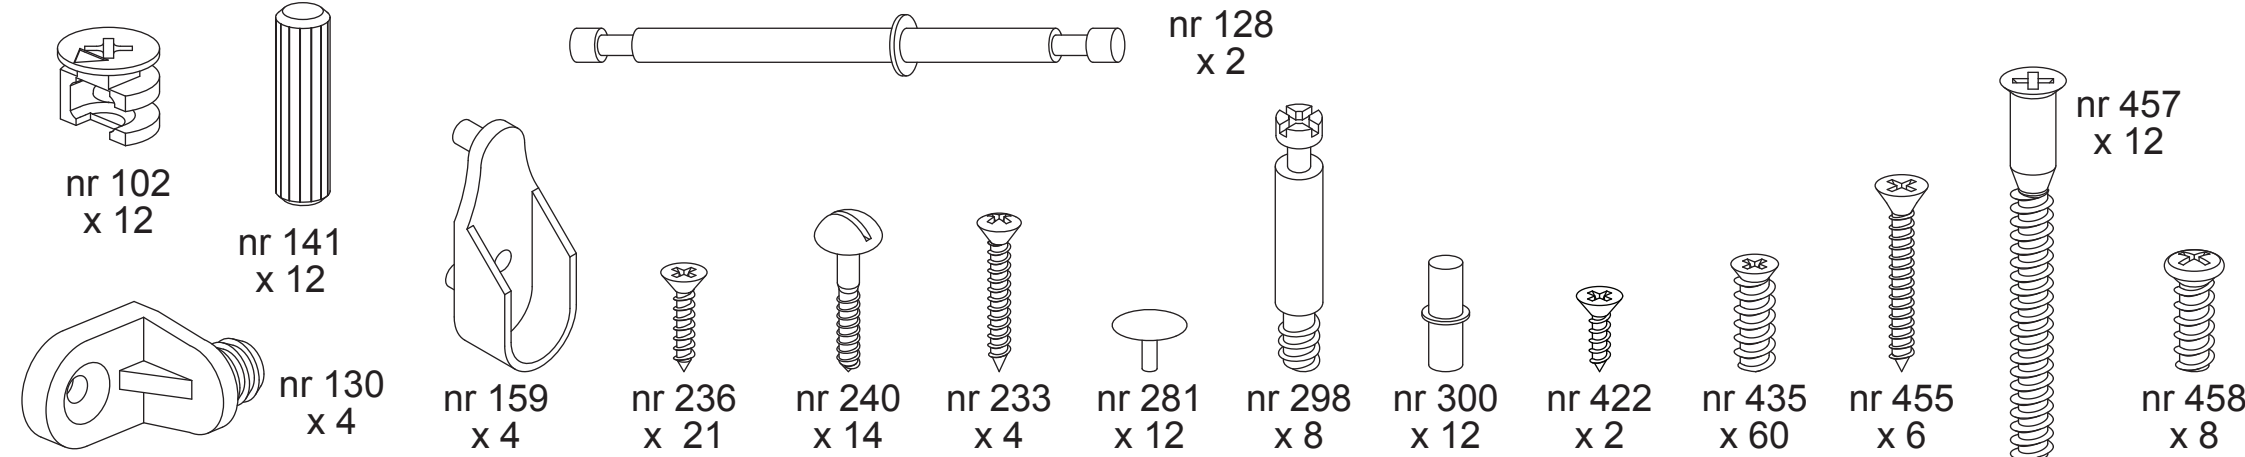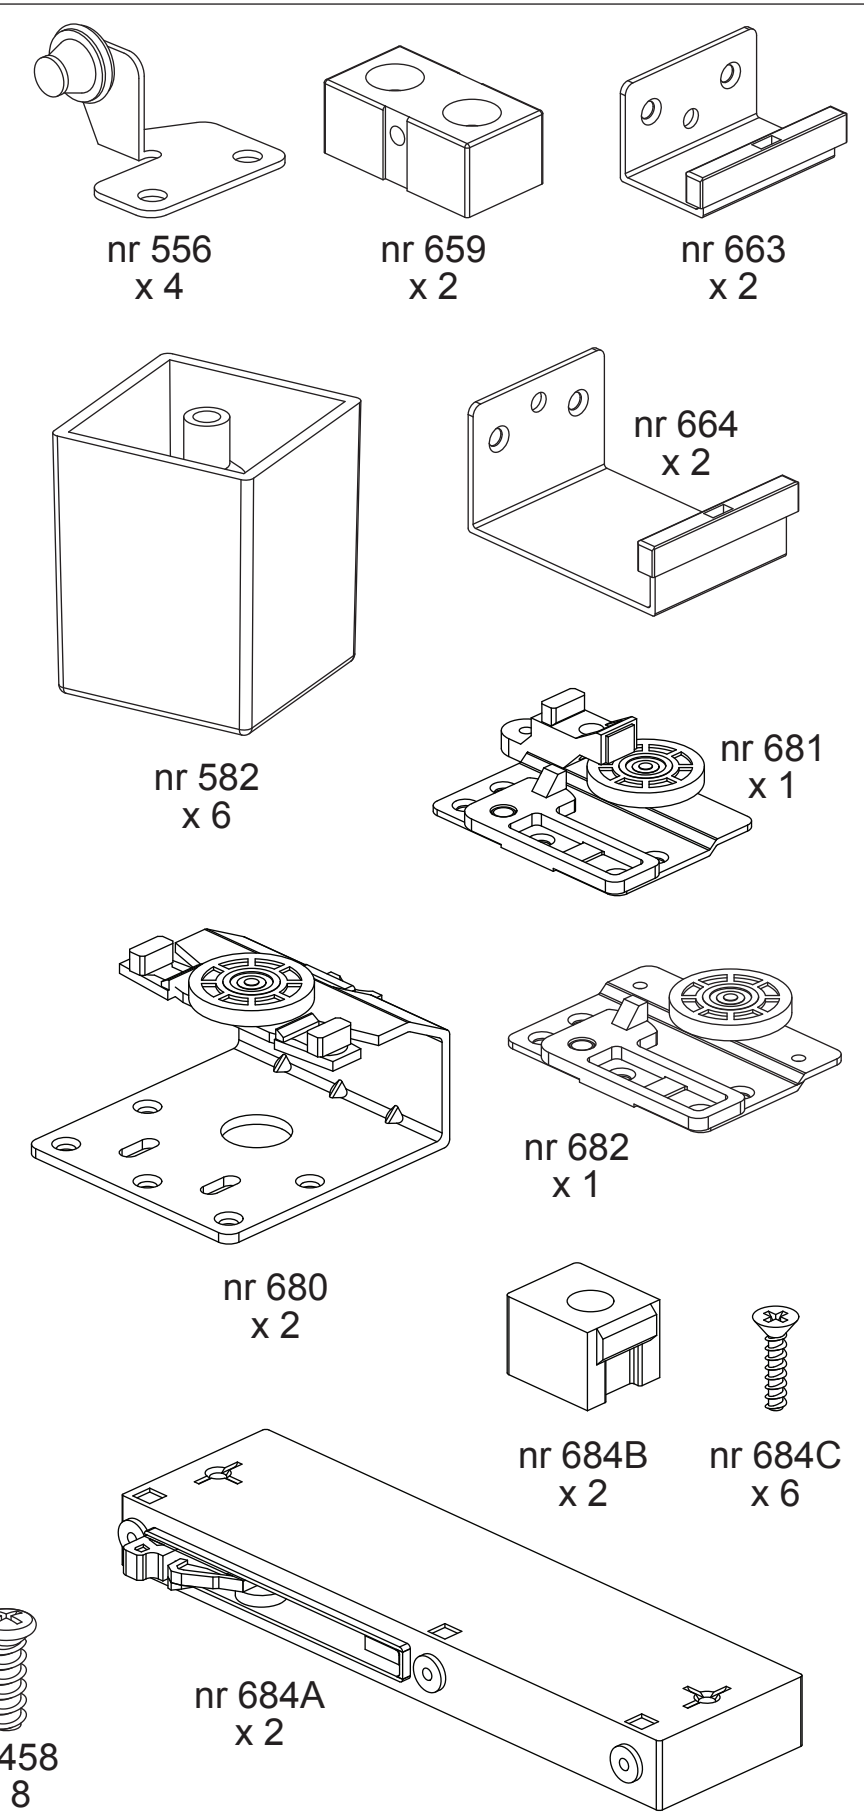

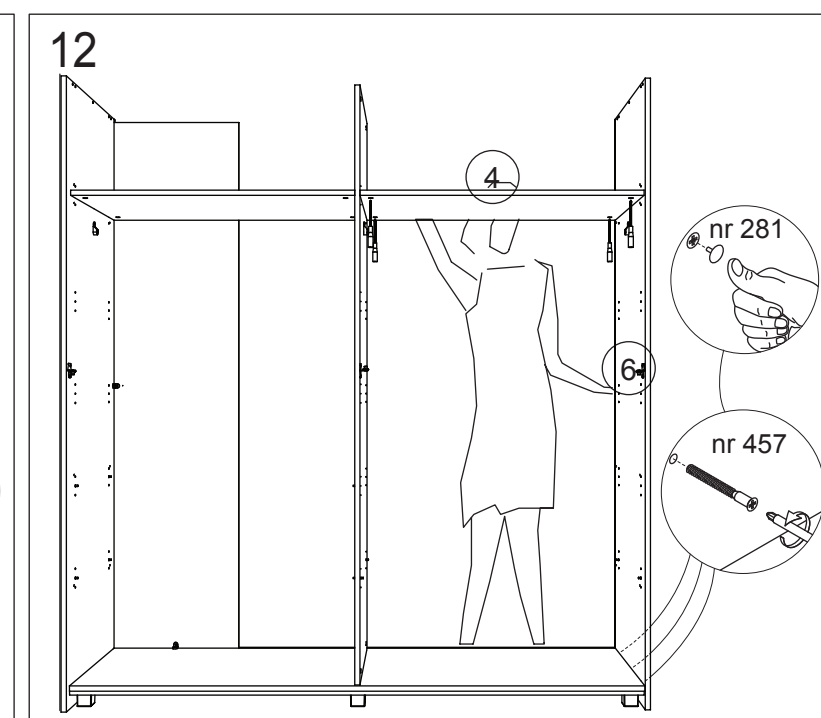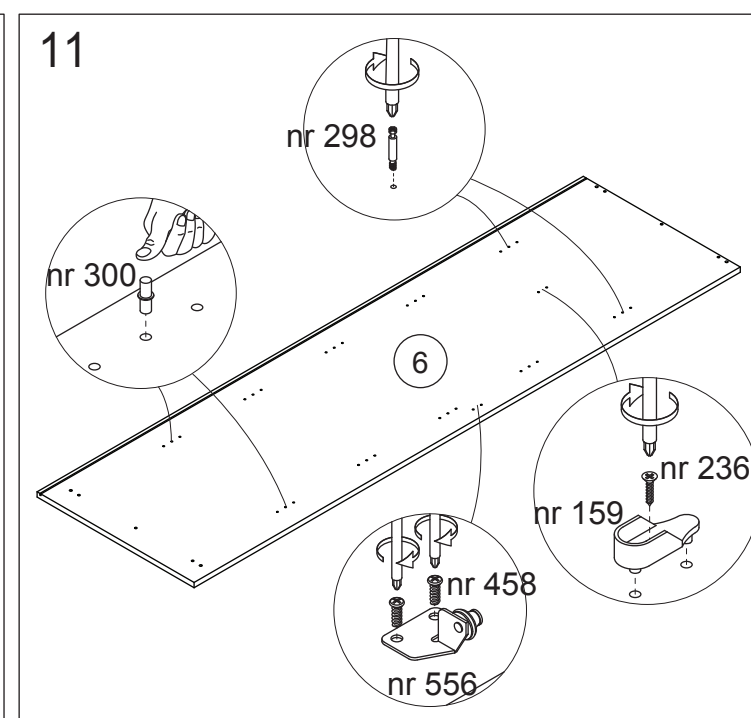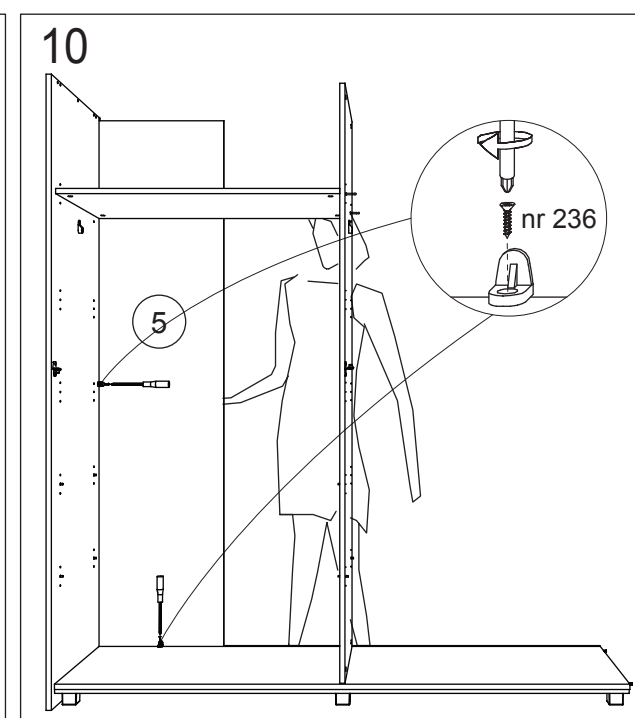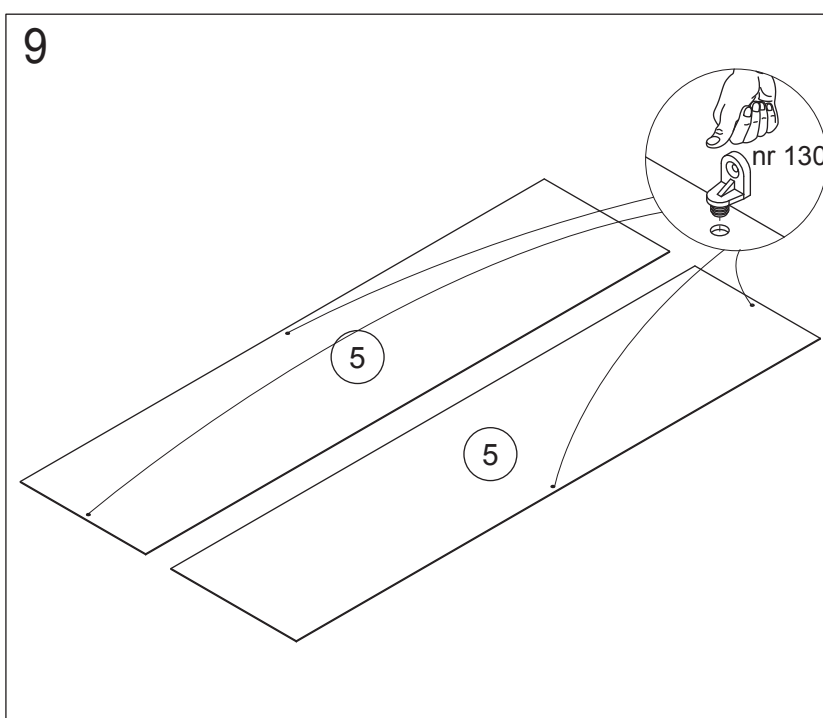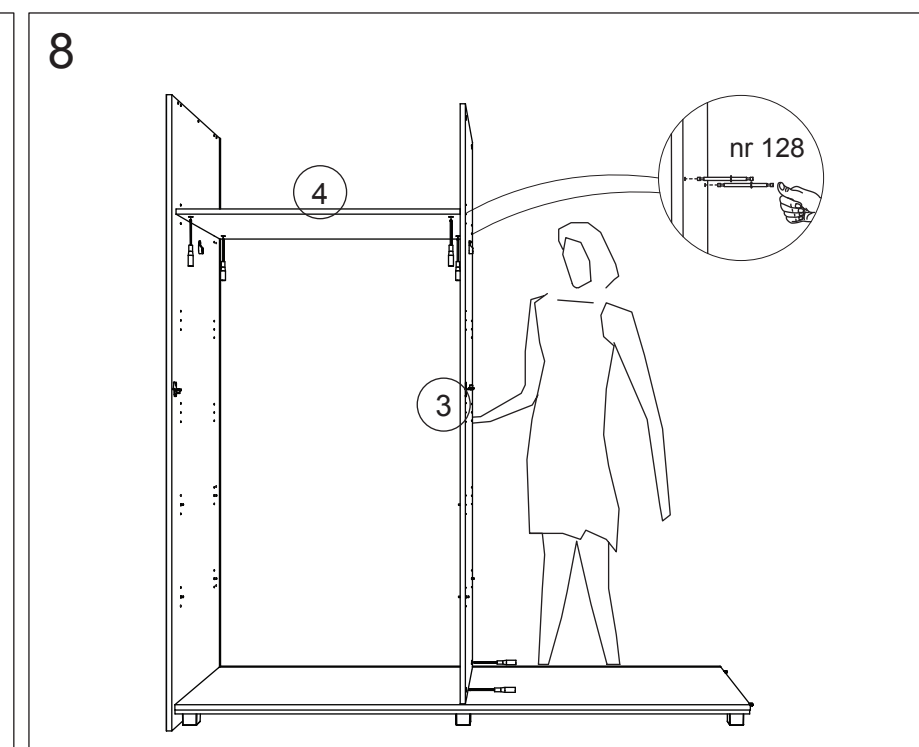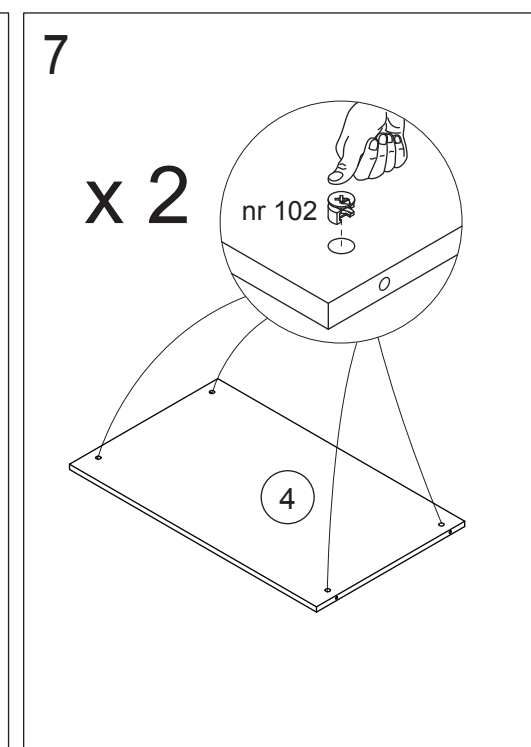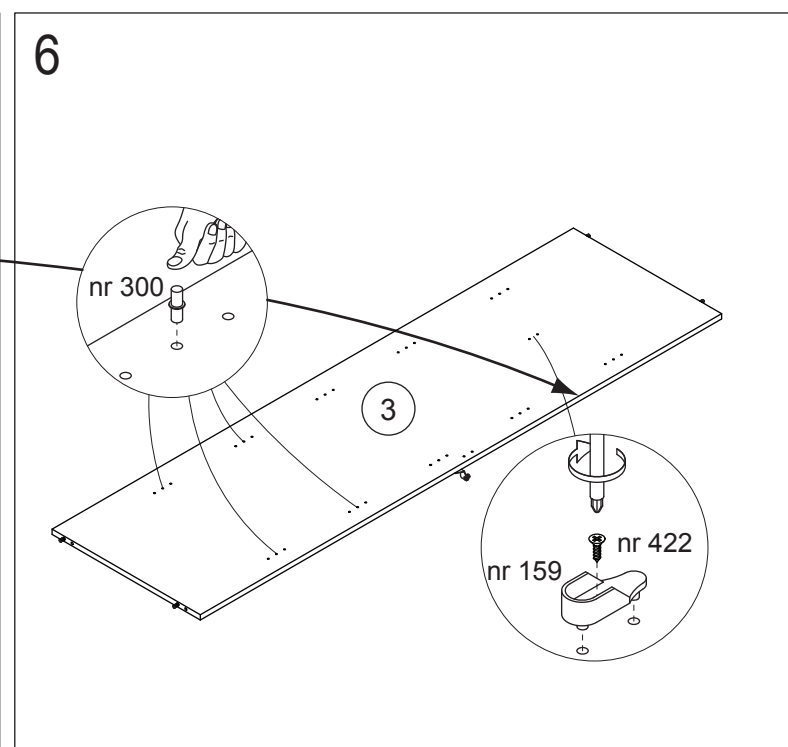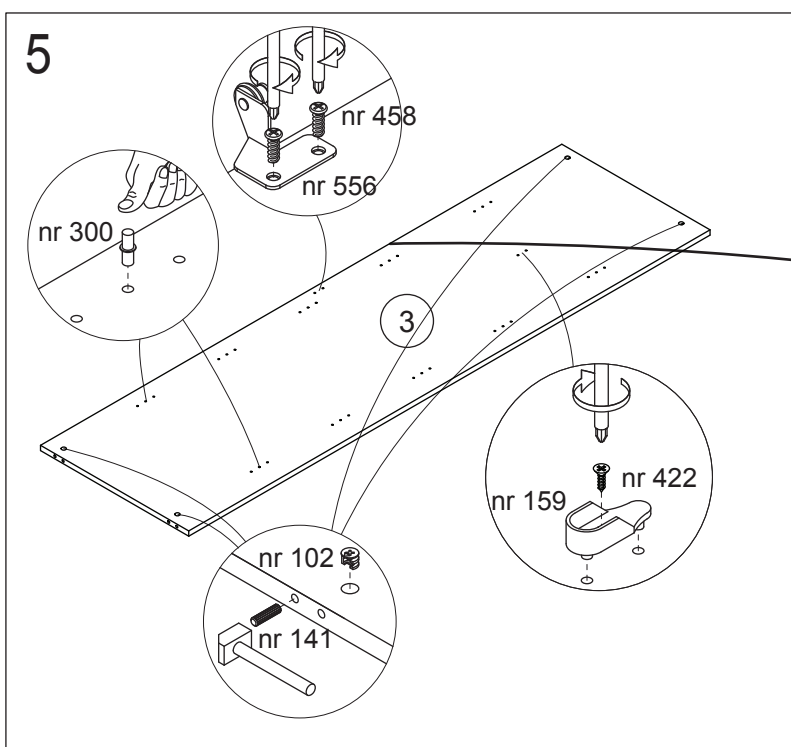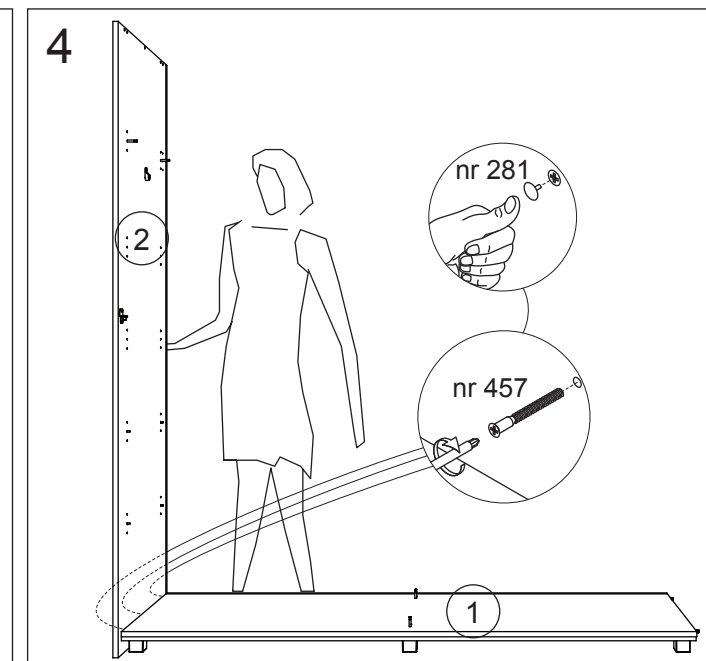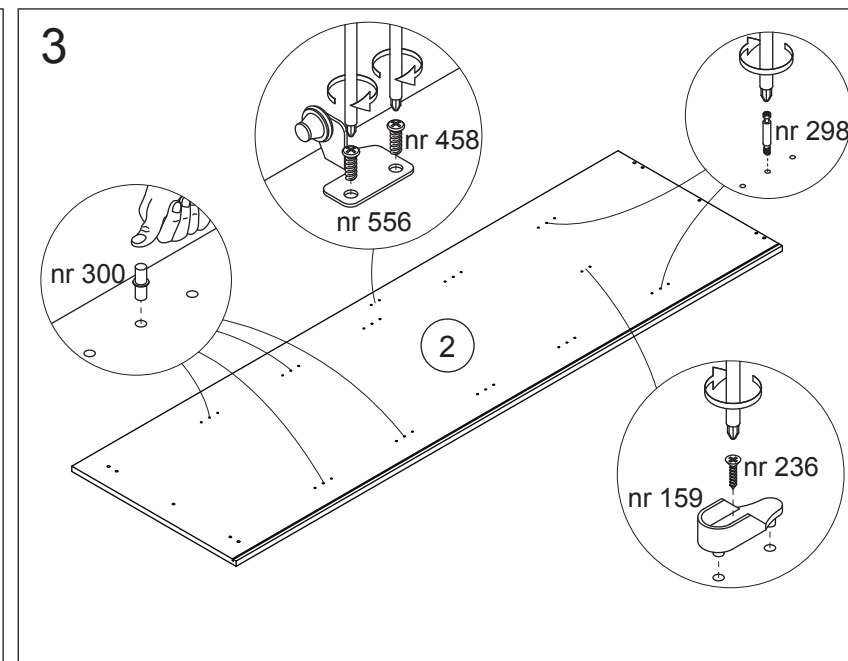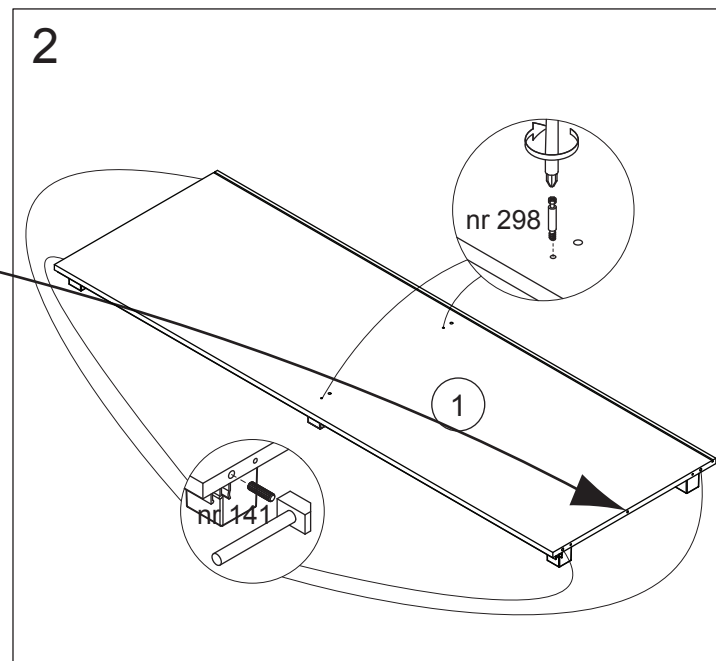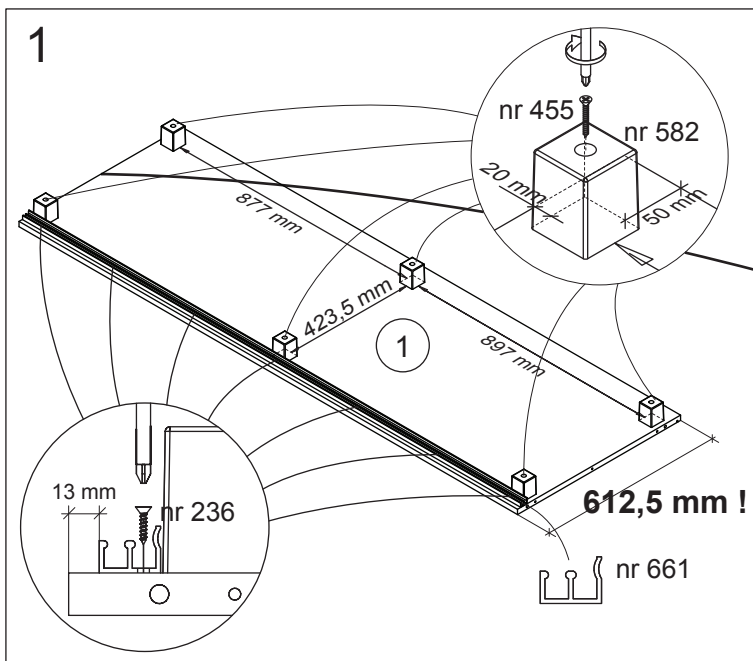

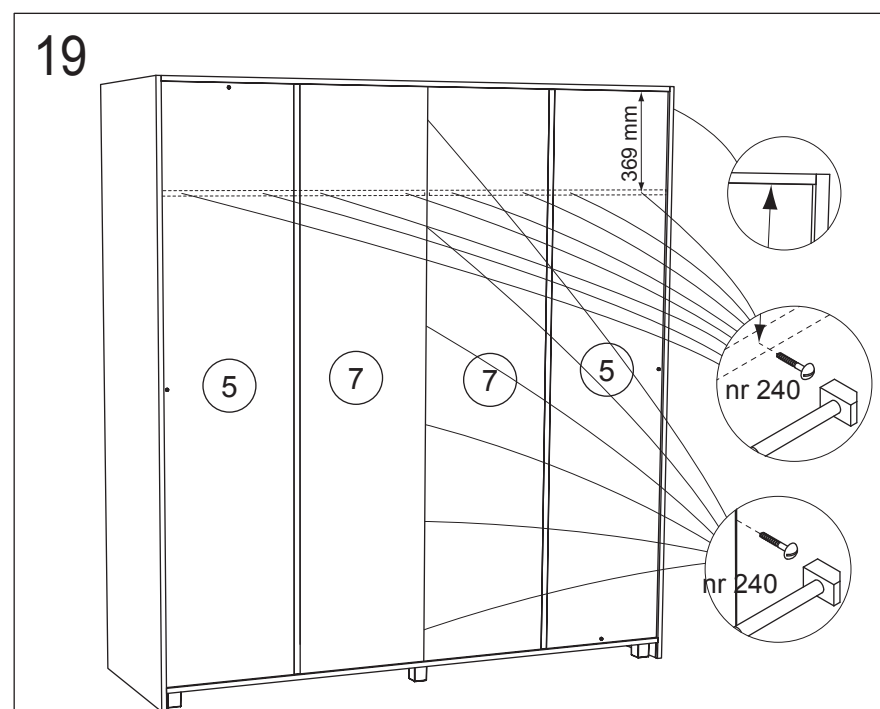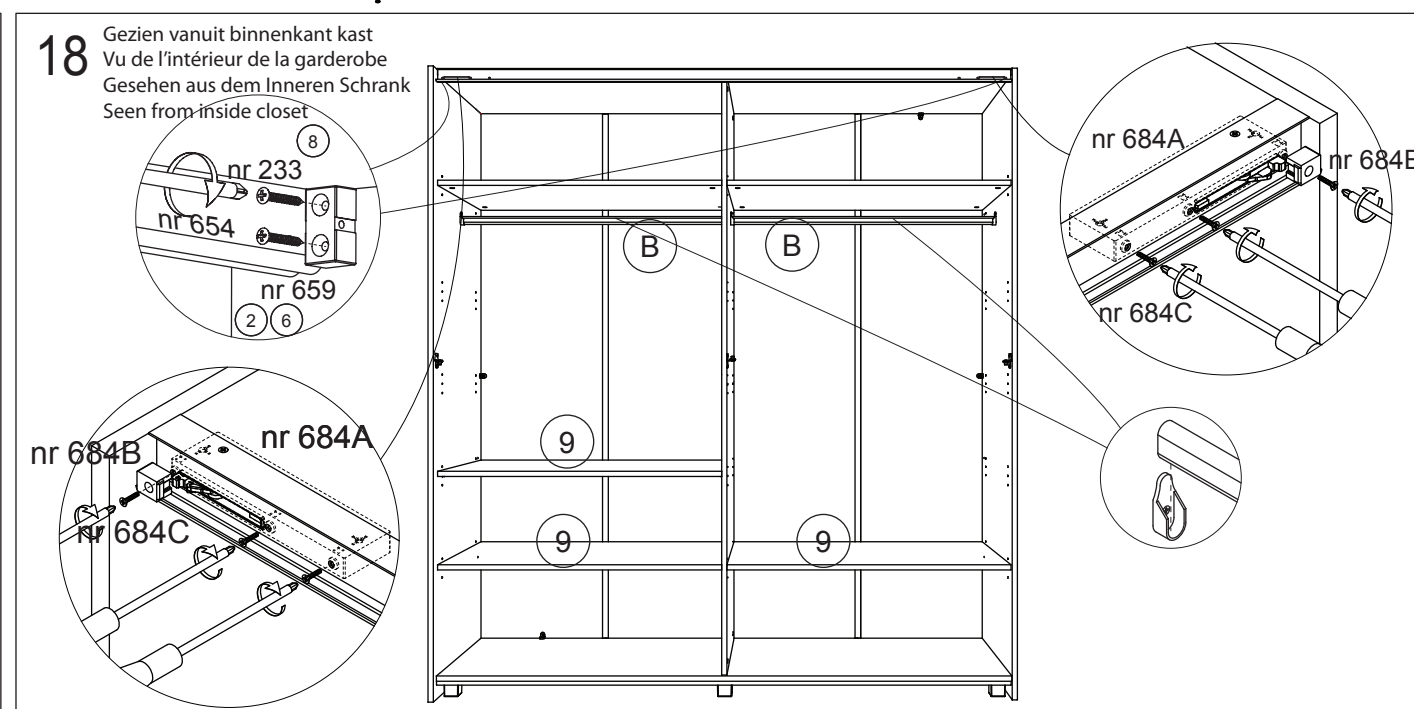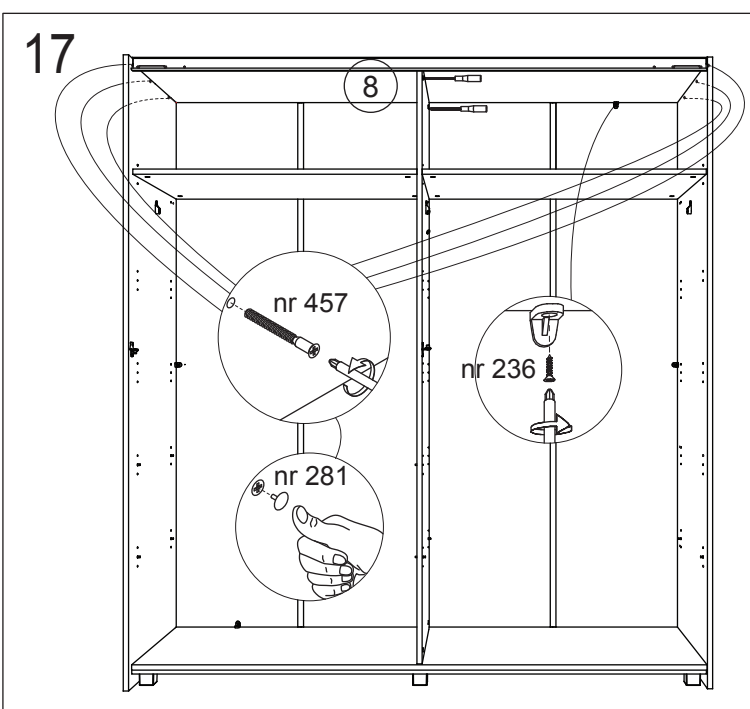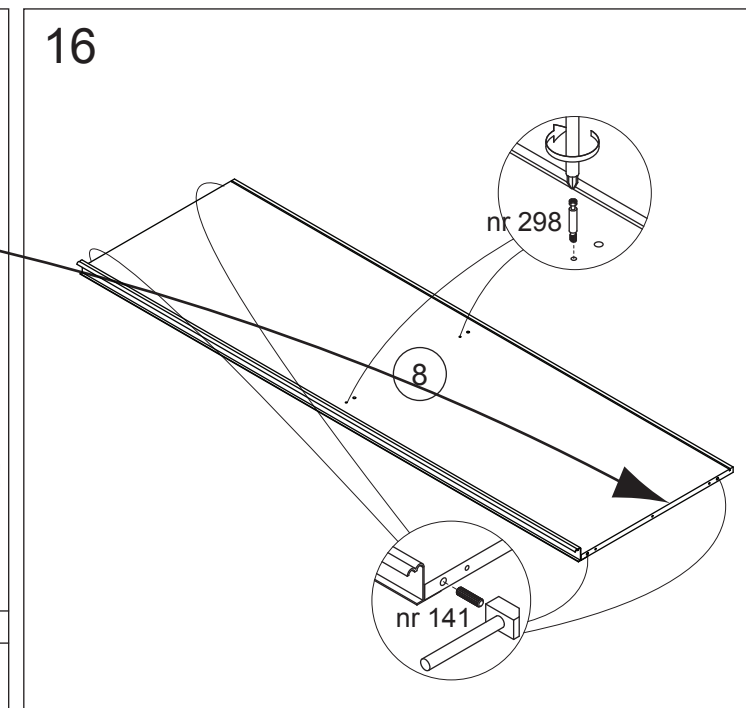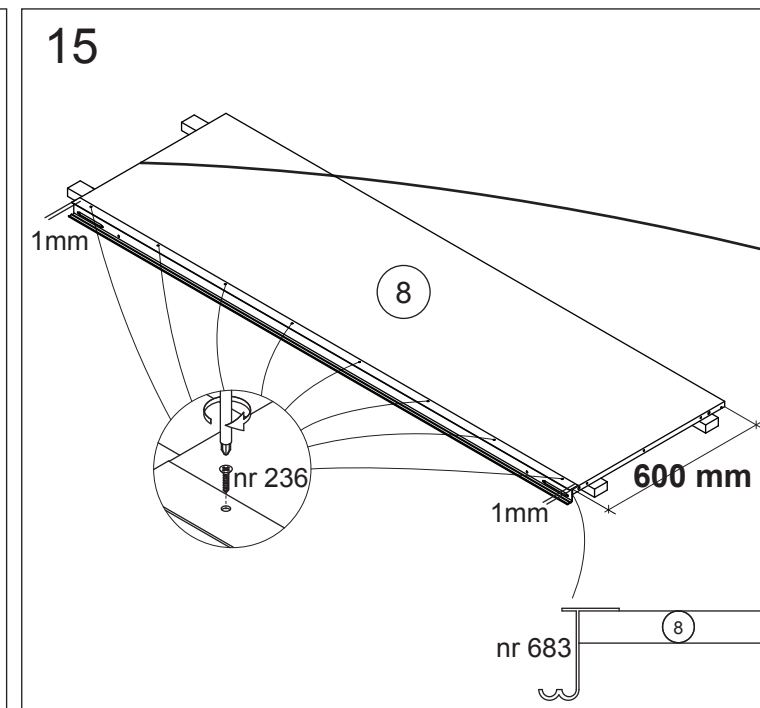
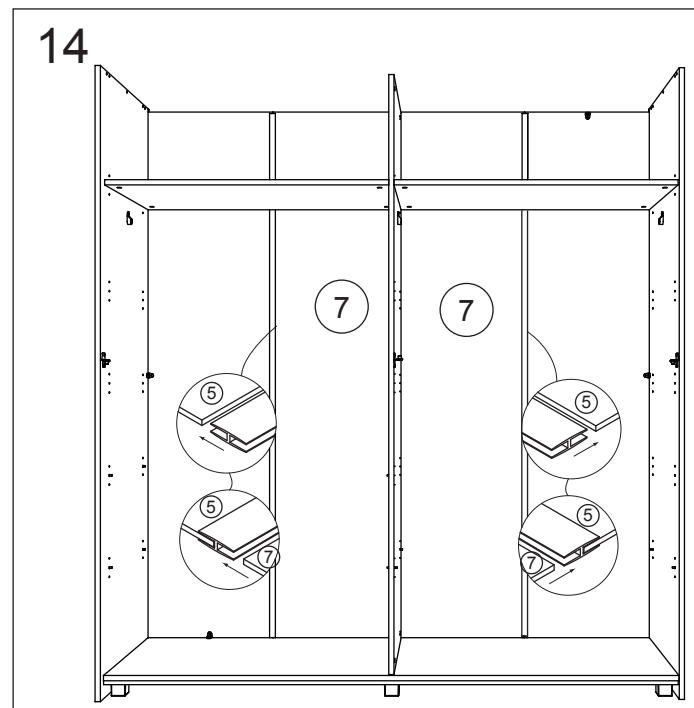
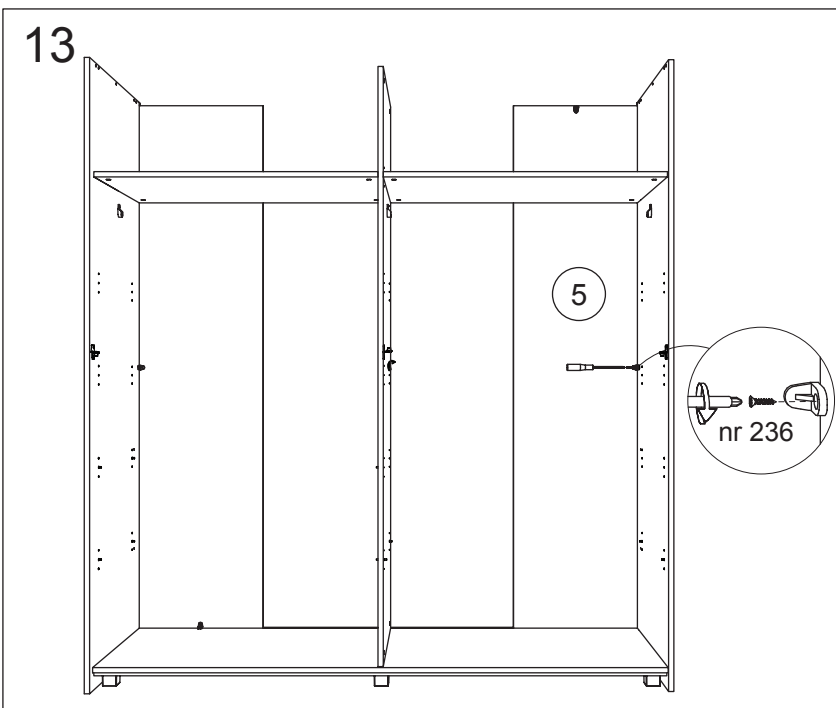


Voor de regeling van het sluiten van de deuren, moet u nu de kast goed waterpas zetten.


Pour le règlement de fermeture des portes, il faut mettre l'armoire de niveau maintenant.

To adjust the closing of the doors, you have to put the robe at level now.


Der Schrank soll jetzt waagrecht stehen, für die Regelung des Schliessens der Türe

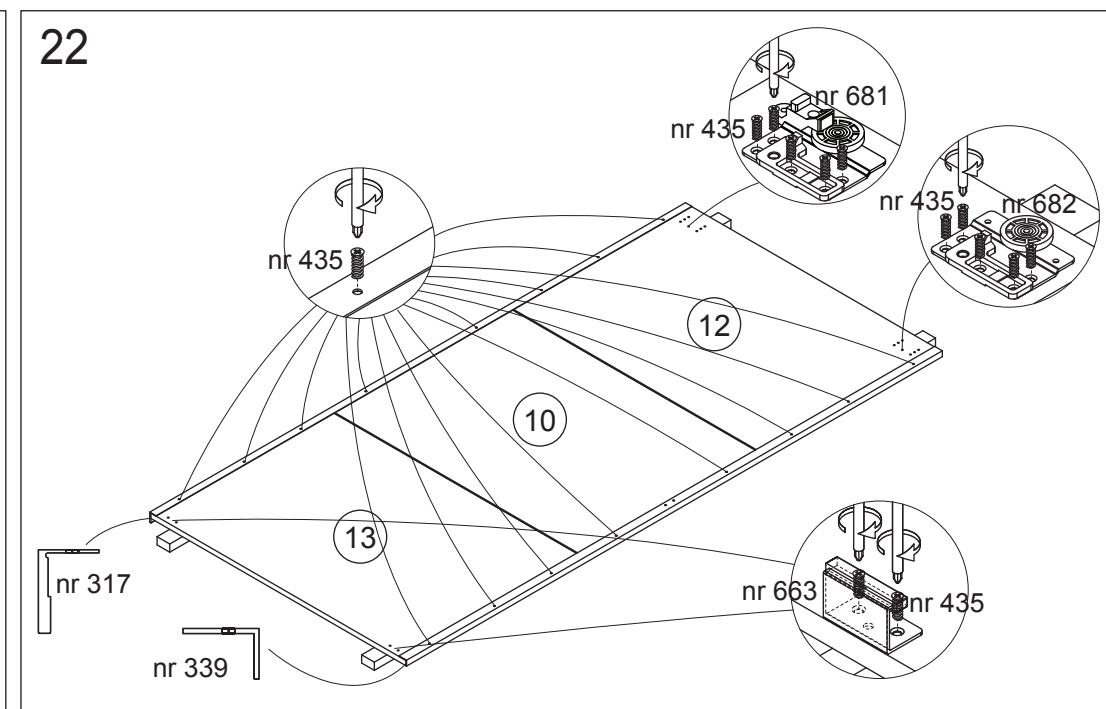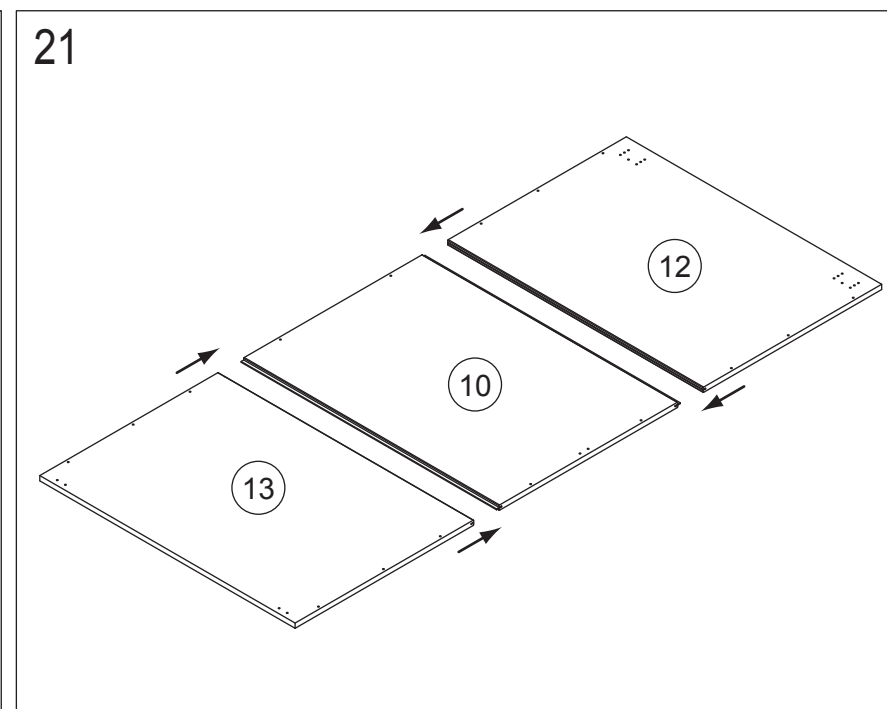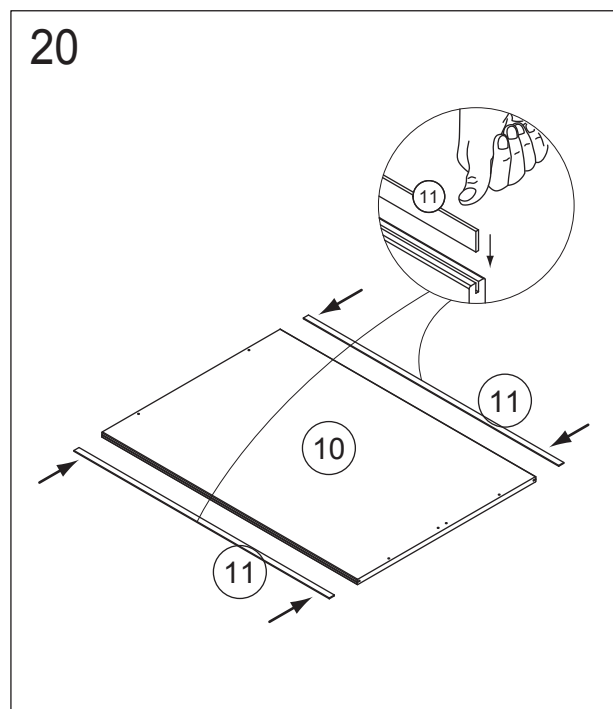


23

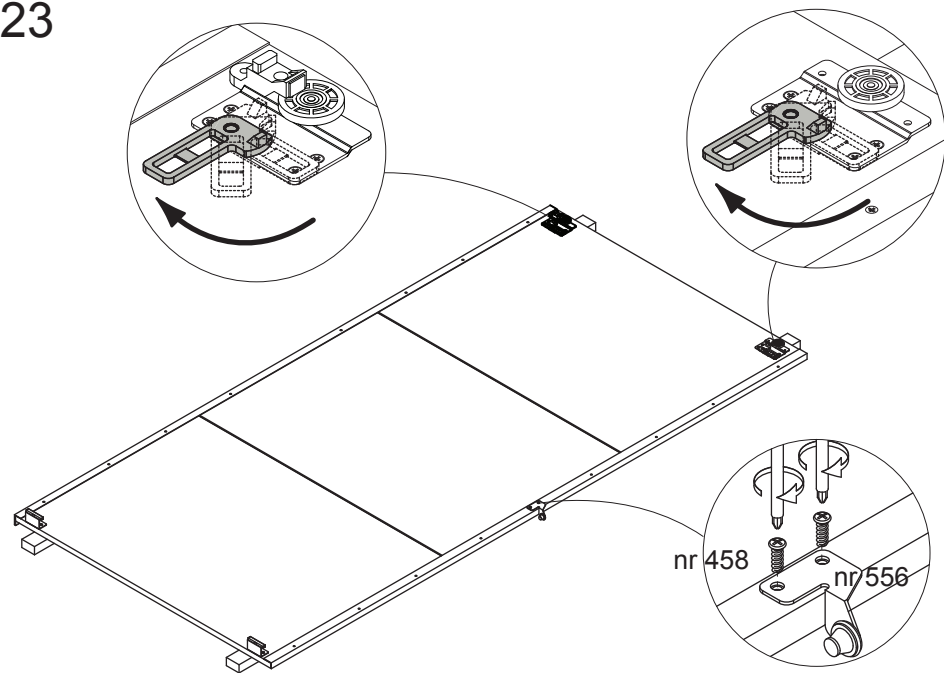


24

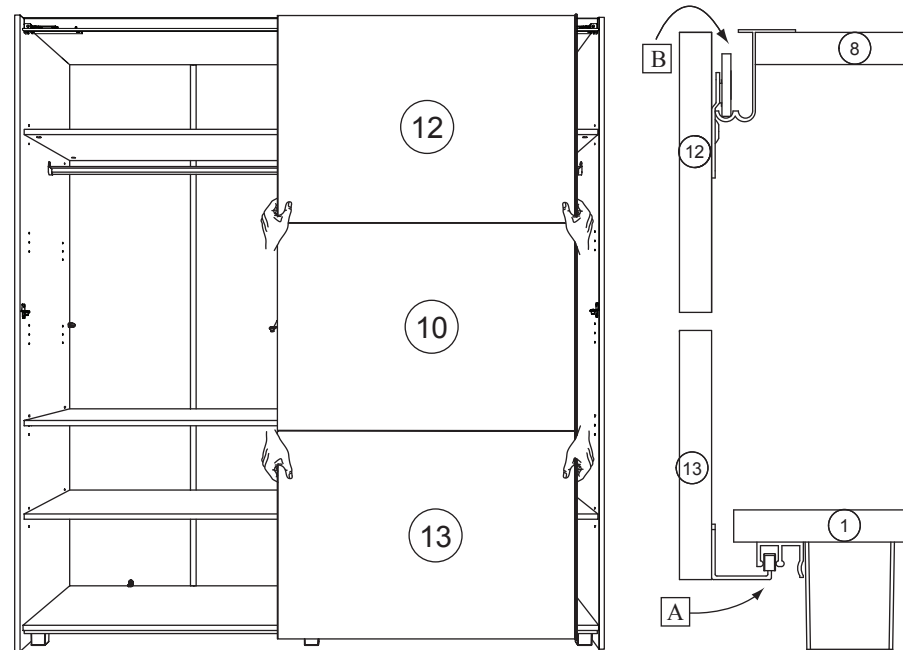


25

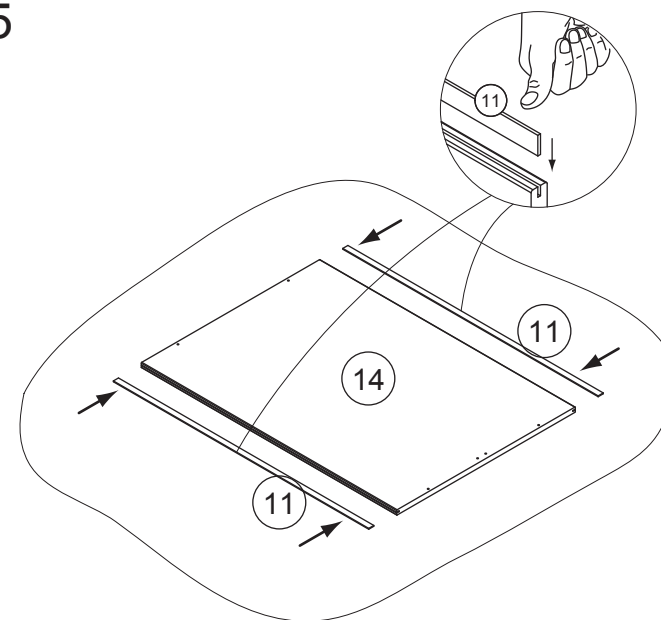


26

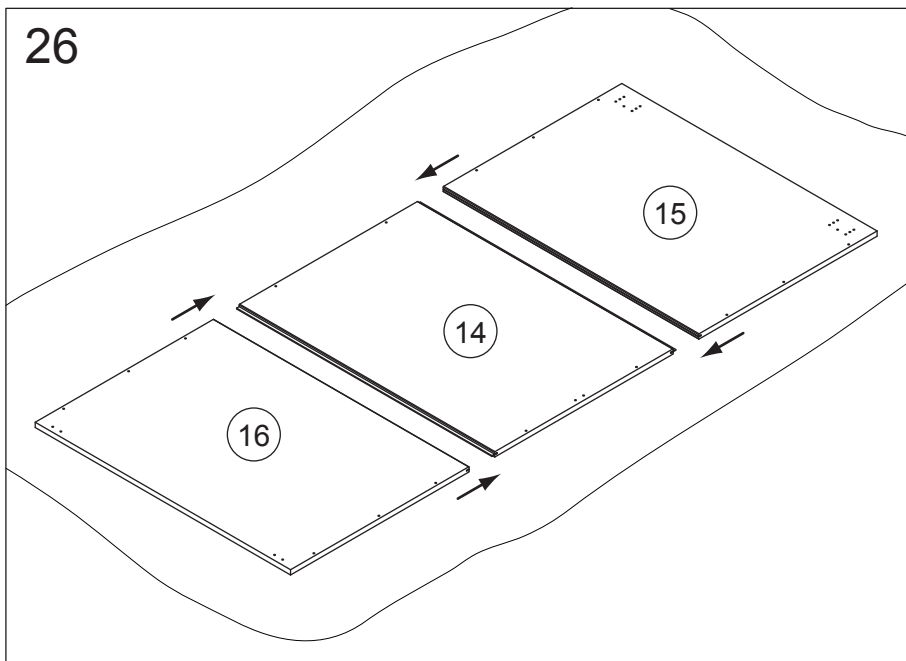

27

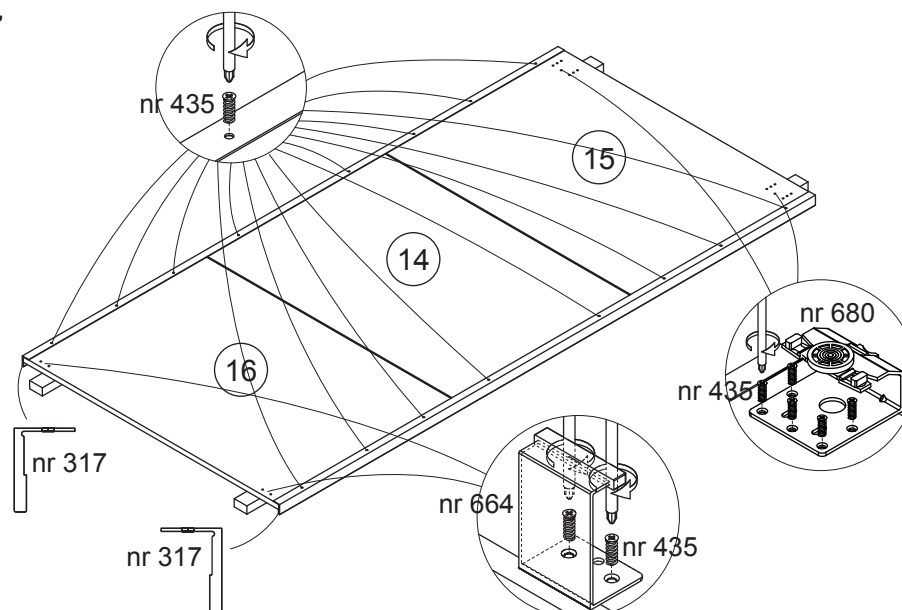

28

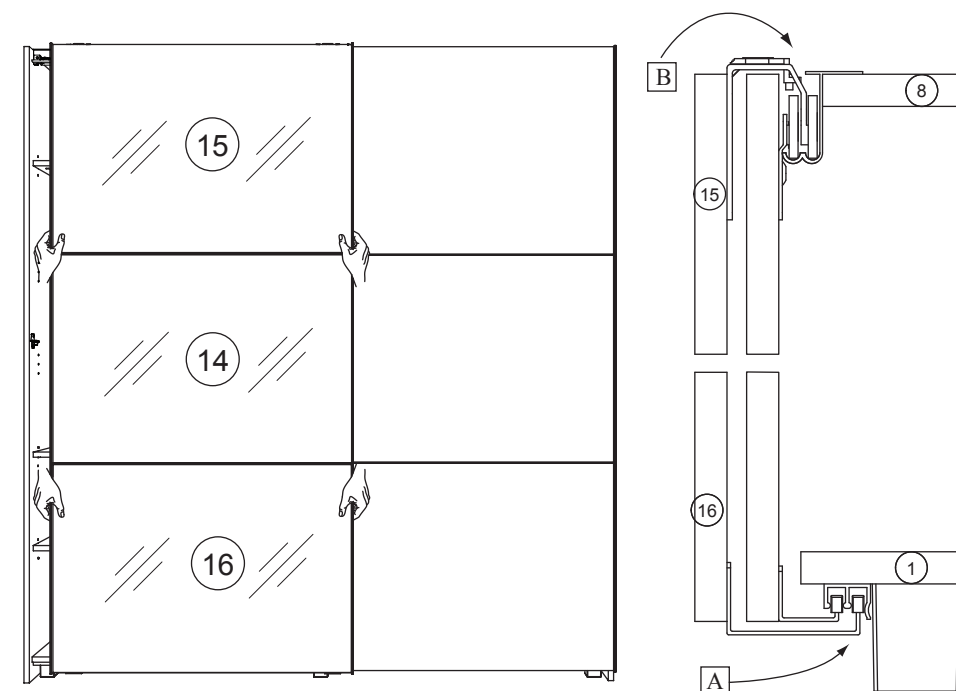

29

