


ASSEMBLY INSTRUCTION

BC 70085-S5V - ELODIE BAR

- ~ Before assembly, please read the instructions ~
- ~ Keep these instructions for future reference ~
- ~ Follow these steps to assemble the product ~

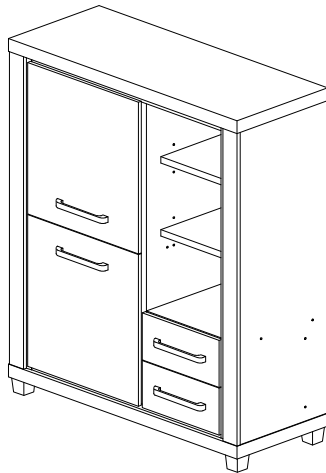

SOFT, DRY CLOTH

CHEMICAL

HEAT

KEEP DRY

HANDLE WITH CARE

DO NOT USE KNIFE

PLASTIC DOWEL
8X25
56pcs

CB SCREW
M3.5X12
24pcs

CB SCREW
M3.5X16
16pcs

CB SCREW
M4X30
8pcs

CB SCREW
M4X35
16pcs

CSK CAP
M6X40
12pcs

CSK CAP
M6X50
8pcs

CSK CAP
M6X90
6pcs

MINIFIX 5654
(HOUSING)
22pcs

MINIFIX 5654
(SCREW)
22 pcs

METAL
SHELF SUPPORT
16pcs

CAP
36pcs

DRAWER
SLIDE 16" (A)
2pcs

DRAWER
SLIDE 16" (B)
2pcs

HINGES 3/4"
4sets

HANDLE VSC18
(224MM) - SIL
GREY
4pcs

P/H SCREW
M4X20
4pcs

P/H SCREW
M4X36
4pcs

POWER NAIL 3/4"
89pcs


ALLEN KEY
1pc

SOFA LEG
(H70mm)
-GREY
5pcs


CB SCREW
M4.5X45
10pcs

HARDWARE

PART LIST

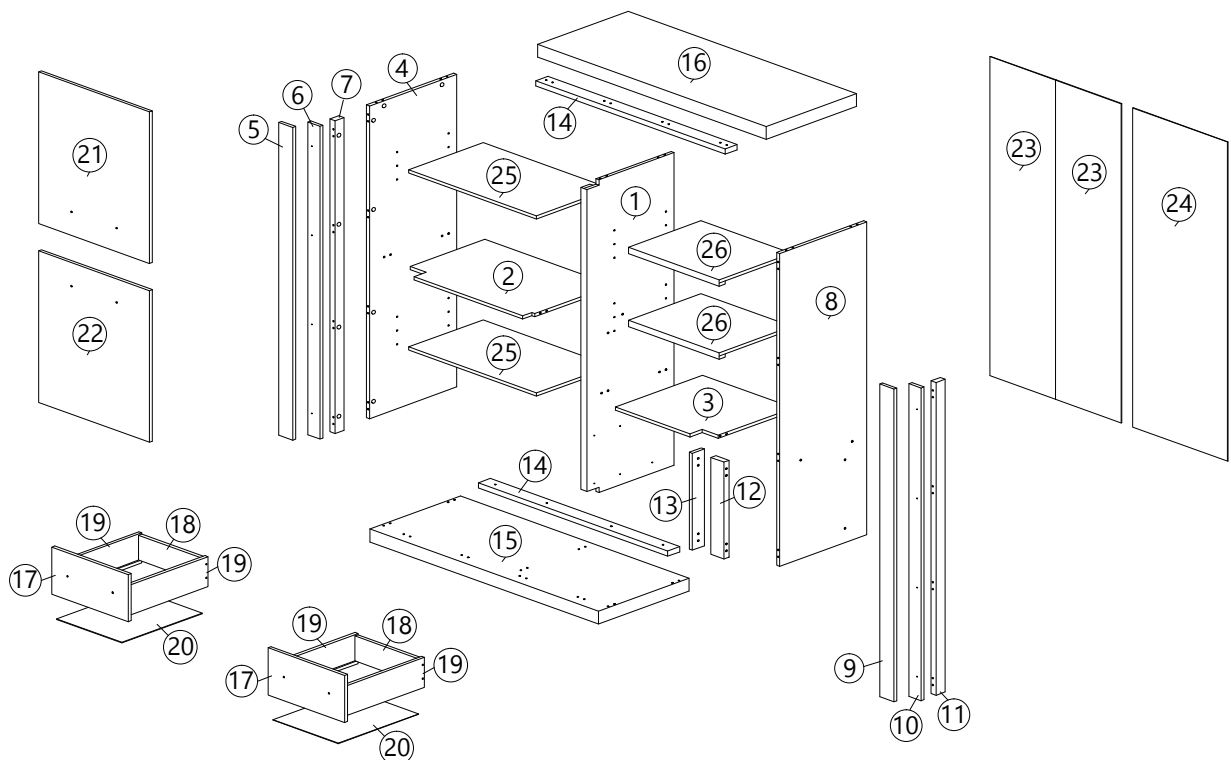


Step 1

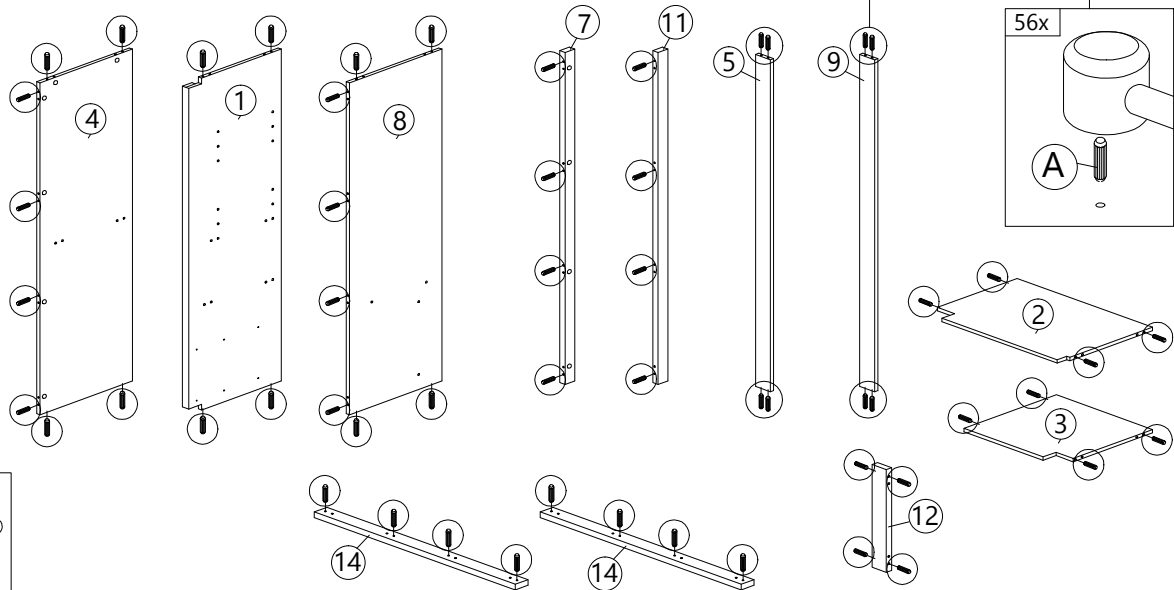


A
PLASTIC DOWEL
9X25
56 pcs

Step 2

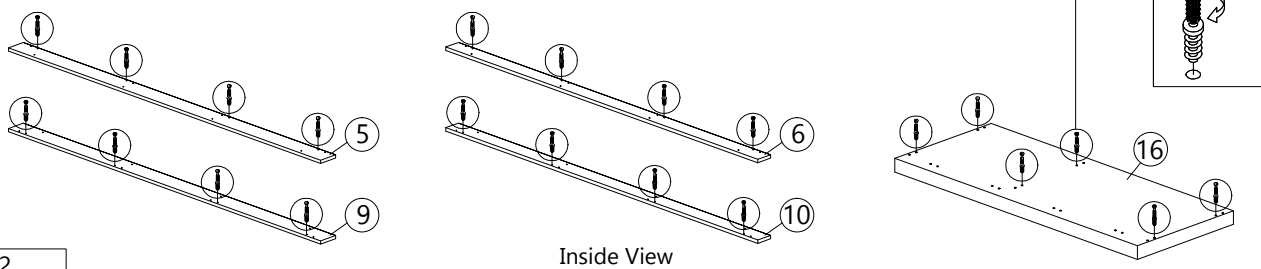


I2
MINIFIX
5654
(SCREW)
22 pcs

Step 3

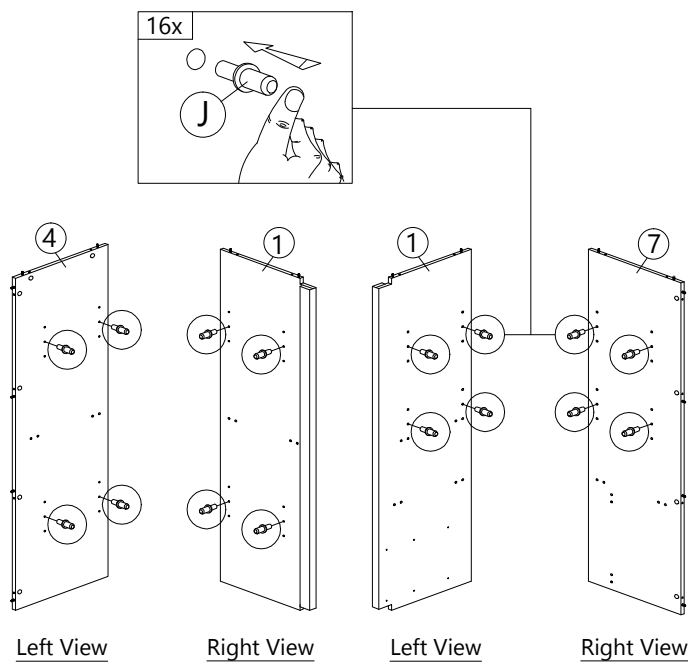

J
METAL
SHELF
SUPPORT
16 pcs


Step 4

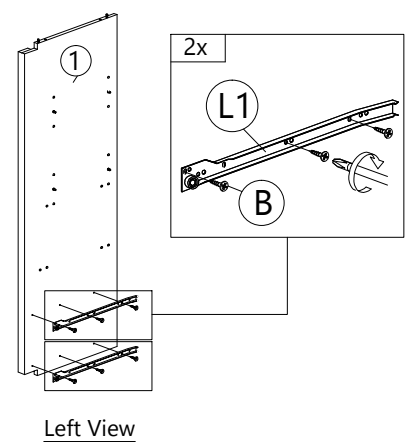

B
CB
SCREW
M3.5X12
6 pcs


L1
DRAWER
SLIDE 16" (A)
2 pcs

Step 5

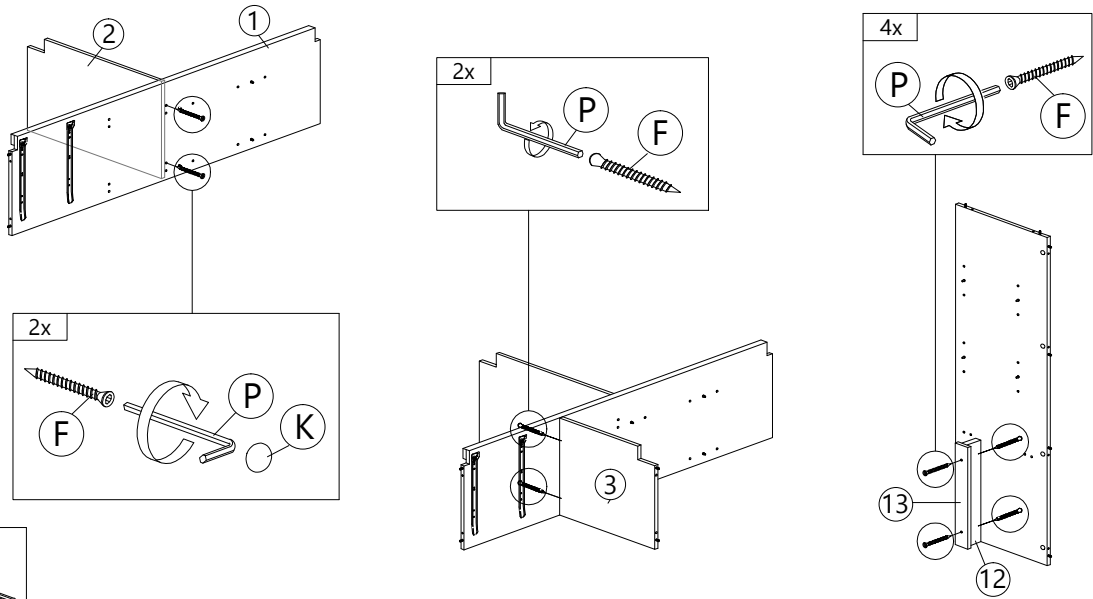


F	K	P
8 pcs	2 pcs	1 pc


Step 6

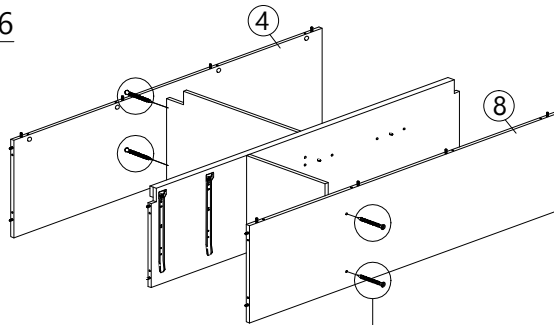


F	K	P
4 pcs	4 pcs	1 pc

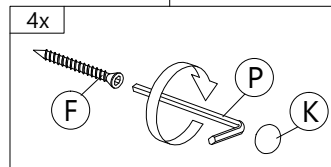


Step 7

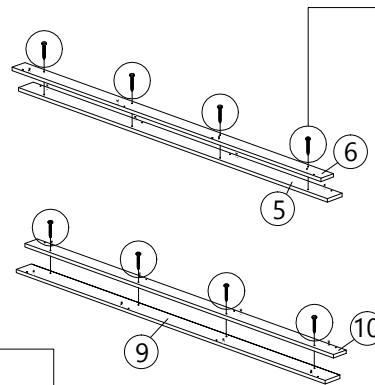

D
8 pcs

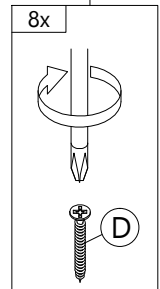


Step 8

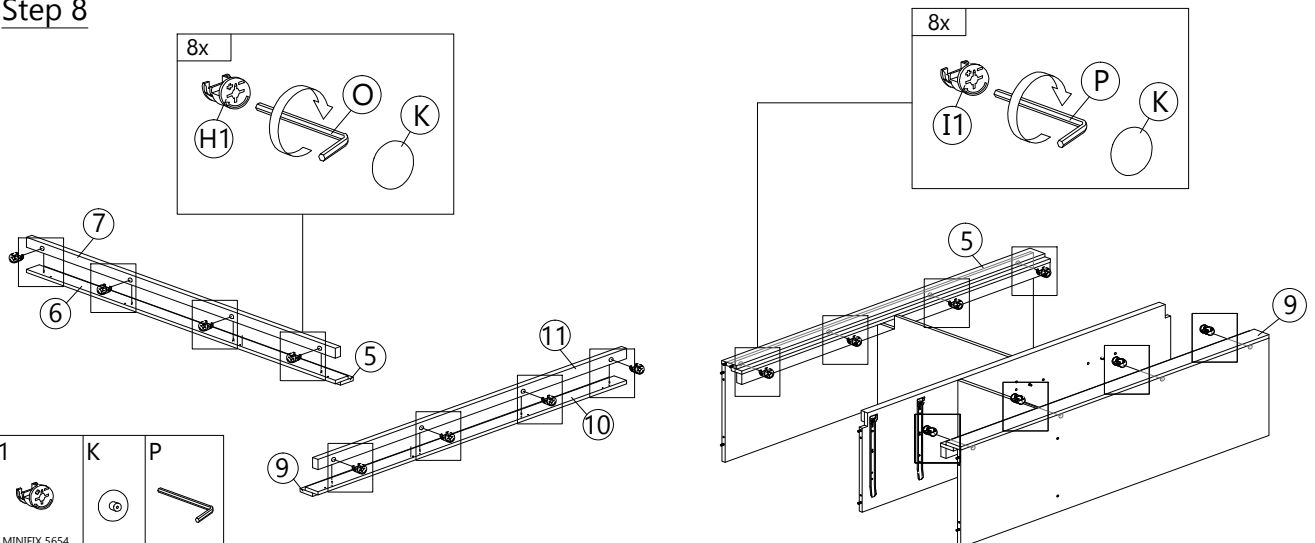


I1	K	P
16 pcs	16 pcs	1 pc


Step 9

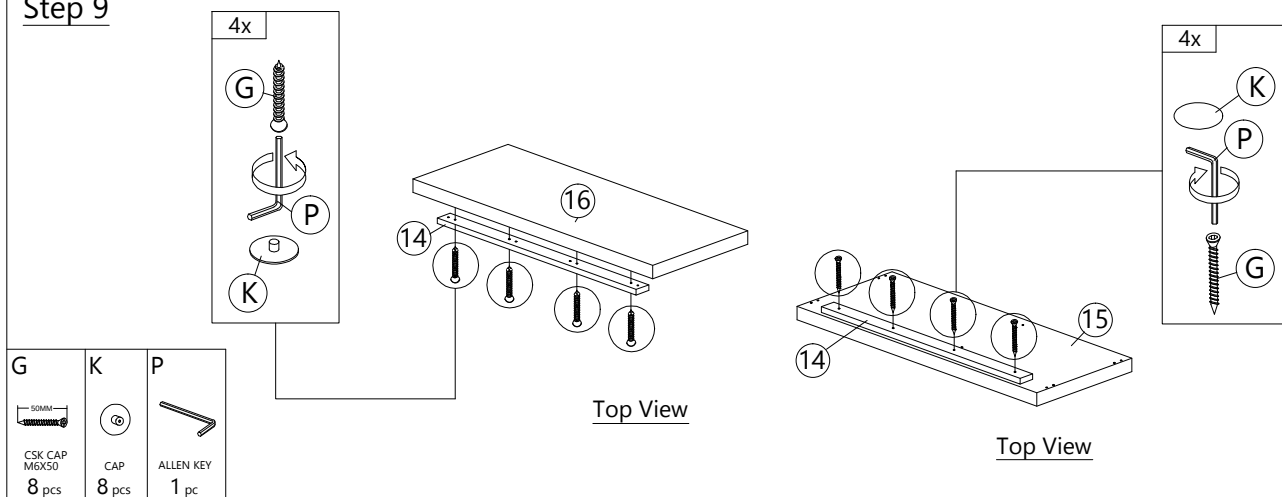


Step 10

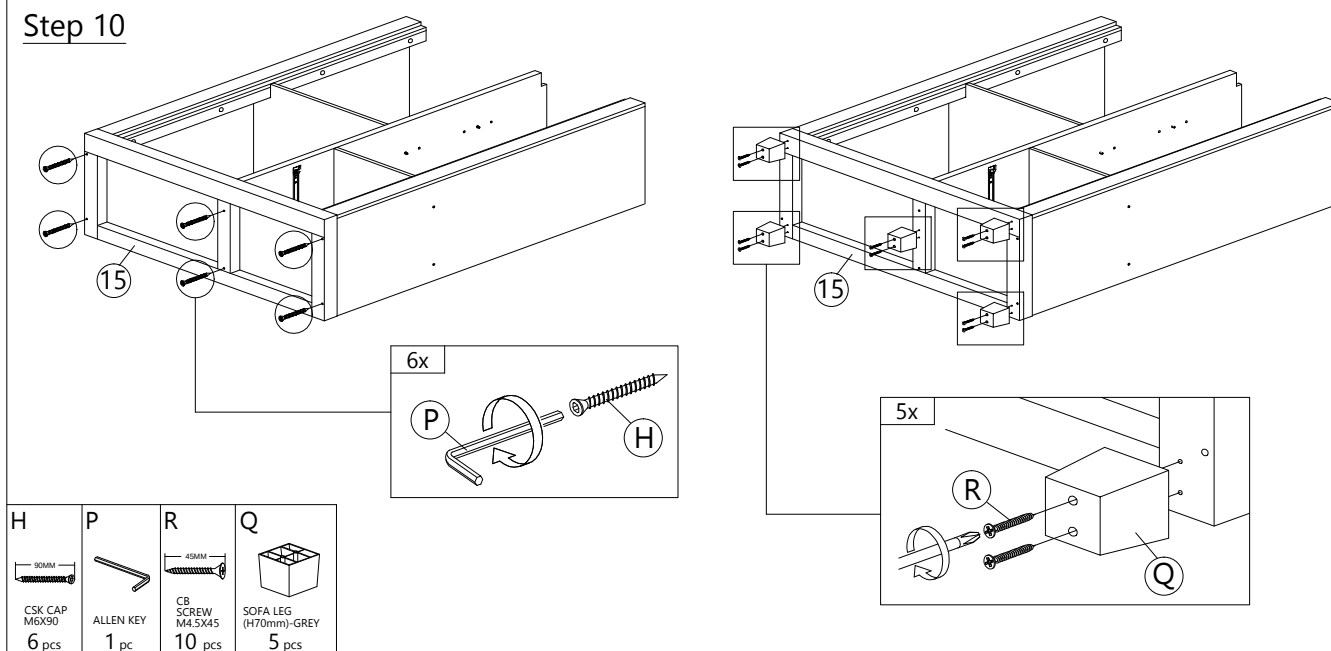


Step 11

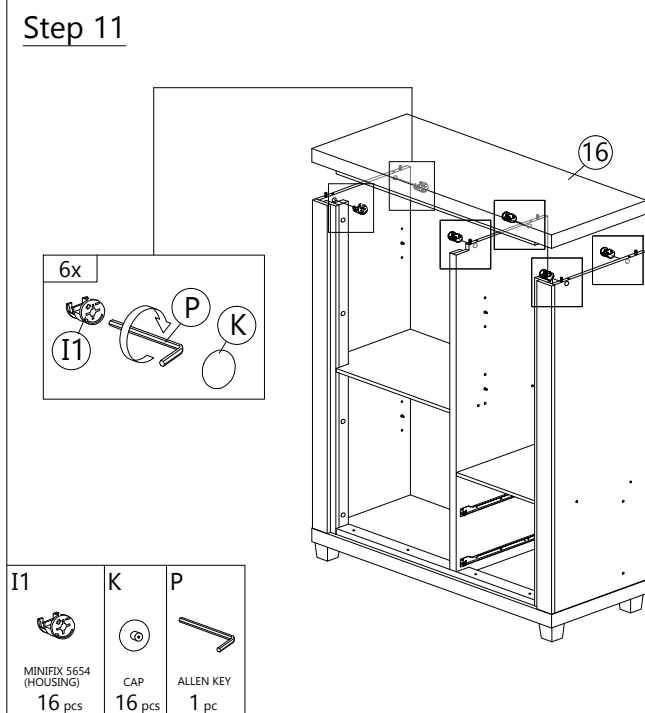

Step 12

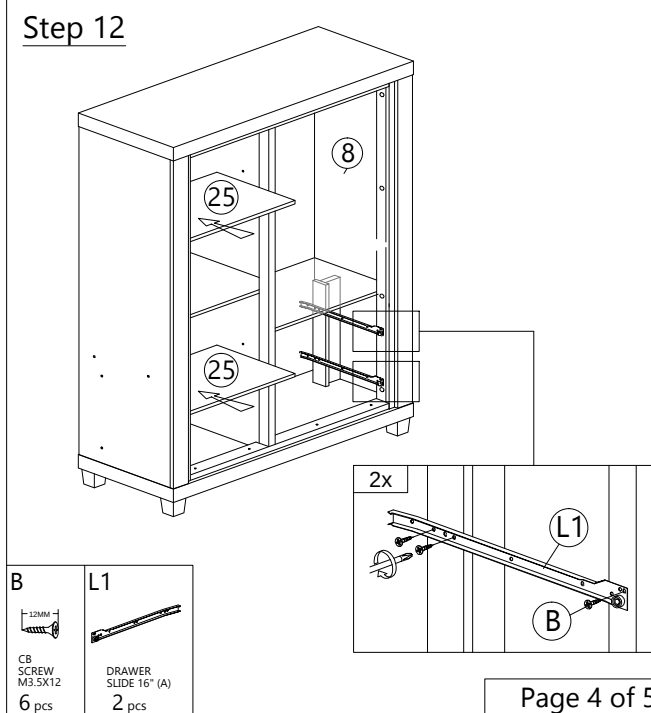


Step 13

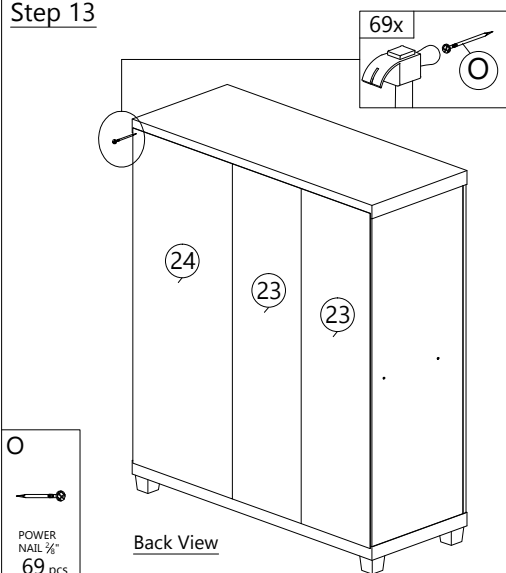


O
POWER NAIL 1/4"
69 pcs

Step 14

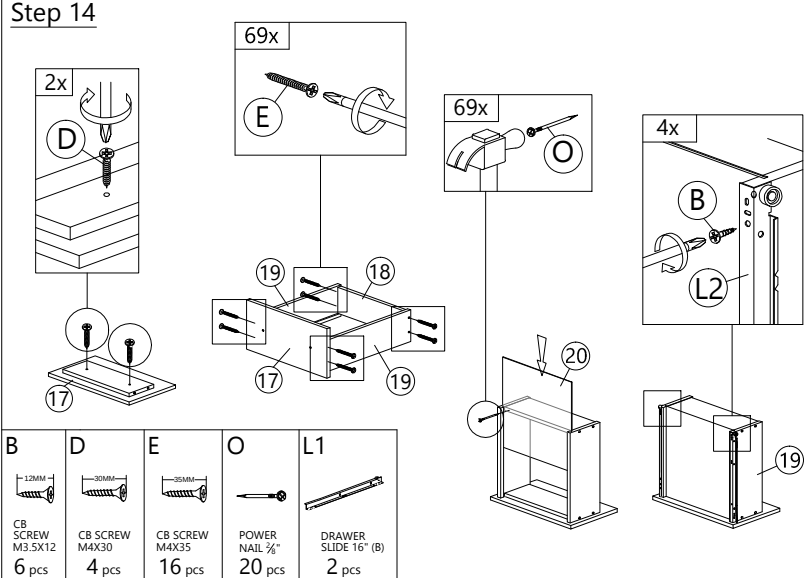


B D E O L1
CB SCREW M3.5X12 CB SCREW M4X30 CB SCREW M4X35 POWER NAIL 1/4" DRAWER SLIDE 16" (B)
6 pcs 4 pcs 16 pcs 20 pcs 2 pcs

Step 15

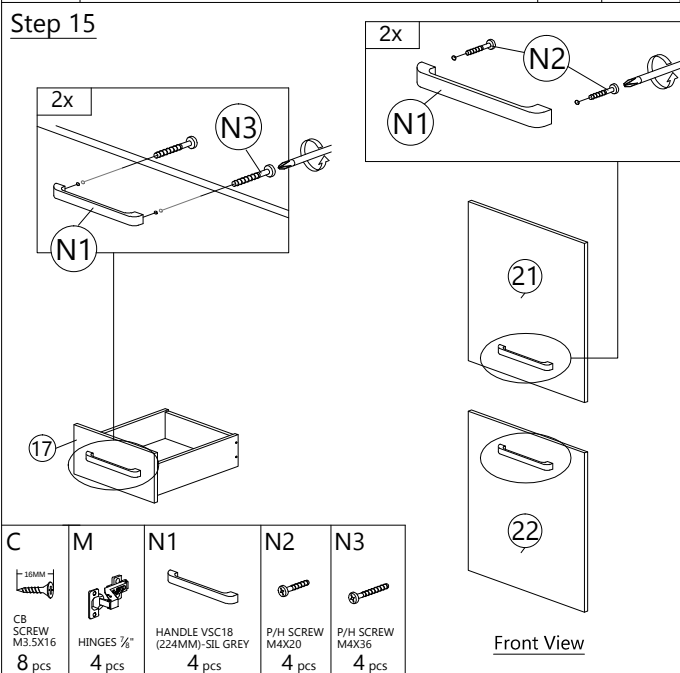


C M N1 N2 N3
CB SCREW M3.5X16 HINGES 1/2" HANDLE VSC18 (224MM)-SIL GREY P/H SCREW M4X20 P/H SCREW M4X36
8 pcs 4 pcs 4 pcs 4 pcs 4 pcs

Step 16

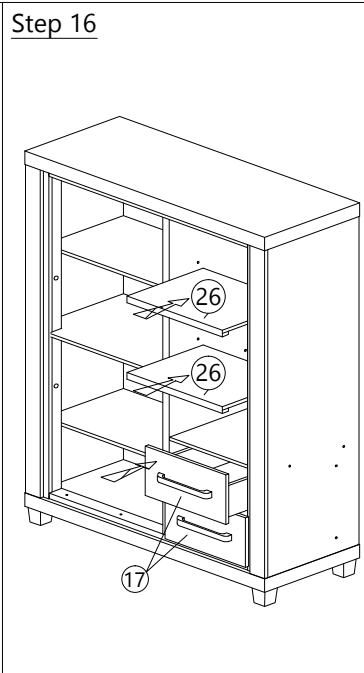

Step 17

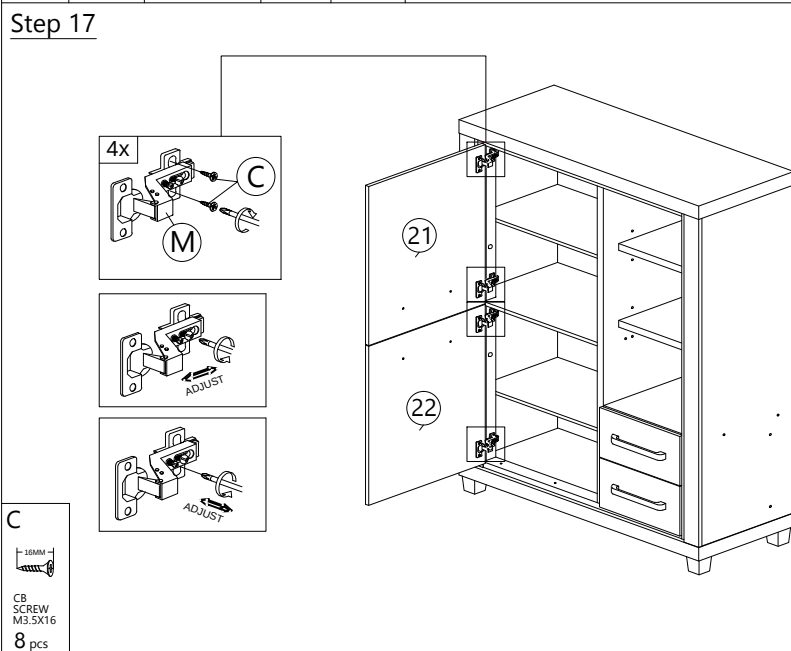

C
CB SCREW M3.5X16
8 pcs

Completed

