





SOFT, DRY CLOTH



CHEMICAL




HEAT



KEEP DRY



HANDLE WITH CARE




DO NOT USE KNIFE

ASSEMBLY INSTRUCTION


MODEL : SB 19009-S5V - ELITE DRESSOIR 220 / SIDE BOARD

HARDWARE	A	B	C	D	E	F	G	H	I	J	K	L	M	M1	M2	M3	O	O1	O2	P	Q	R
	PLASTIC DOWEL M8X25 1X52	ALLEN KEY 1X1	CB SCREW M3.5X12 1X48	CB SCREW M3.5X16 1X16	CB SCREW M4X25 1X8	CB SCREW M4X35 1X32	CSK CAP M6X40 1X10	H1 H2 MINIFIX 5654 26 SETS	METAL SHELF SUPPORT 1X8	CAP 1X14	HINGES (OUTSIDE) 5/8" 4 SETS	POWER NAIL 6/8 1X70	HANDLE VSC 16 (SILVER) 1X6		P/H SCREW M4X24 1X4	P/H SCREW M4X40 1X8		DRAWER SLIDE 16" 4 SETS		PLASTIC PIN 1X8	CB SCREW M4X30 1X6	CSK CAP M6X50 1X6


PART LIST

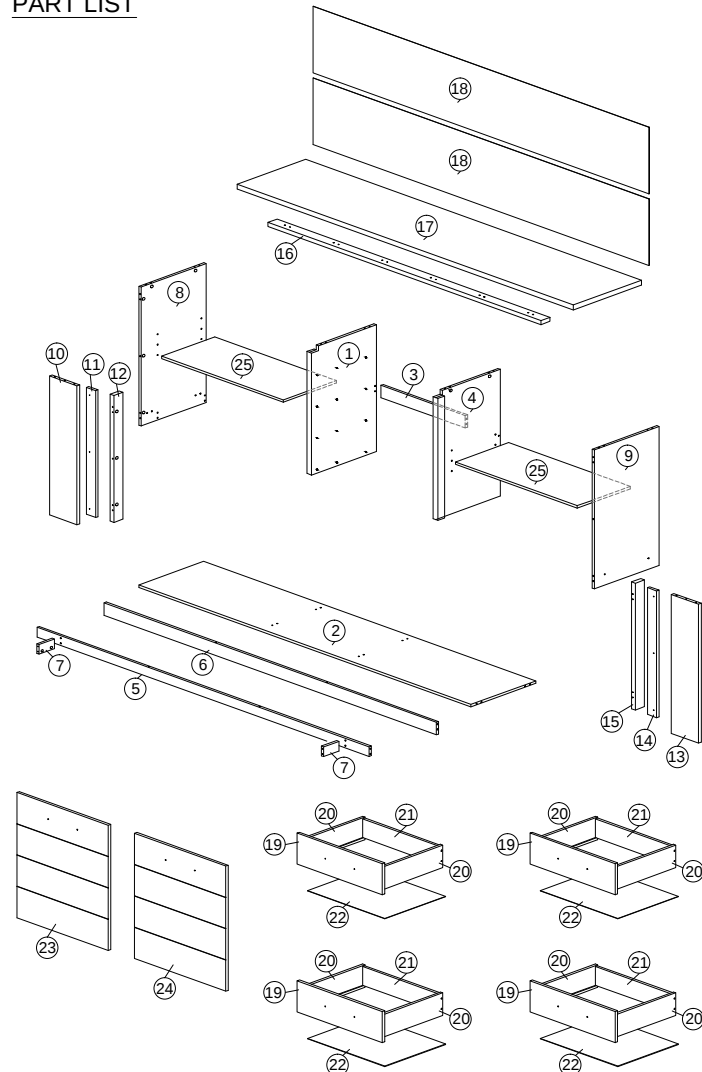


STEP 1

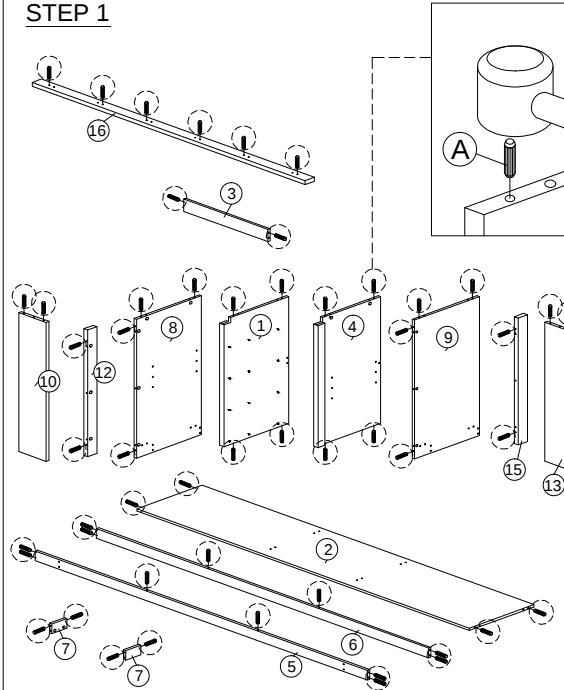


STEP 2

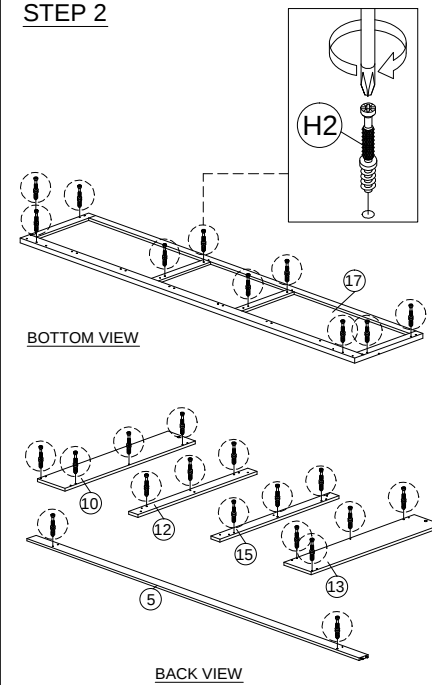


STEP 3

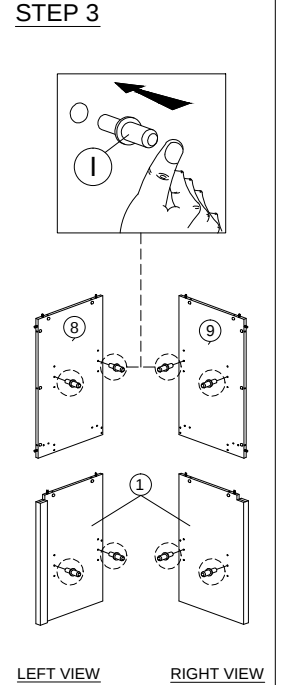


STEP 4

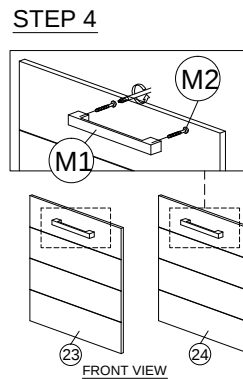


STEP 5

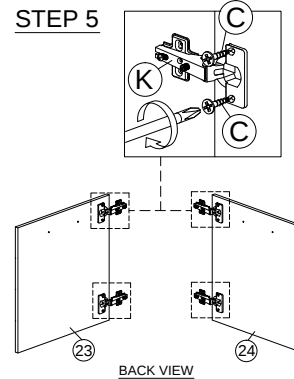

STEP 6

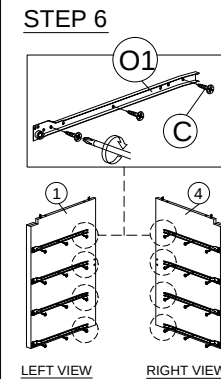


STEP 7

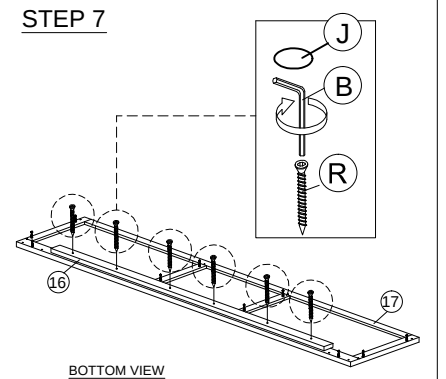




SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE






DO NOT USE KNIFE




ASSEMBLY INSTRUCTION

MODEL : SB 19009-S5V - ELITE DRESSOIR 220 / SIDE BOARD



STEP 8

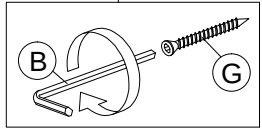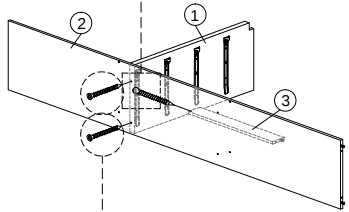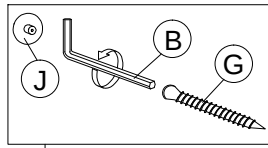



STEP 9

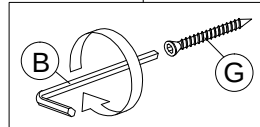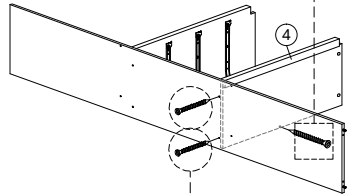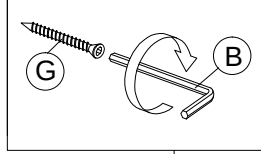



STEP 10

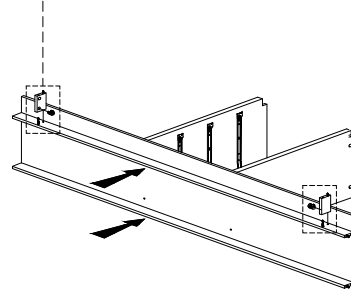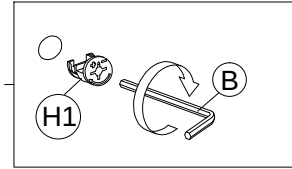



STEP 11

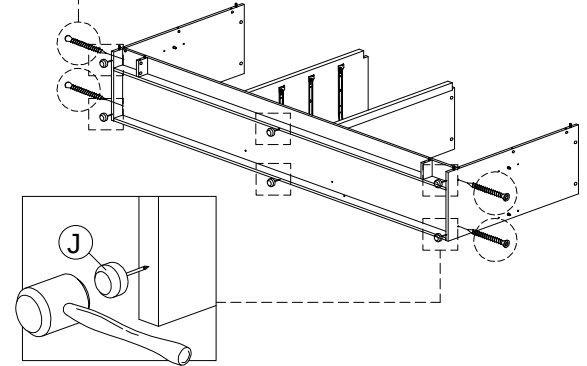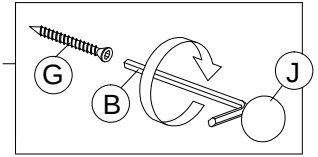



STEP 12

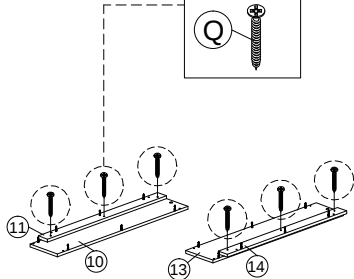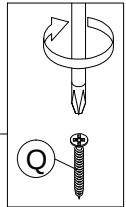



STEP 13

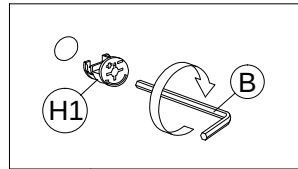

STEP 14

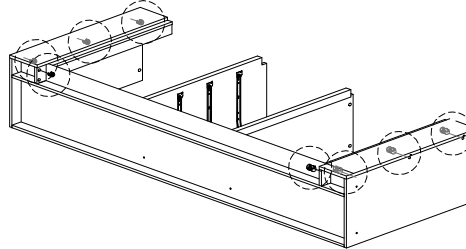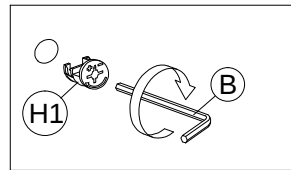


STEP 15

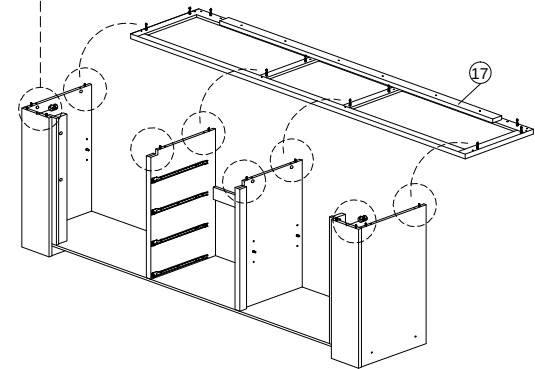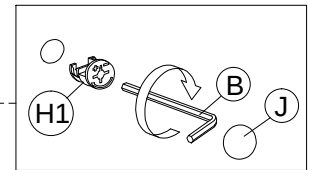




SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE




DO NOT USE KNIFE

ASSEMBLY INSTRUCTION


MODEL : SB 19009-S5V - ELITE DRESSOIR 220 / SIDE BOARD

STEP 16

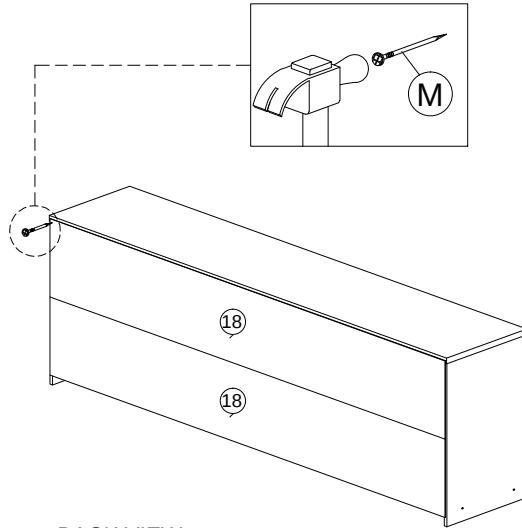


BACK VIEW

STEP 17

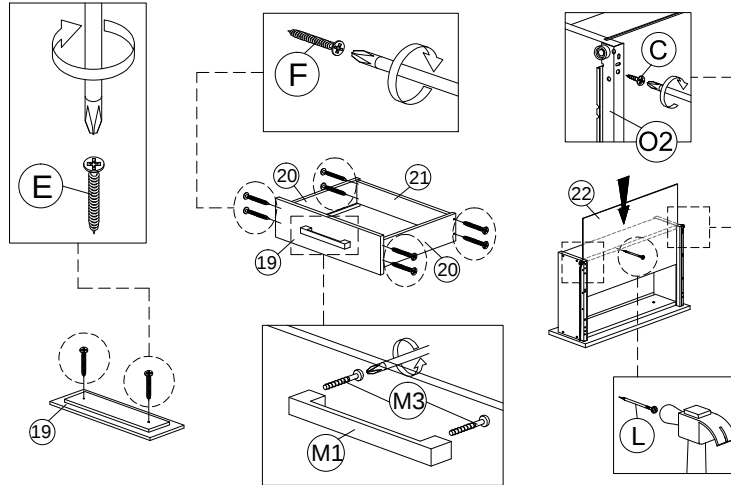


BACK VIEW

STEP 18

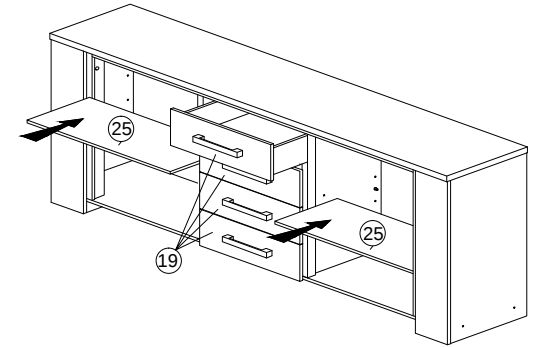

STEP 19

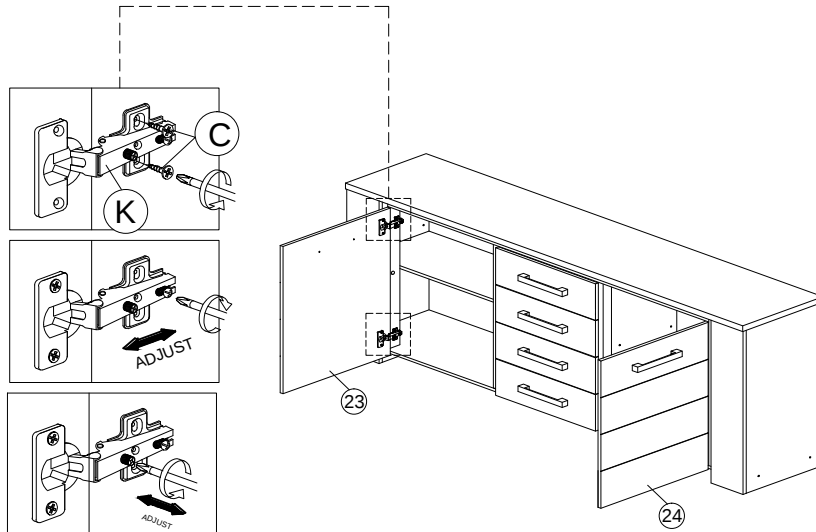

COMPLETED

