







montage instructies
instructions de montage
assembly instructions
montage anleitung

NANI


BU

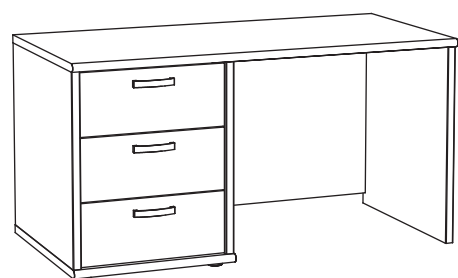


BU 138 x 72 x 67 cm

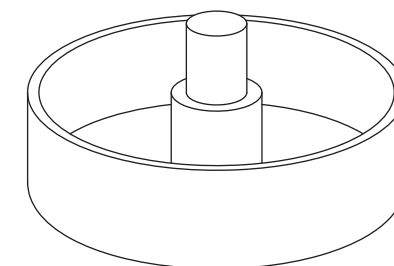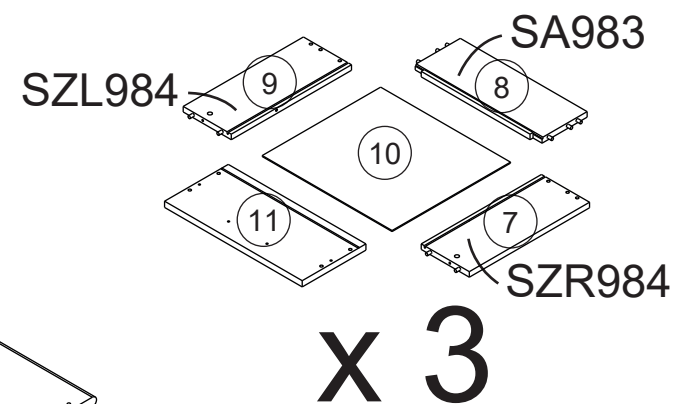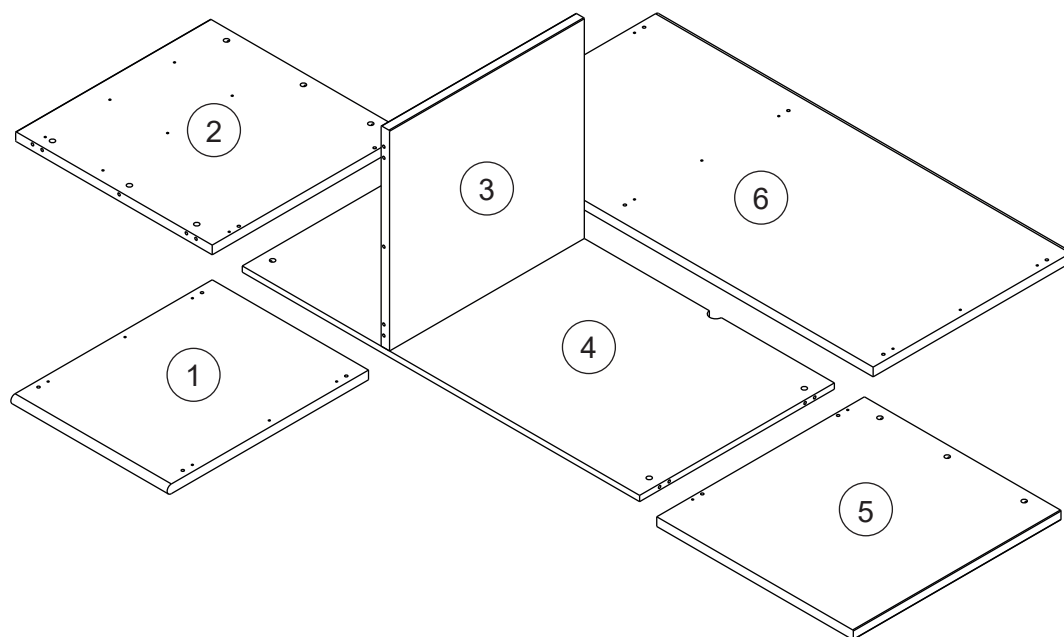


nr 100
x 4

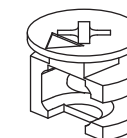


nr 102
x 19



nr 120
x 6



nr 121
x 6



nr 141
x 14













nr 266
x 1




nr 297
x 6




nr 298
x 19

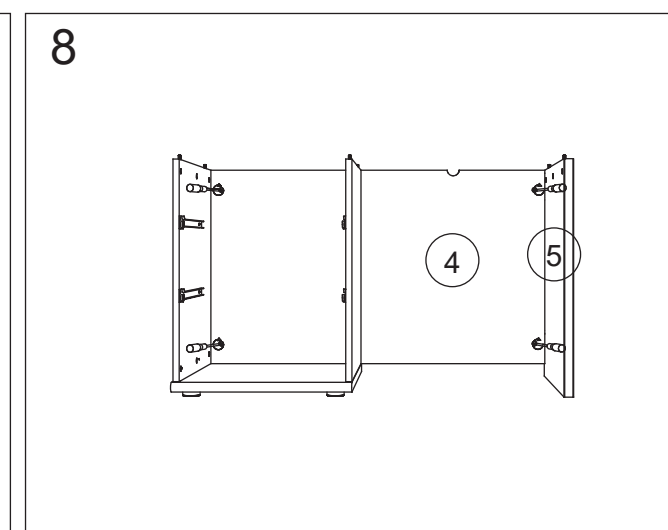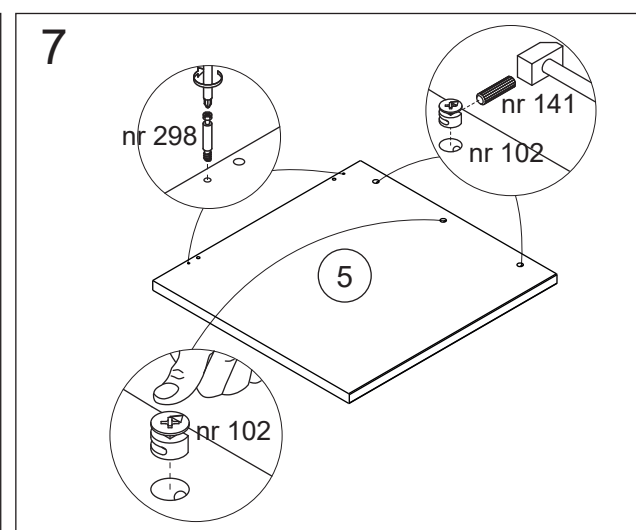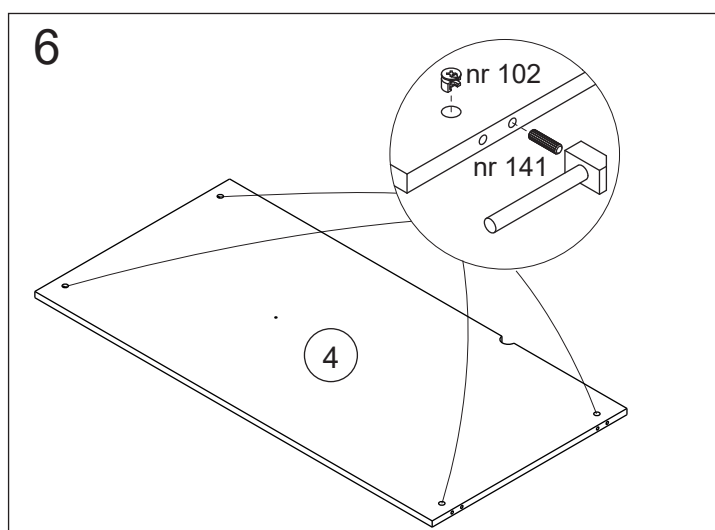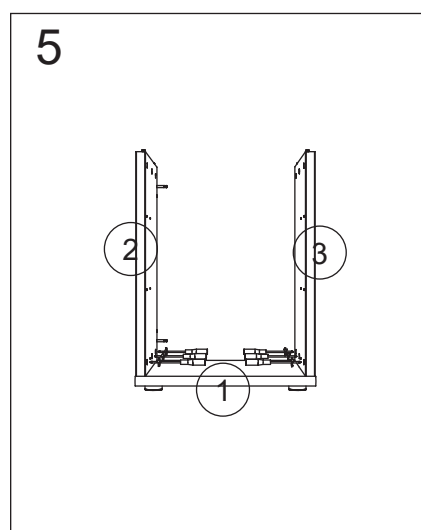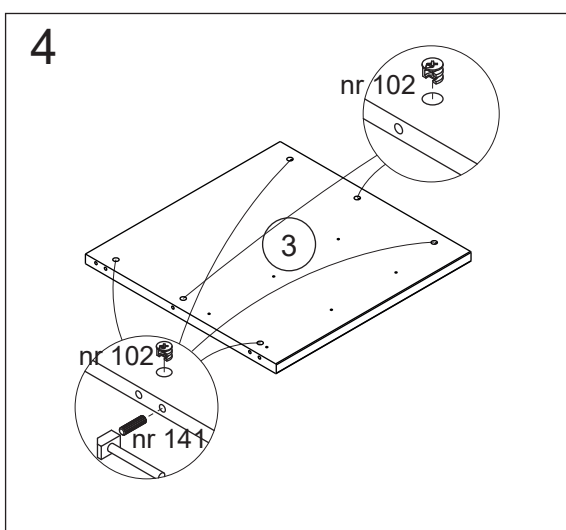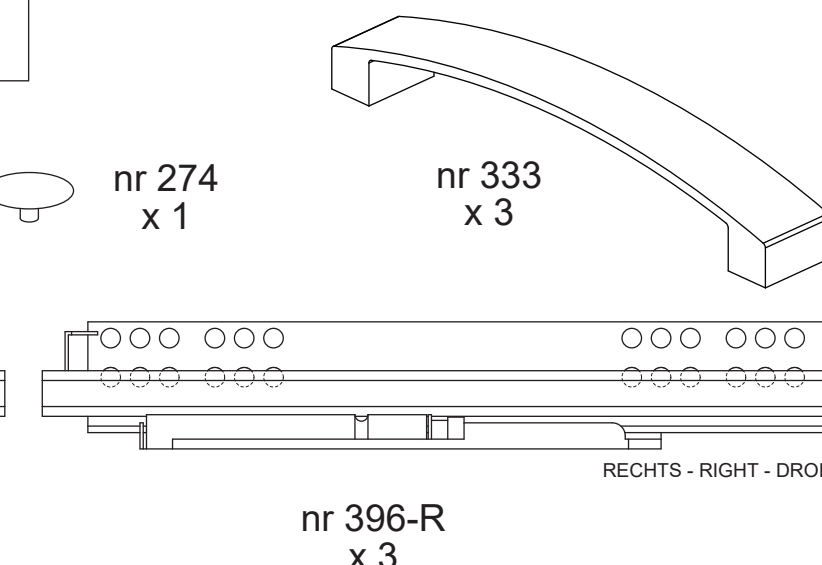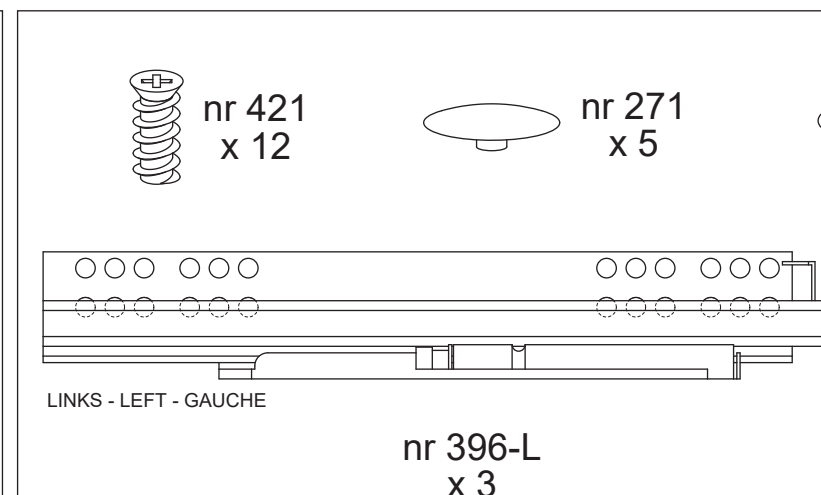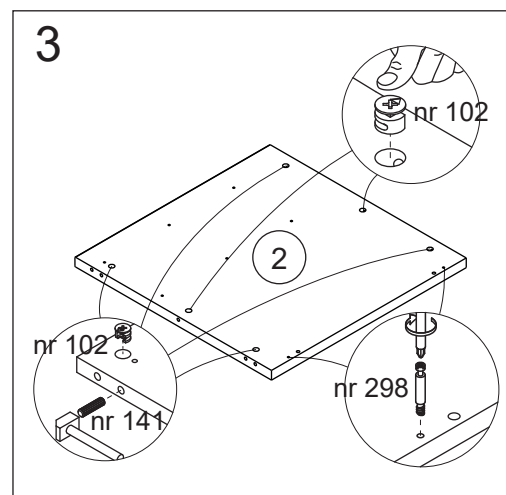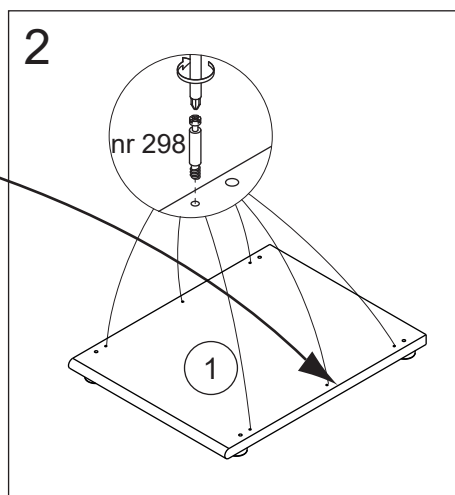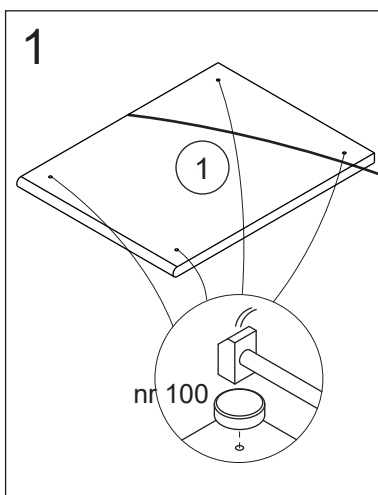


9

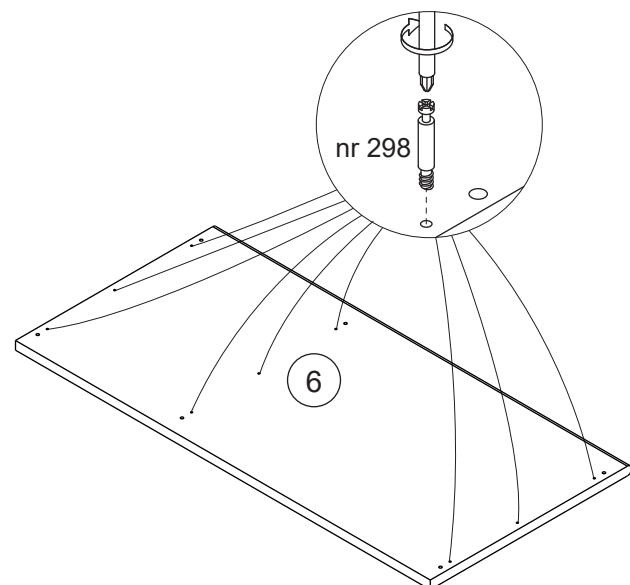


10

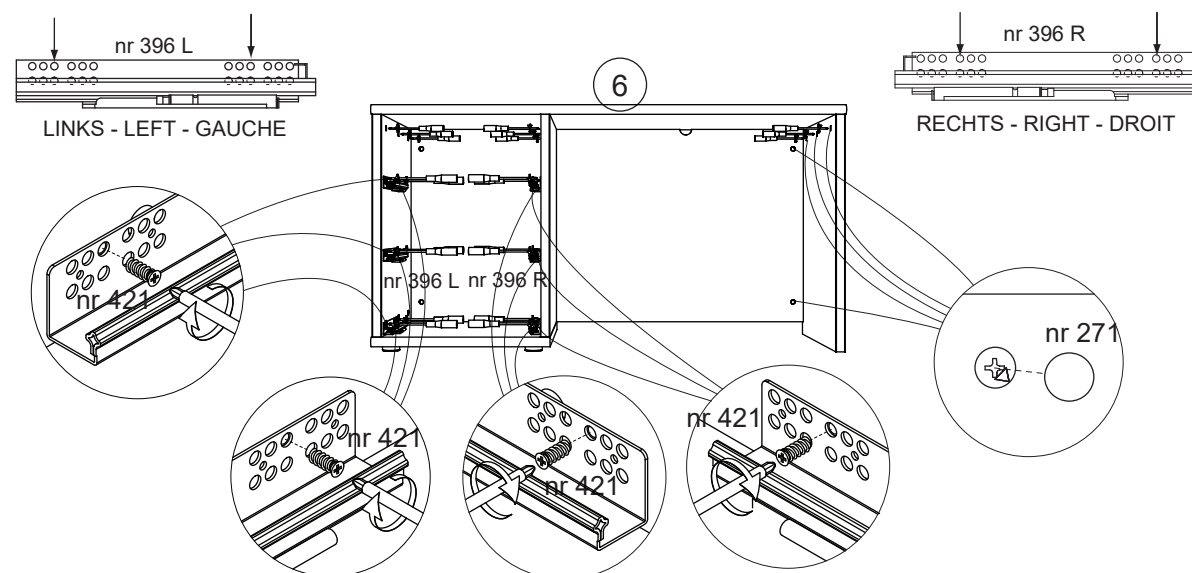

11

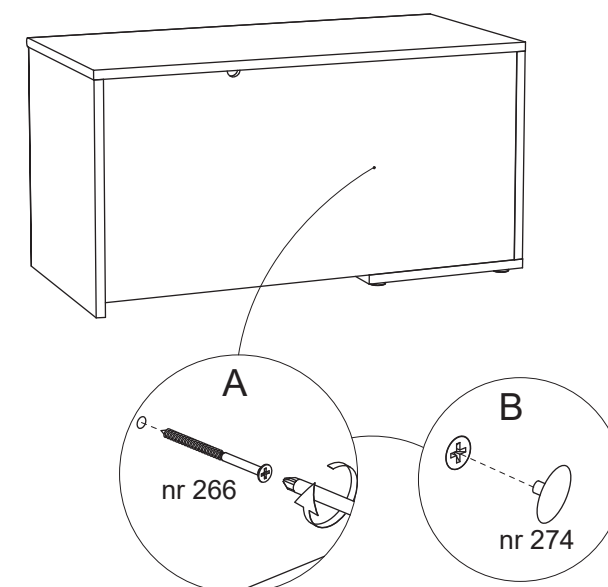


12 x 3

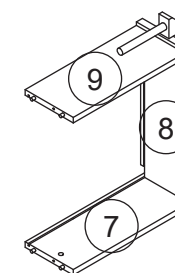


13

x 3

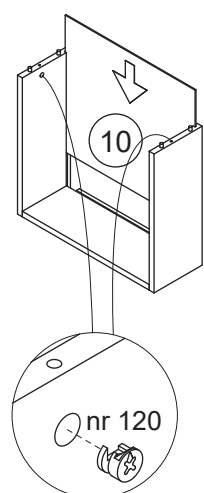


14

x 3

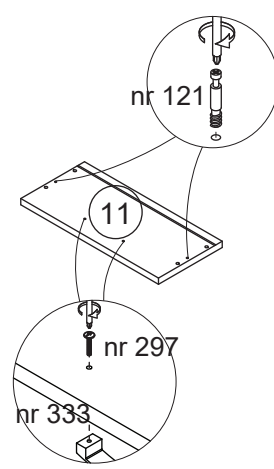


15

x 3

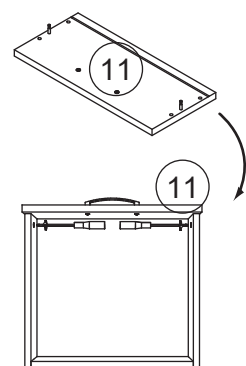

16

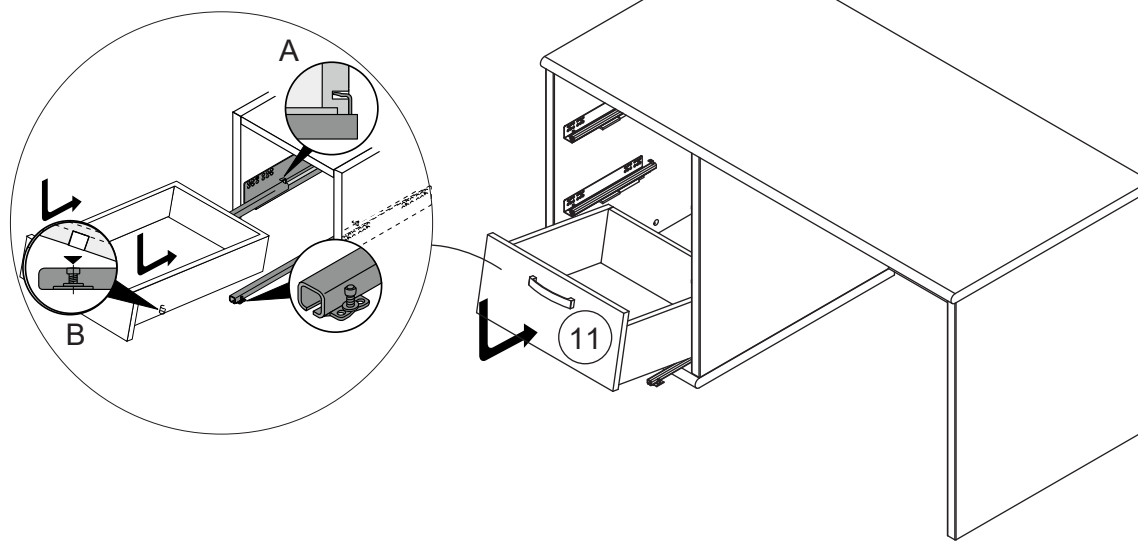

i

