

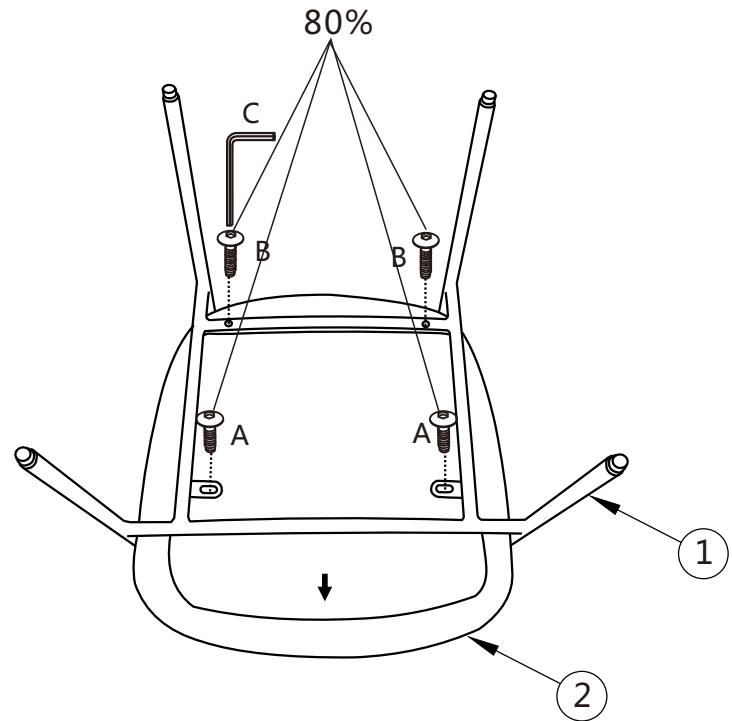


① TIGHTEN THE BOLTS OF THE SEAT 80%

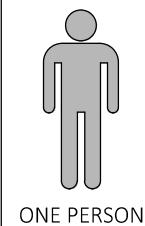


② MAKE SURE THE GAP OF TWO SIDES ARE EQUALIZED

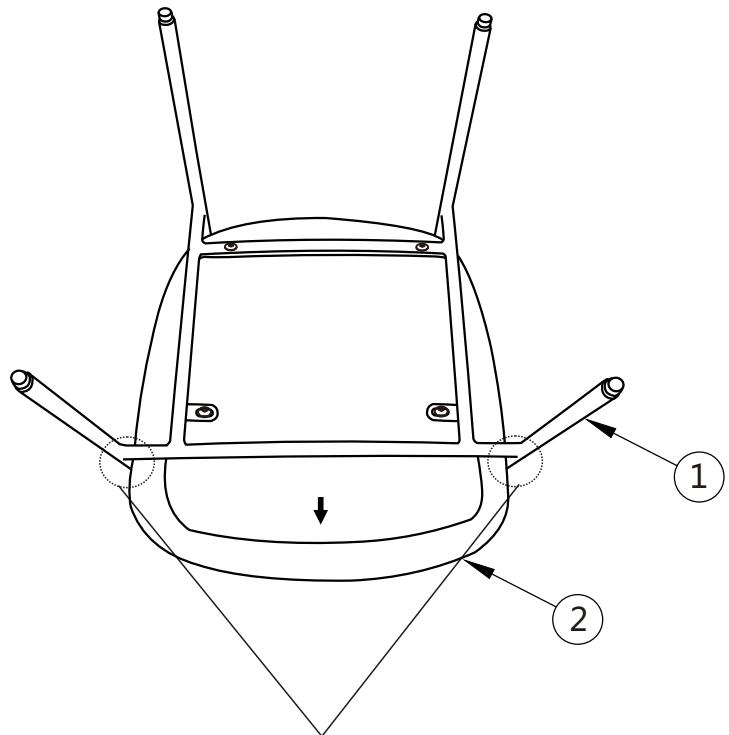




<https://quefairedemesdechets.fr>

ID	1	2	A	B	C
FITTINGS					
QTY	1	1	2	2	1
	M6X20mm		M6X25mm		5mm

③ TIGHTEN THE BOLTS OF THE SEAT 100%

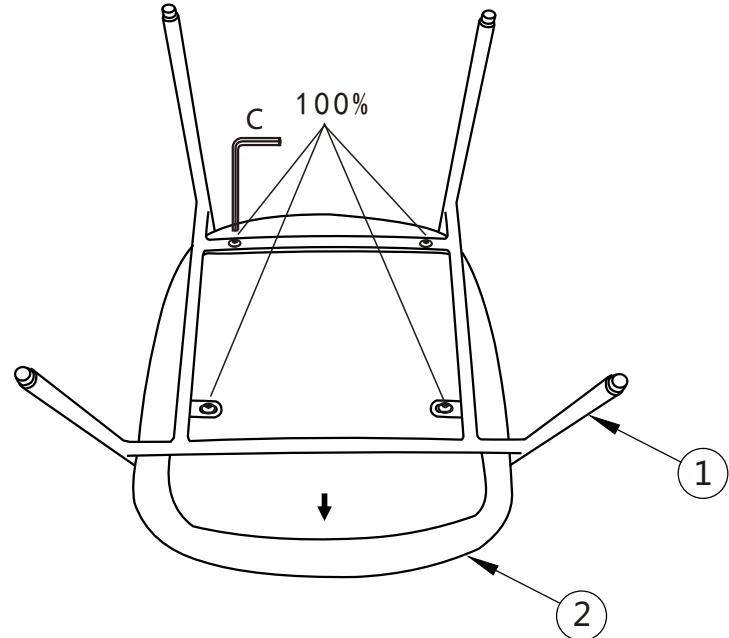

④ FINISHED

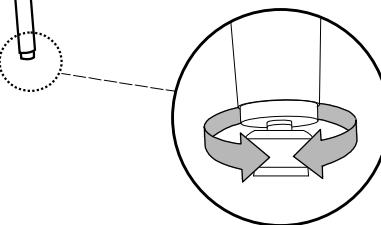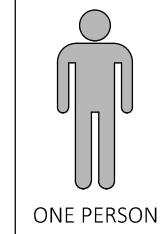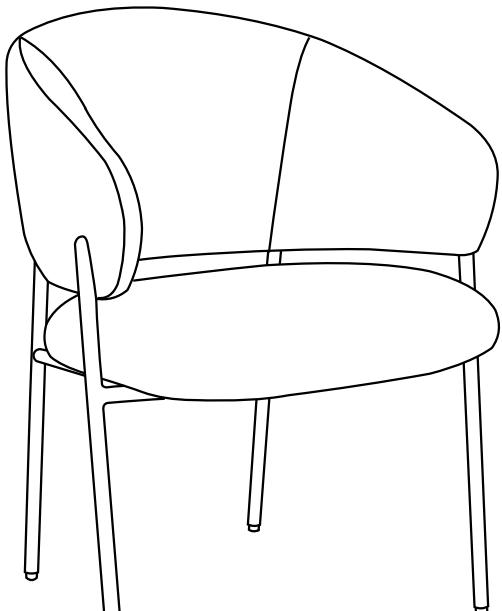

FEET ARE ADJUSTABLE IN HEIGHT BY TURNING

ID	1	2	A	B	C
FITTINGS					
QTY	1	1	M6X20mm	M6X25mm	5mm



FR
Pensez à
donner ou recycler.



<https://quefairedemesdechets.fr>