





2 STEP 2: Assemble the frame to the seat.

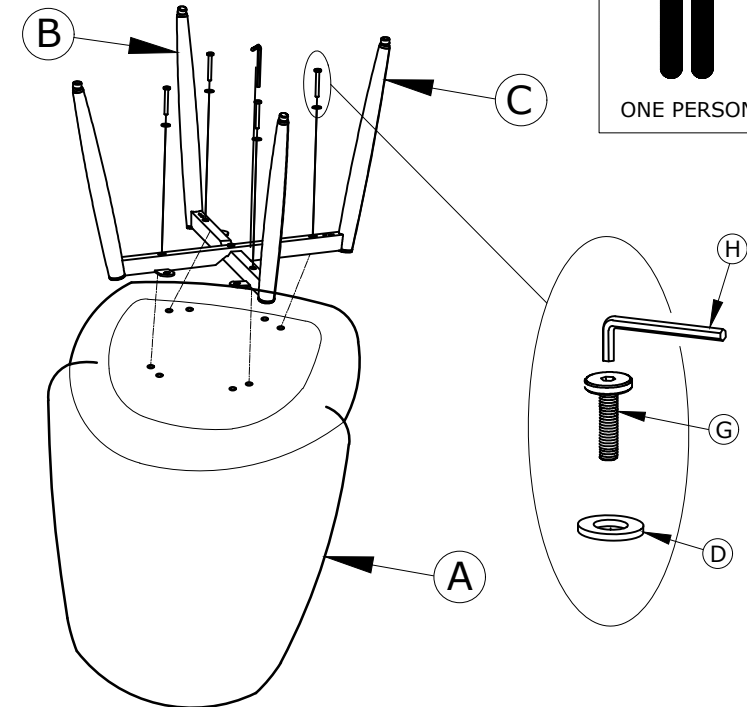

NO:	A	B	C	D	E	F	G	H
FITTINGS:		 RIGHT FRAME	 LEFT FRAME	 WASHER	 BOLTS M6X18MM	 BOLTS M6X30MM	 BOLTS M6X50MM	 5MM
QTY:	1	1	1	8	4	1	4	1



STEP 3: Fix also the 4x bolts (E) at the lips to fix the frame and tighten all bolts of the frame 100% TIGHT!



<https://quefairedemesdechets.fr>

NO:	A	B	C	D	E	F	G	H
FITTINGS:		 RIGHT FRAME	 LEFT FRAME	 WASHER	 BOLTS M6X18MM	 BOLTS M6X30MM	 BOLTS M6X50MM	 5MM
QTY:	1	1	1	8	4	1	4	1