




1 **STEP 1: INSERT INNER FRAME INTO OUTER FRAME.**
'CAREFUL' DO NOT SCRATCH THE FRAME!

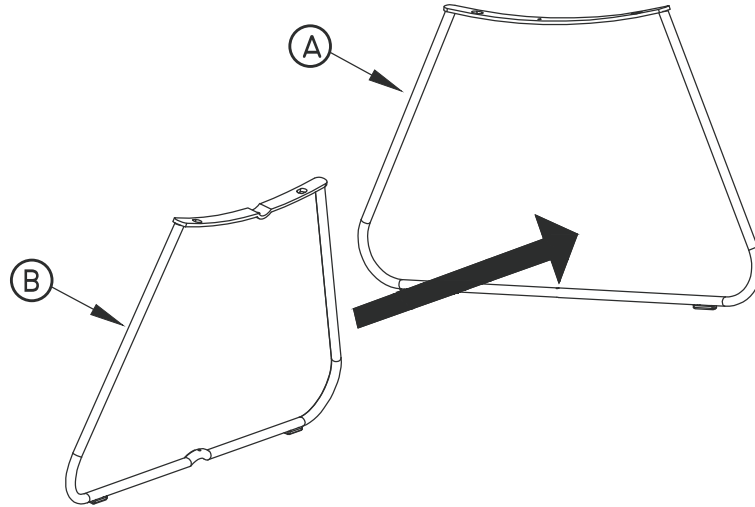


2 **STEP 2: PLACE DOWN CENTER OF INNER FRAME AT THE DOWN CENTER OF OUTER FRAME.**
CAREFUL TO AVOID SCRATCHES!

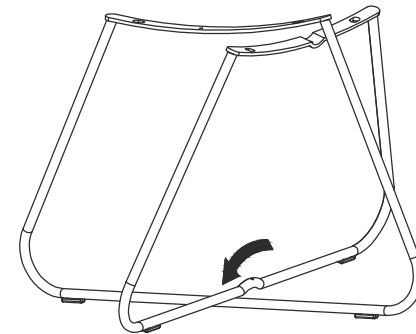


3 **STEP 3: POSITION INNER FRAME SO THAT THE TOP PART ALSO IS CENTERED.**

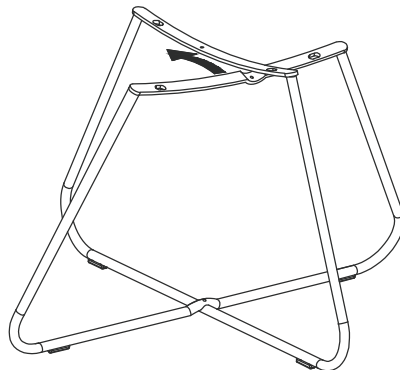


4 **STEP 2: FASTEN THE 2X BOLTS (F) FOR 80%.**

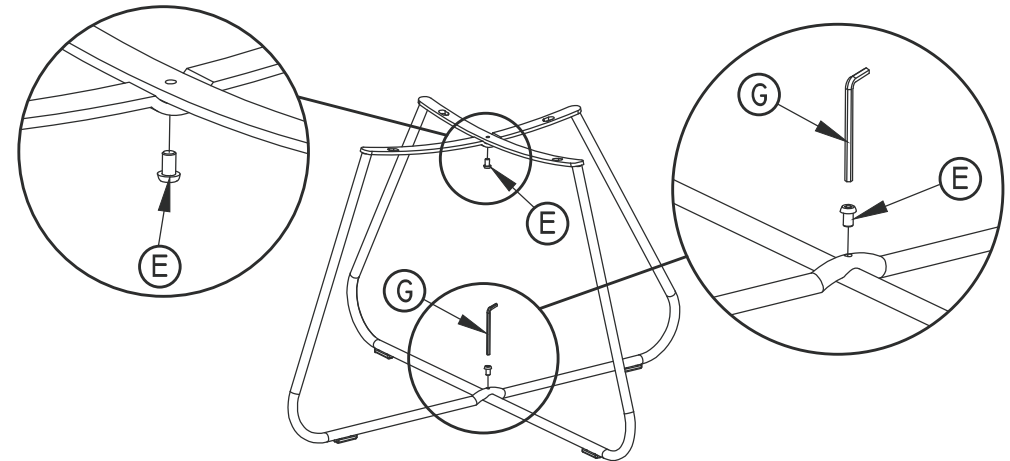

NO:	FITTINGS:	QTY:
A	 OUTER FRAME	1
B	 INNER FRAME	1
C	 SEAT	1
D	 PAN HEAD BOLTS M6X20MM	4
E	 PAN HEAD BOLTS M6X12MM	2
F	 M6X18X1.0MM	4
G	 5MM	1

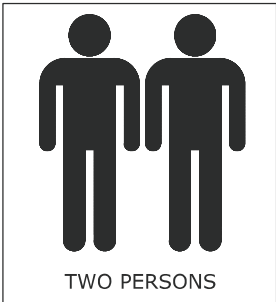

5 STEP 6: ASSEMBLE SEAT TO FRAME (CROSSWISE).

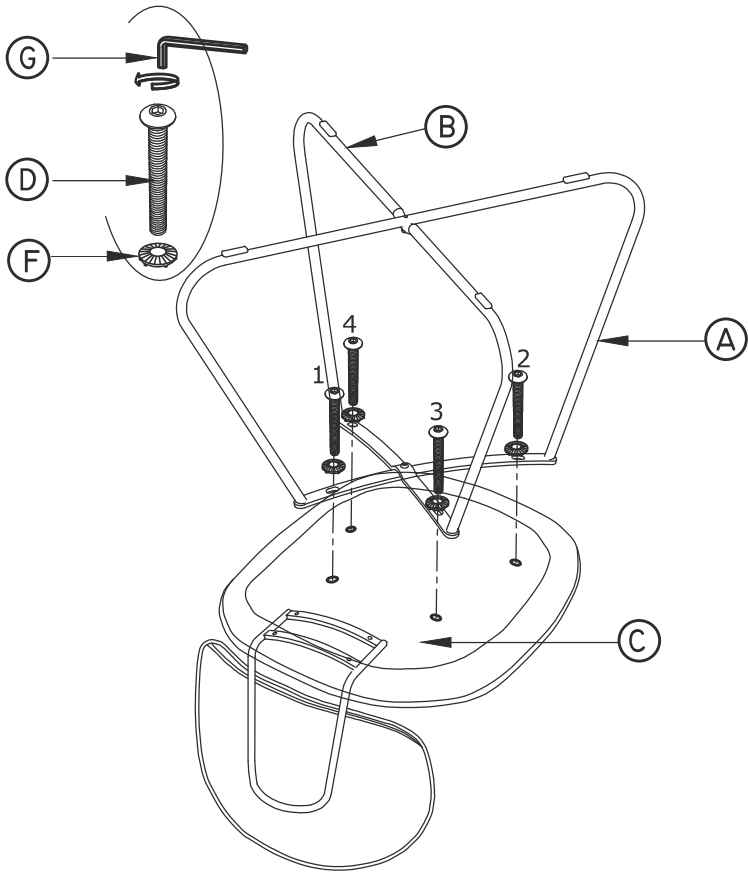

6 STEP 7: PRESS CHAIR TO FLOOR TO STABILIZE CHAIR, THEN FIX THE 2X BOLTS (F) FROM STEP 4 FOR 100%.



FR

Pensez à
donner ou recycler.



Association

ou



Magasin

ou



Déchèterie

<https://quefairedemesdechets.fr>

NO:	A	B	C	D	E	F	G
FITTINGS:							
	OUTER FRAME	INNER FRAME	SEAT	PAN HEAD BOLTS M6X20MM	PAN HEAD BOLTS M6X12MM	M6X18X1.0MM	5MM
QTY:	1	1	1	4	2	4	1