

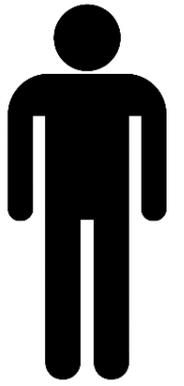


1 PUT THE FRAME ON A FLAT SURFACE. TURN THE UPPER PART OF THE DISK TO THE RIGHT BY 45° SO THAT THE HOLES ON UPPER AND BOTTOM DISK ARE ALIGNED AND KEEP HOLDING IT.


2 AND INSERT 1X L-KEY (D) THROUGH THE HOLE AT THE BOTTOMSIDE OF THE FRAME PLATE TO BLOCK THE UPPER TURNING DISK

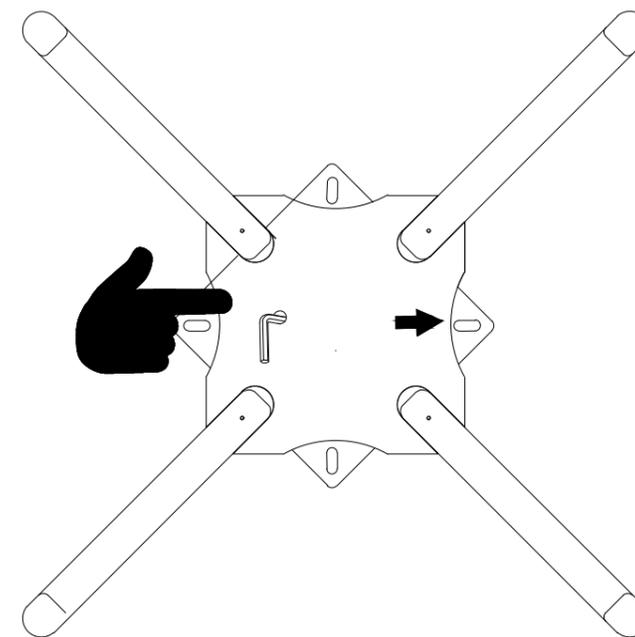

ONE PERSON

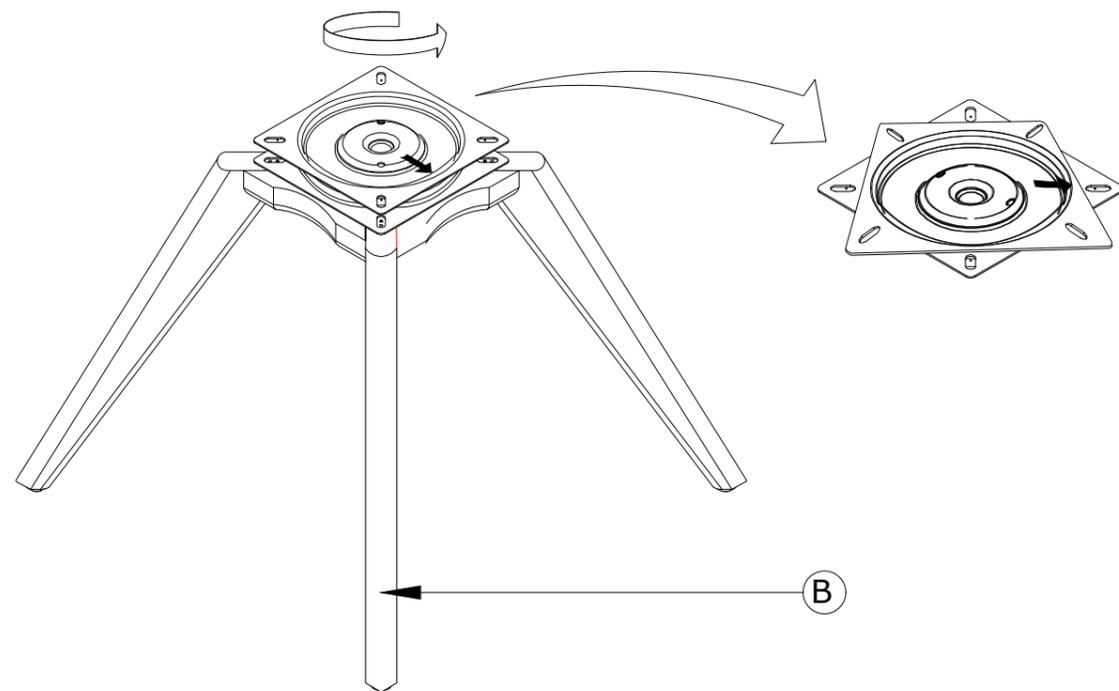


L-KEY NEED TO COME JUST SLIGHTLY THROUGH.

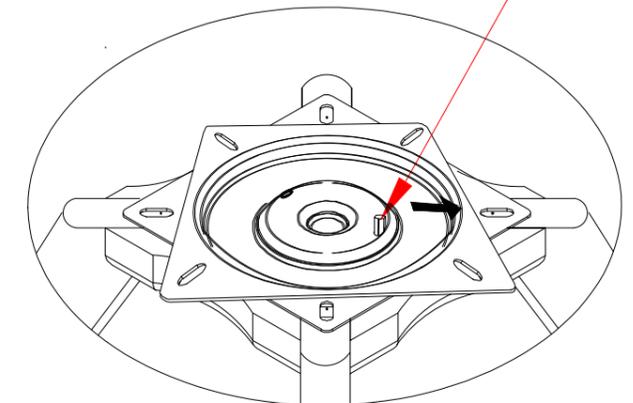




NO:	A	B	C	D
FITTINGS:				
QTY:	1	1	M6X30MM 4	5MM 1

3 TURN SEAT UPSIDE DOWN AND ASSEMBLE FRAME TO SEAT WITH 4X BOLT(C)

4 HOLD THE FRAME AND REMOVE THE L-KEY MAKE SURE THE ARROW ON THE BOTTOMSIDE OF THE TURNINGDISKIS POINTING TO THE FRONTSIDE OF THE CHAIR

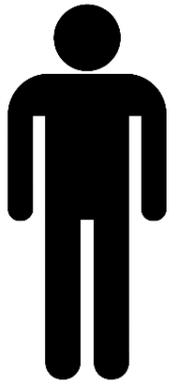

ONE PERSON

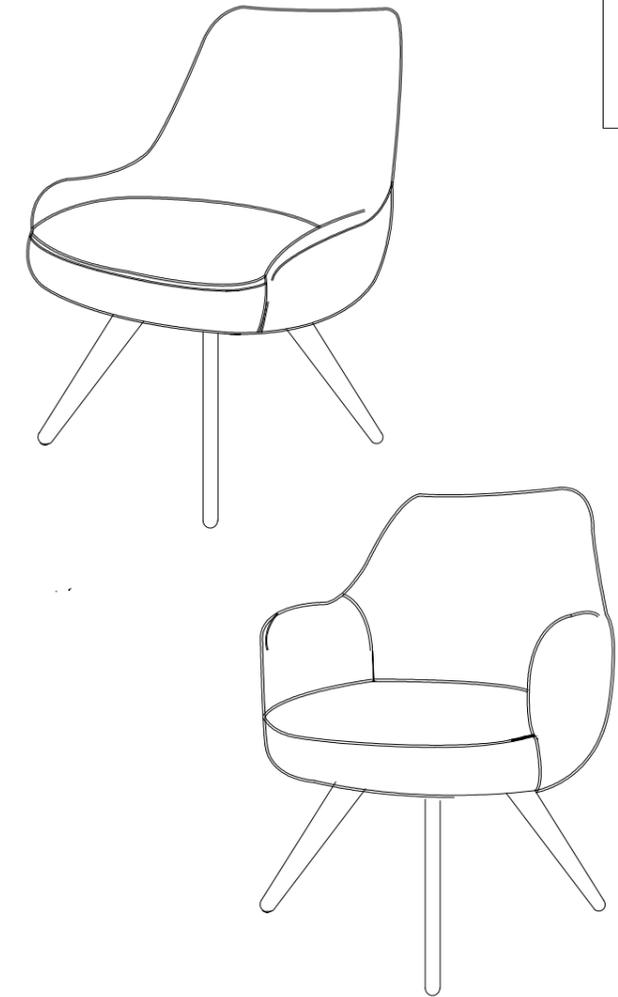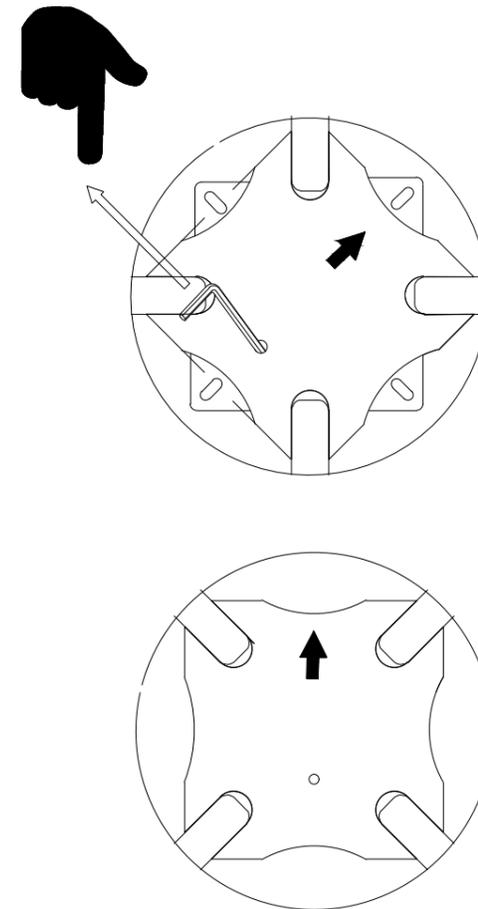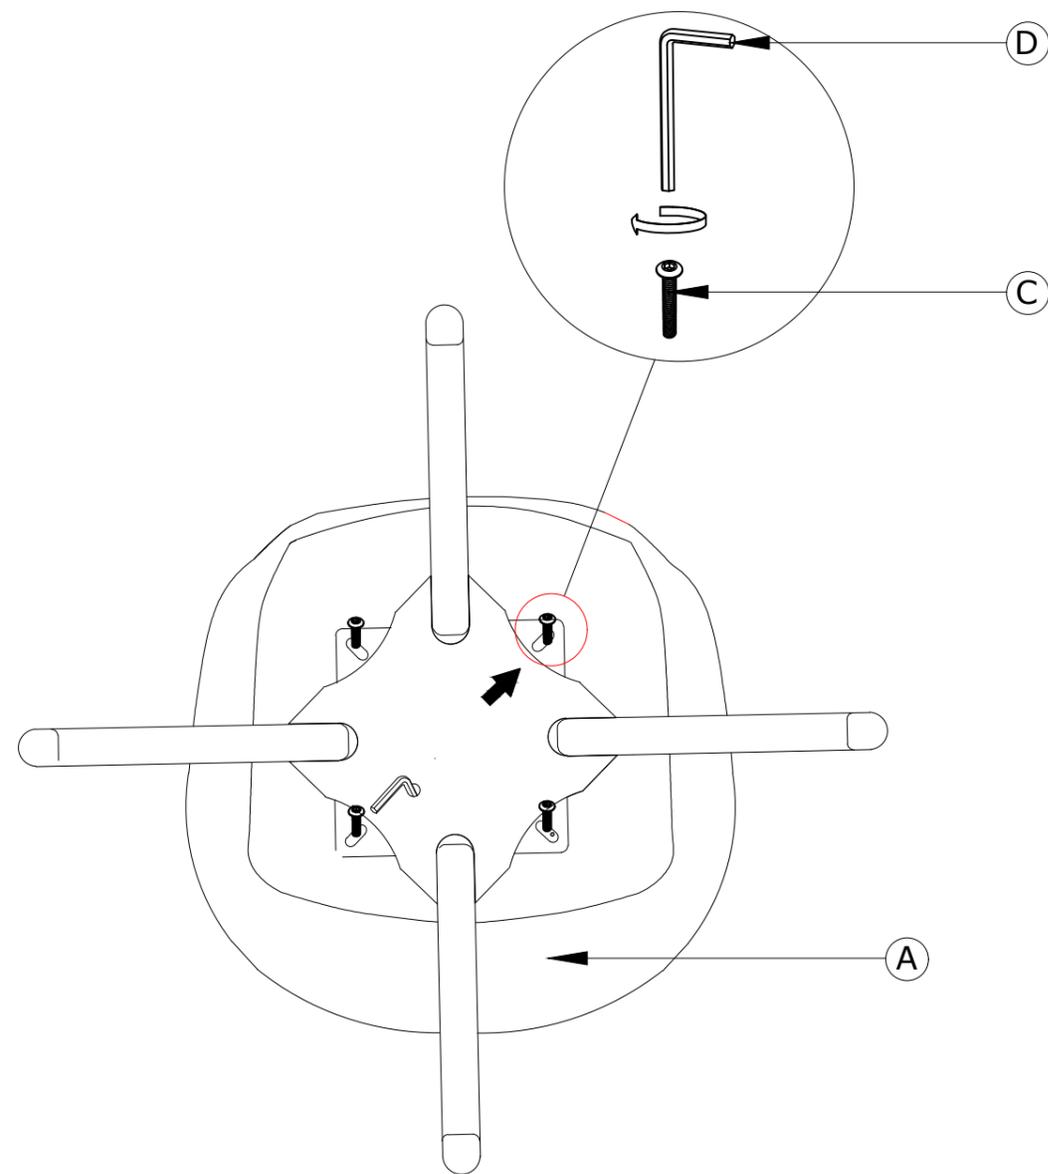

NO:	A	B	C	D
FITTINGS:				
QTY:	1	1	M6X30MM 4	5MM 1