

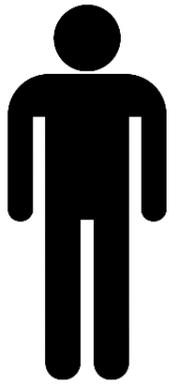
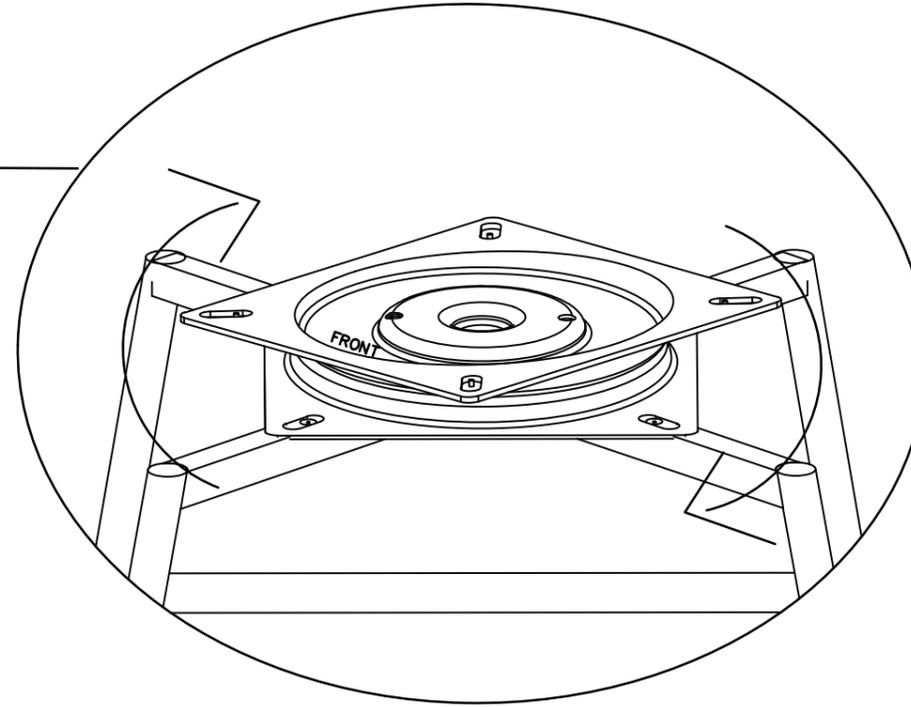
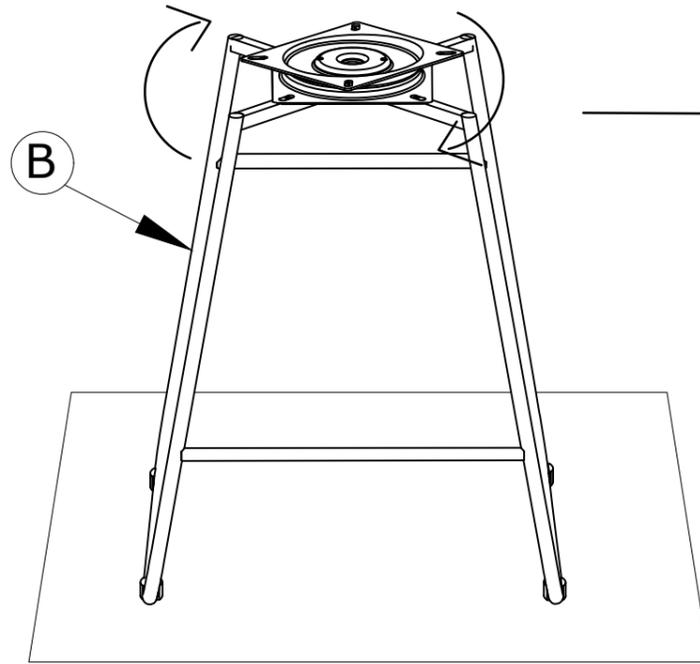


- 1 Put the frame on a flat surface.  
Turn the upper disk **right** by **45°** so that the holes on upper and down disk are aligned and keep holding it...  
Notice **"FRONT"** sticker in step 3!

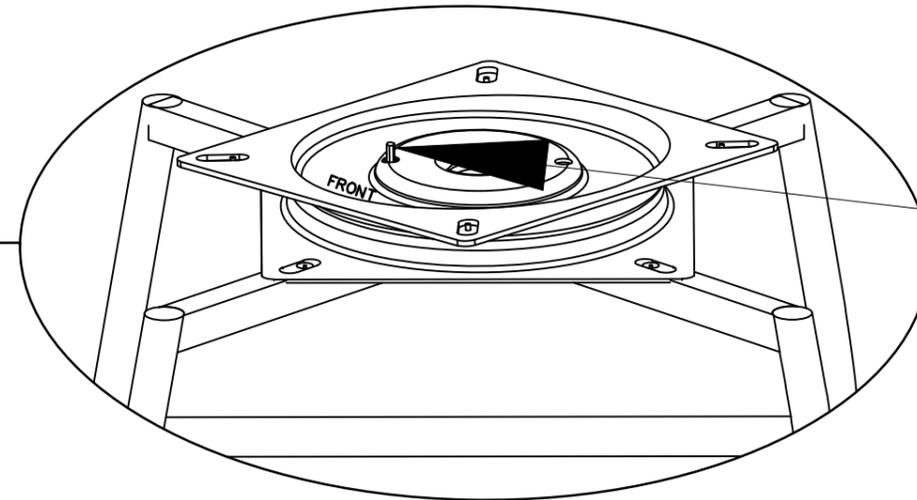


ONE PERSON

- 2 ... and insert 1x L-key (E) through the hole at the downside of the frame plate to block the upper turning disk.




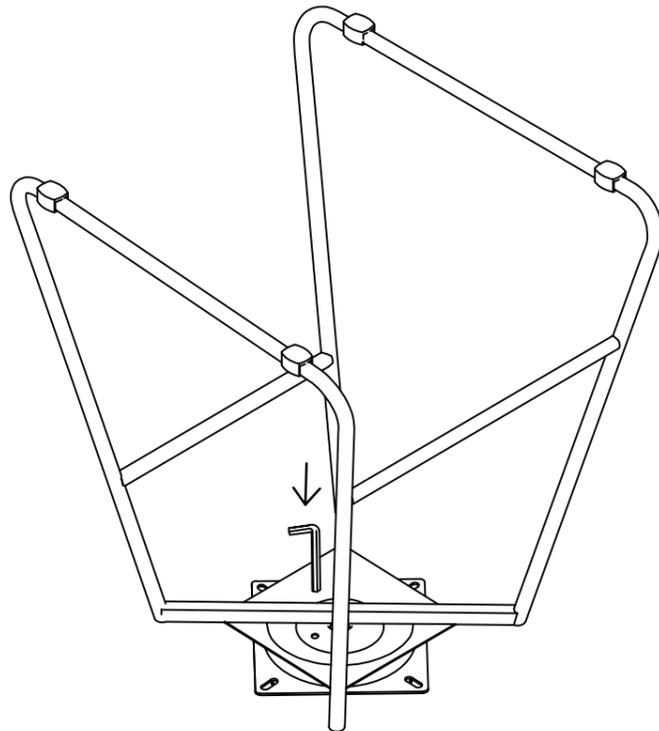


L-key need to come just slightly through.

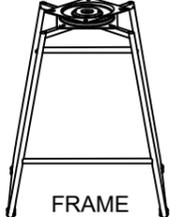NO:	A	B	C	D	E
FITTINGS:					
	SEAT	FRAME	BOLT M6X20MM	WASHER	5MM
QTY:	1	1	4	4	2



3 TURN SEAT UPSIDE DOWN, AND ASSEMBLE FRAME TO SEAT

4 TURN THE FRAME AND REMOVE L-KEY

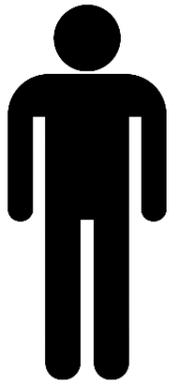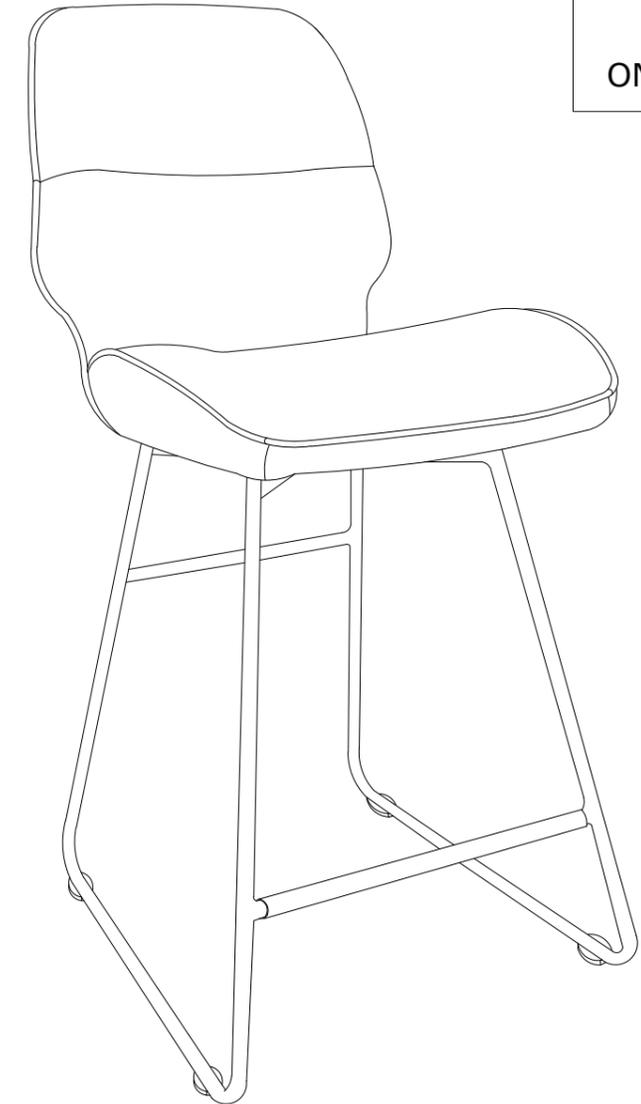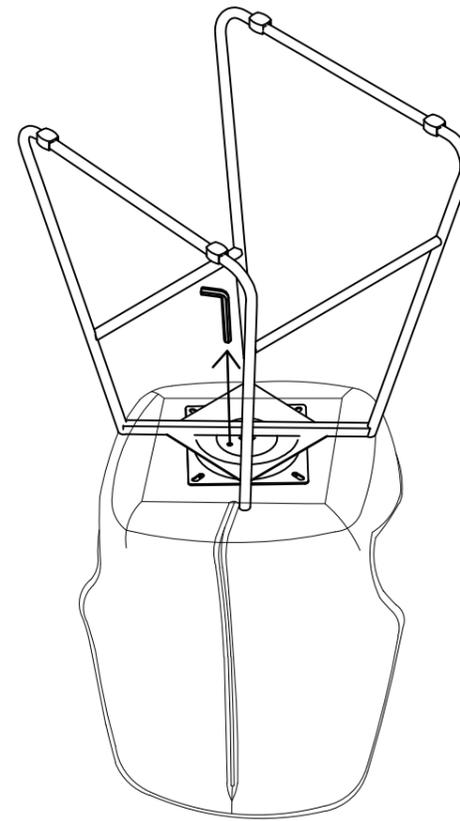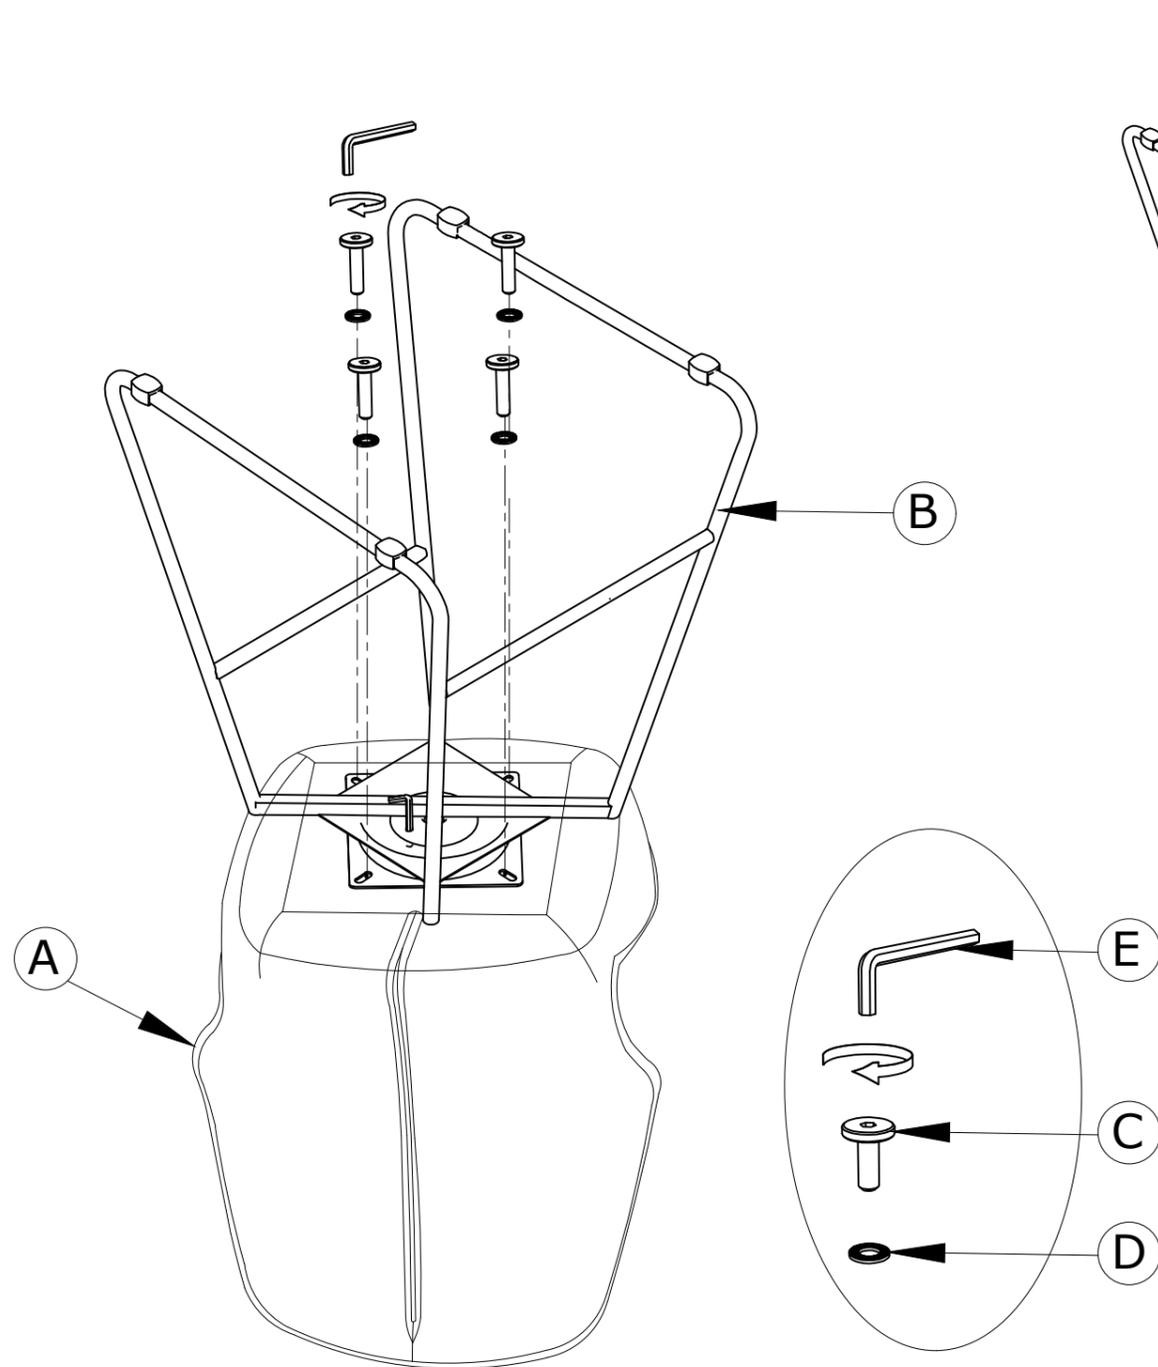

ONE PERSON

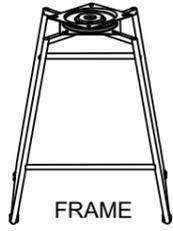

NO:	A	B	C	D	E
FITTINGS:			 BOLT M6X20MM	 WASHER	 5MM
QTY:	1	1	4	4	2