






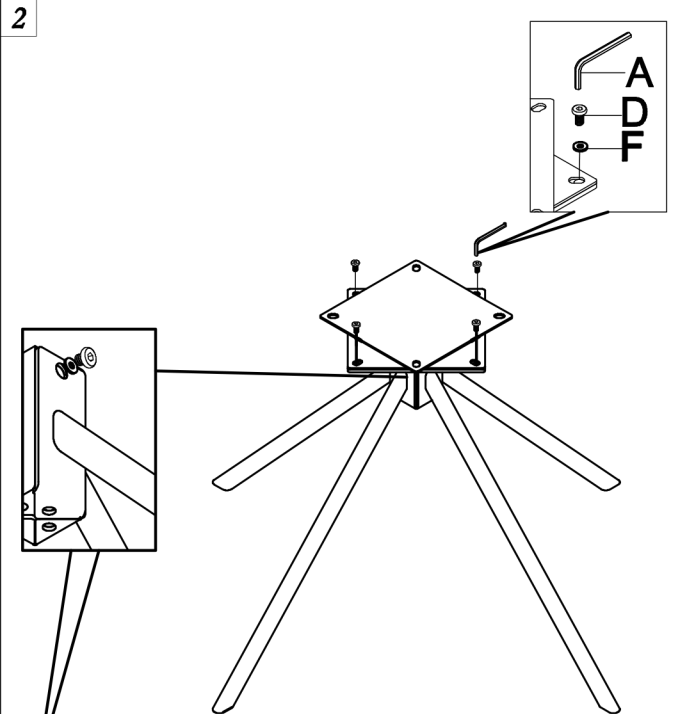
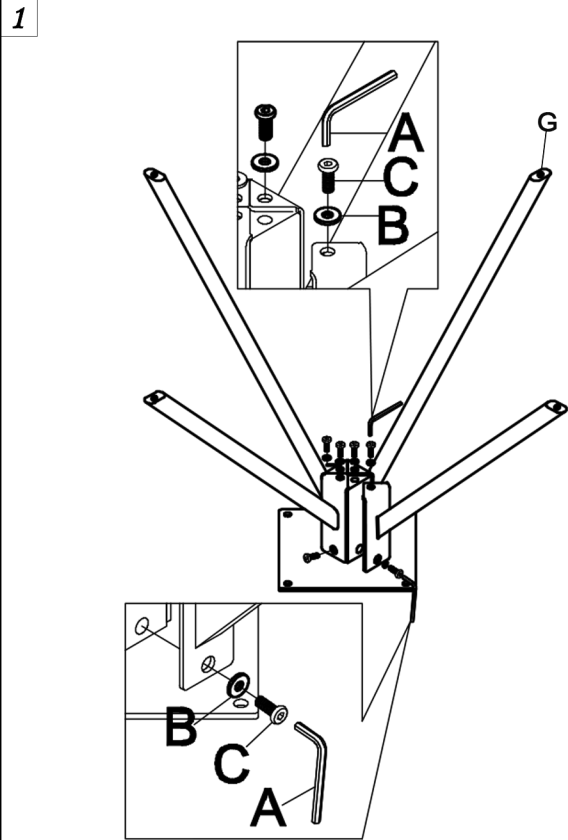


# Assembly Instruction 9230

A		C		E		G	
	1 Pc		M6*16mm 10Pcs		M6*25mm 2Pcs		4Pcs
B		D		F			
	M14 8Pcs		M6*10mm 4Pcs		M16 8Pcs		



## ASSEMBLING STEPS



Make sure the legs are at the same level then tighten the screws

