



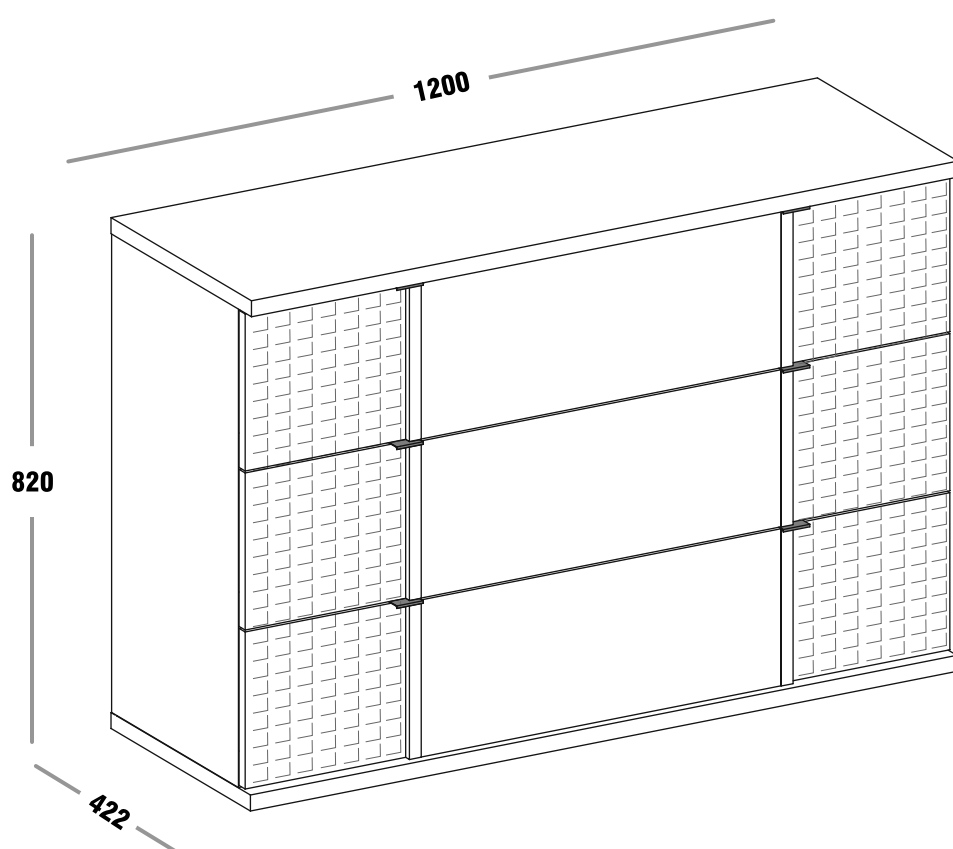

notice de montage
commode **URBINO**
3 tiroirs




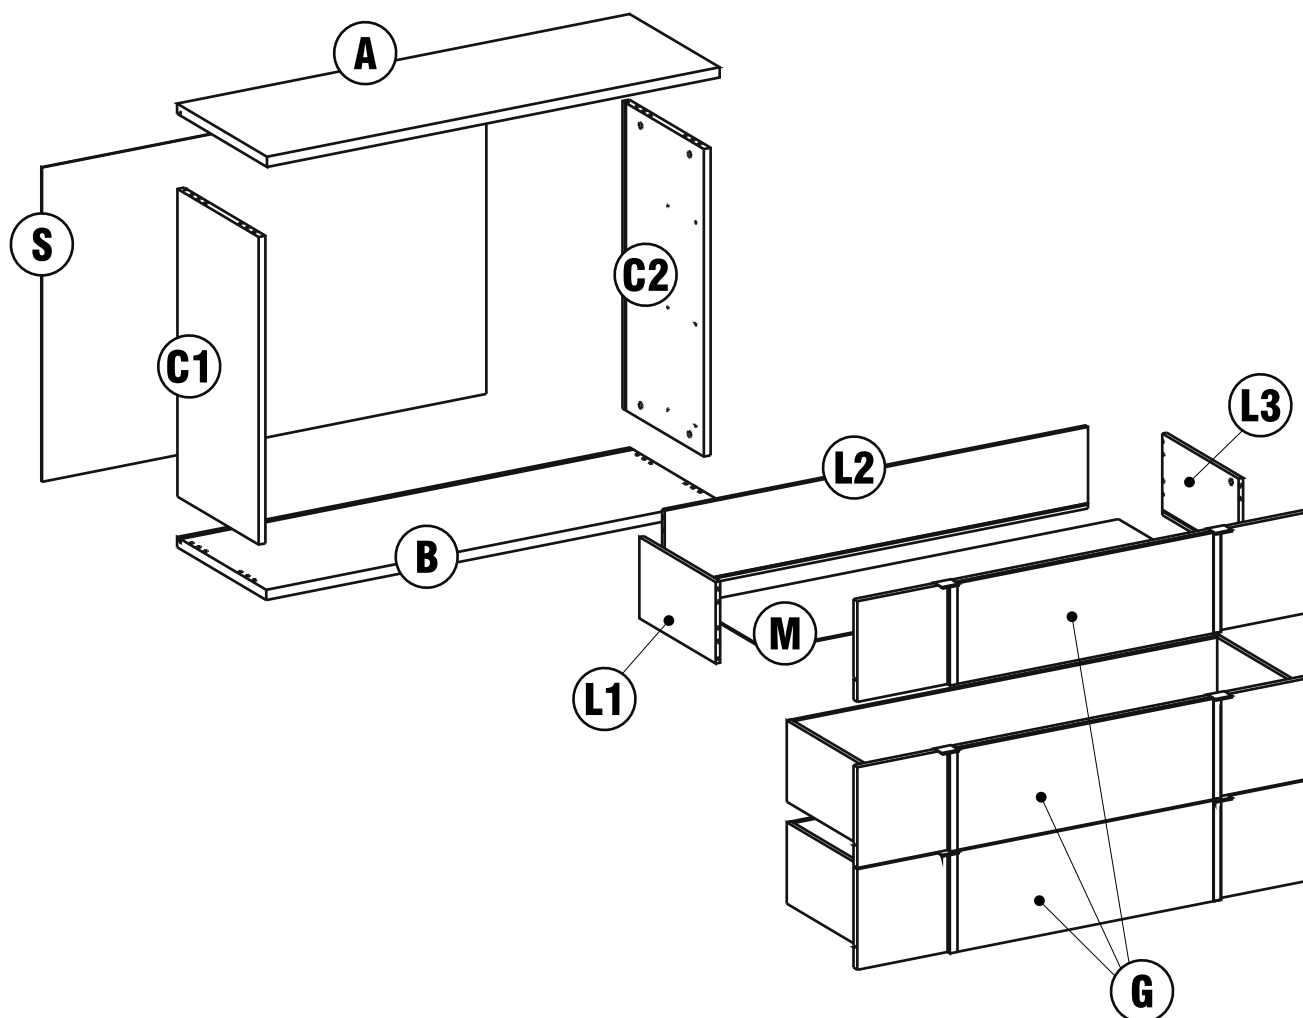


Package total



1 colis

UTILISER UN CHIFON
DOUX LEGEREMENT
HUMIDIFIE' NE PAS
UTILISER DE PRODUITS
DETERGENTS OU
ABRASIFS

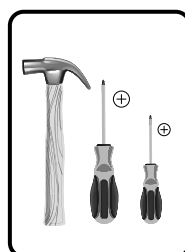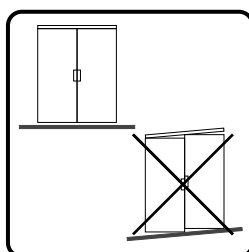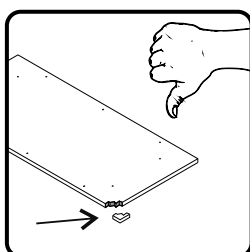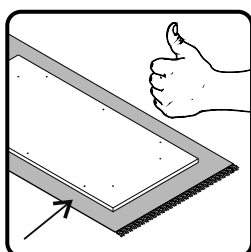

1 x40



2 x18



3,5x16

5 x12



6 x12



7 x5



cod.807500682

3 x8



15

4 x8



cod.807500371

8 x1



cod.814120010

9 x4




10 x4



10

cod.807500373

12 x6

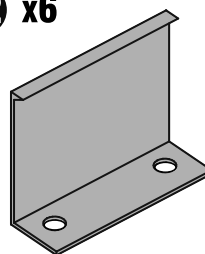

x3


11A x3







11B x3






13 x3




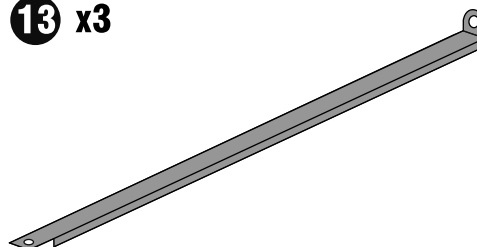


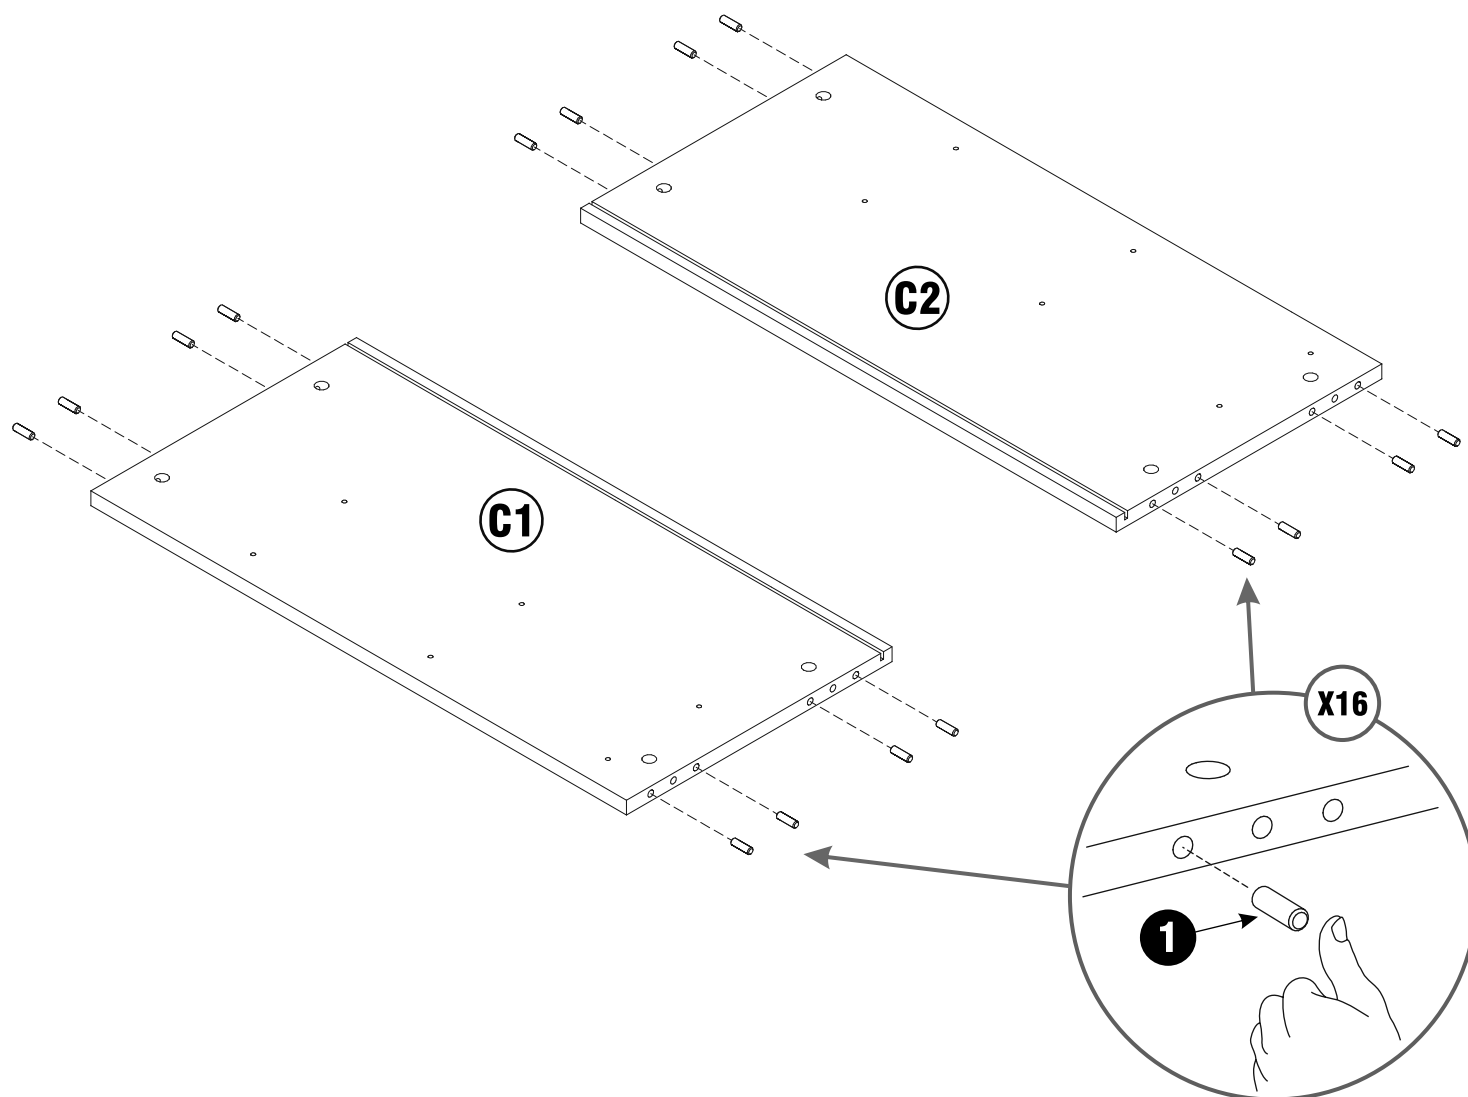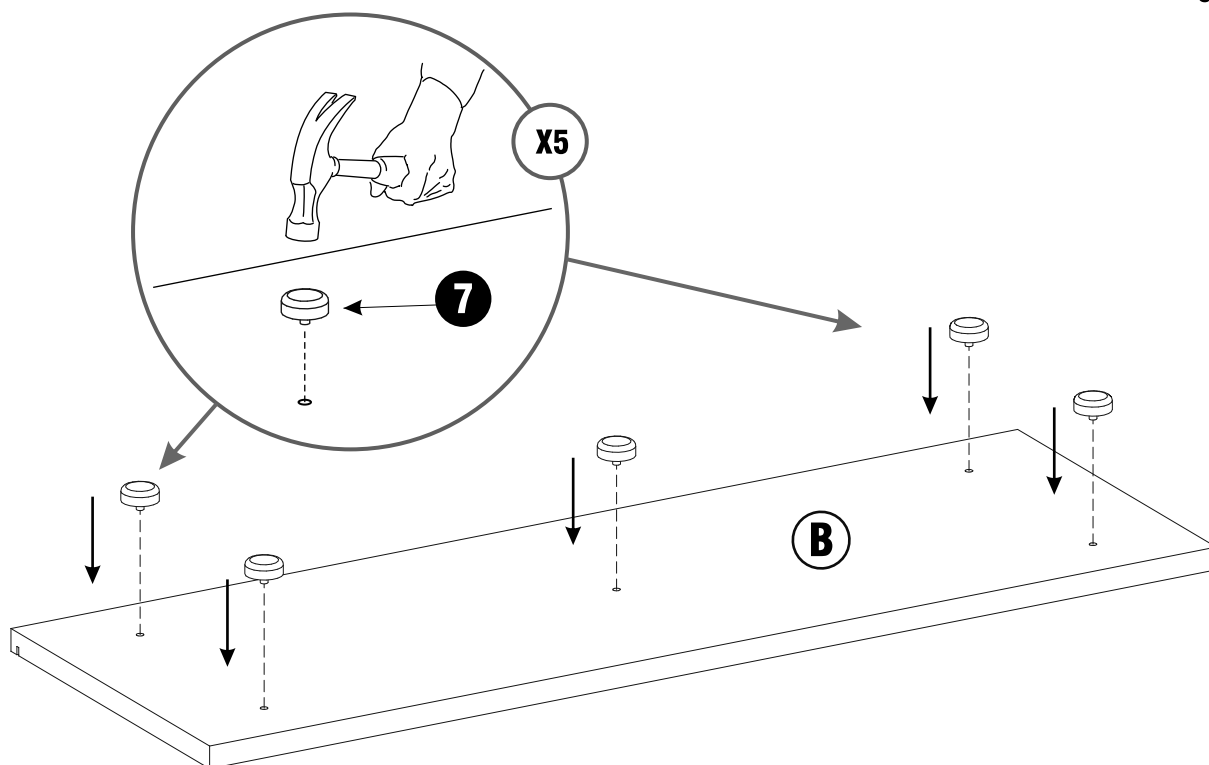


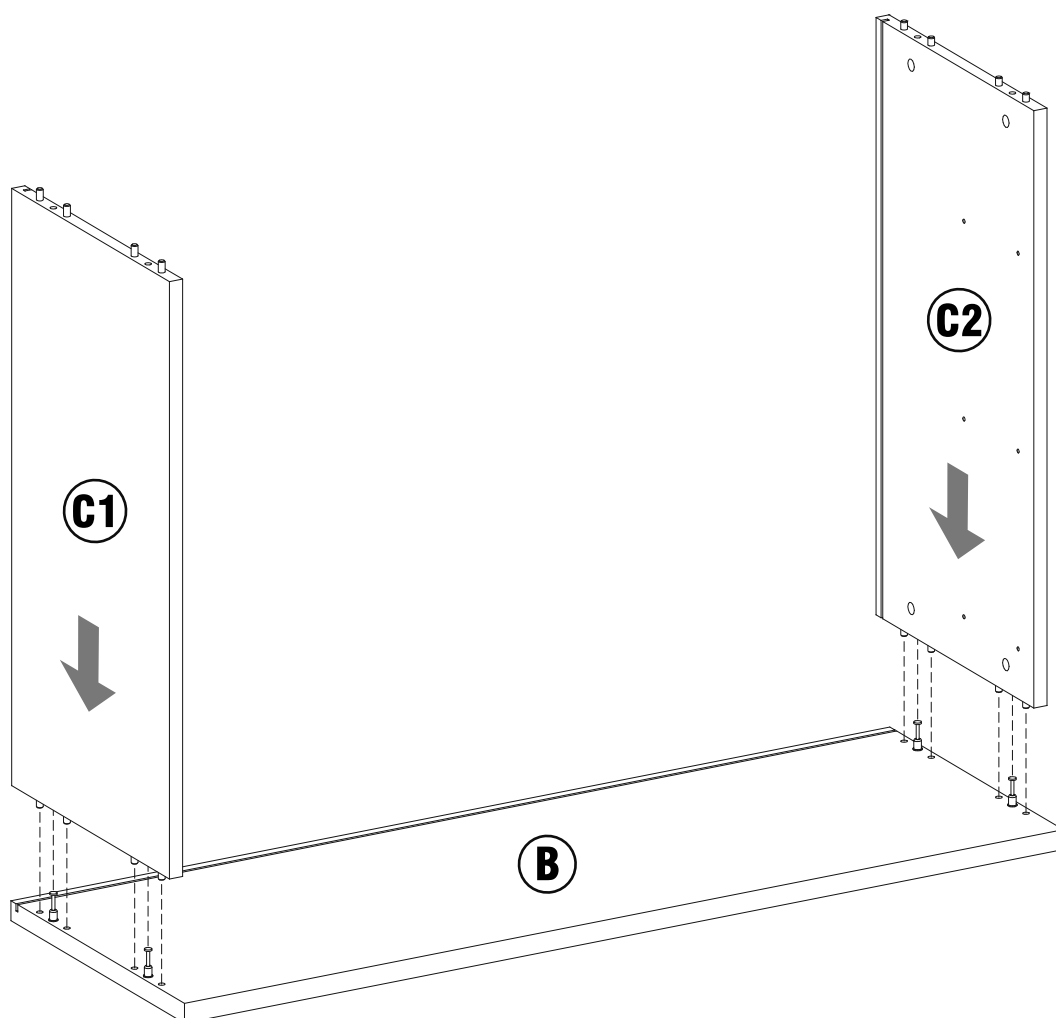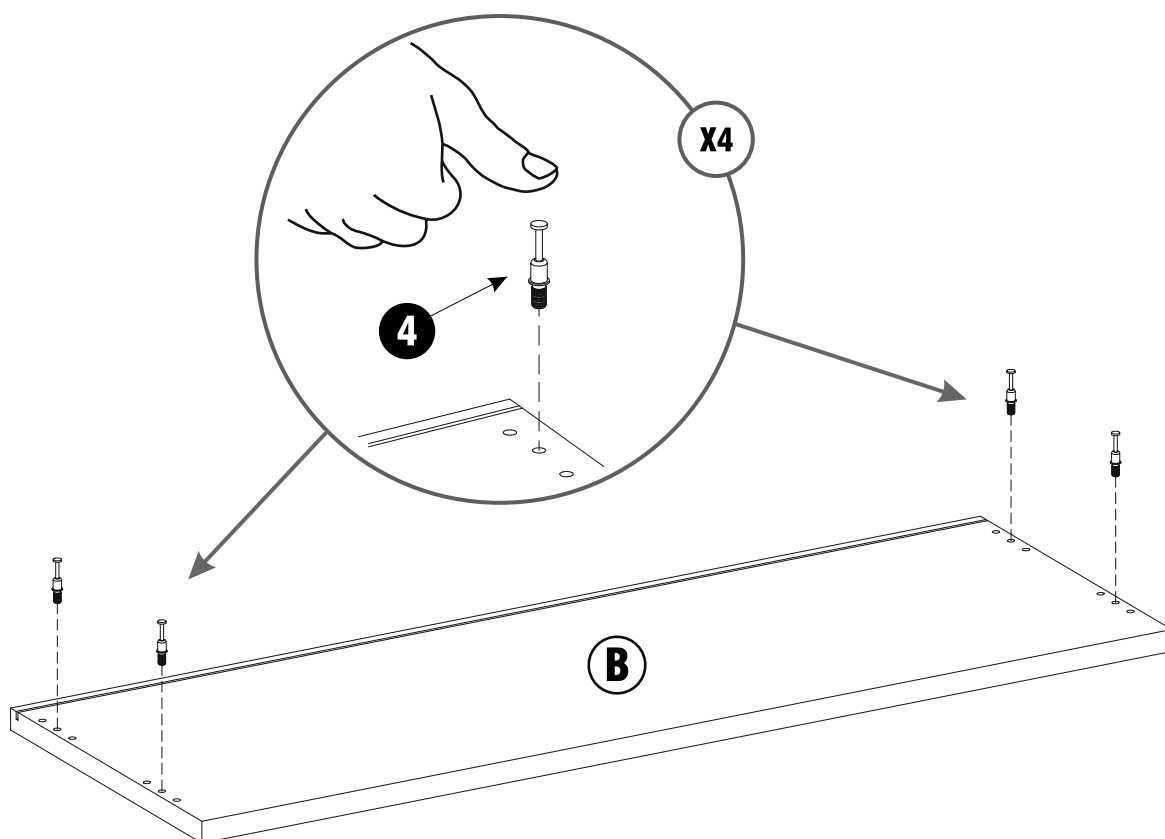


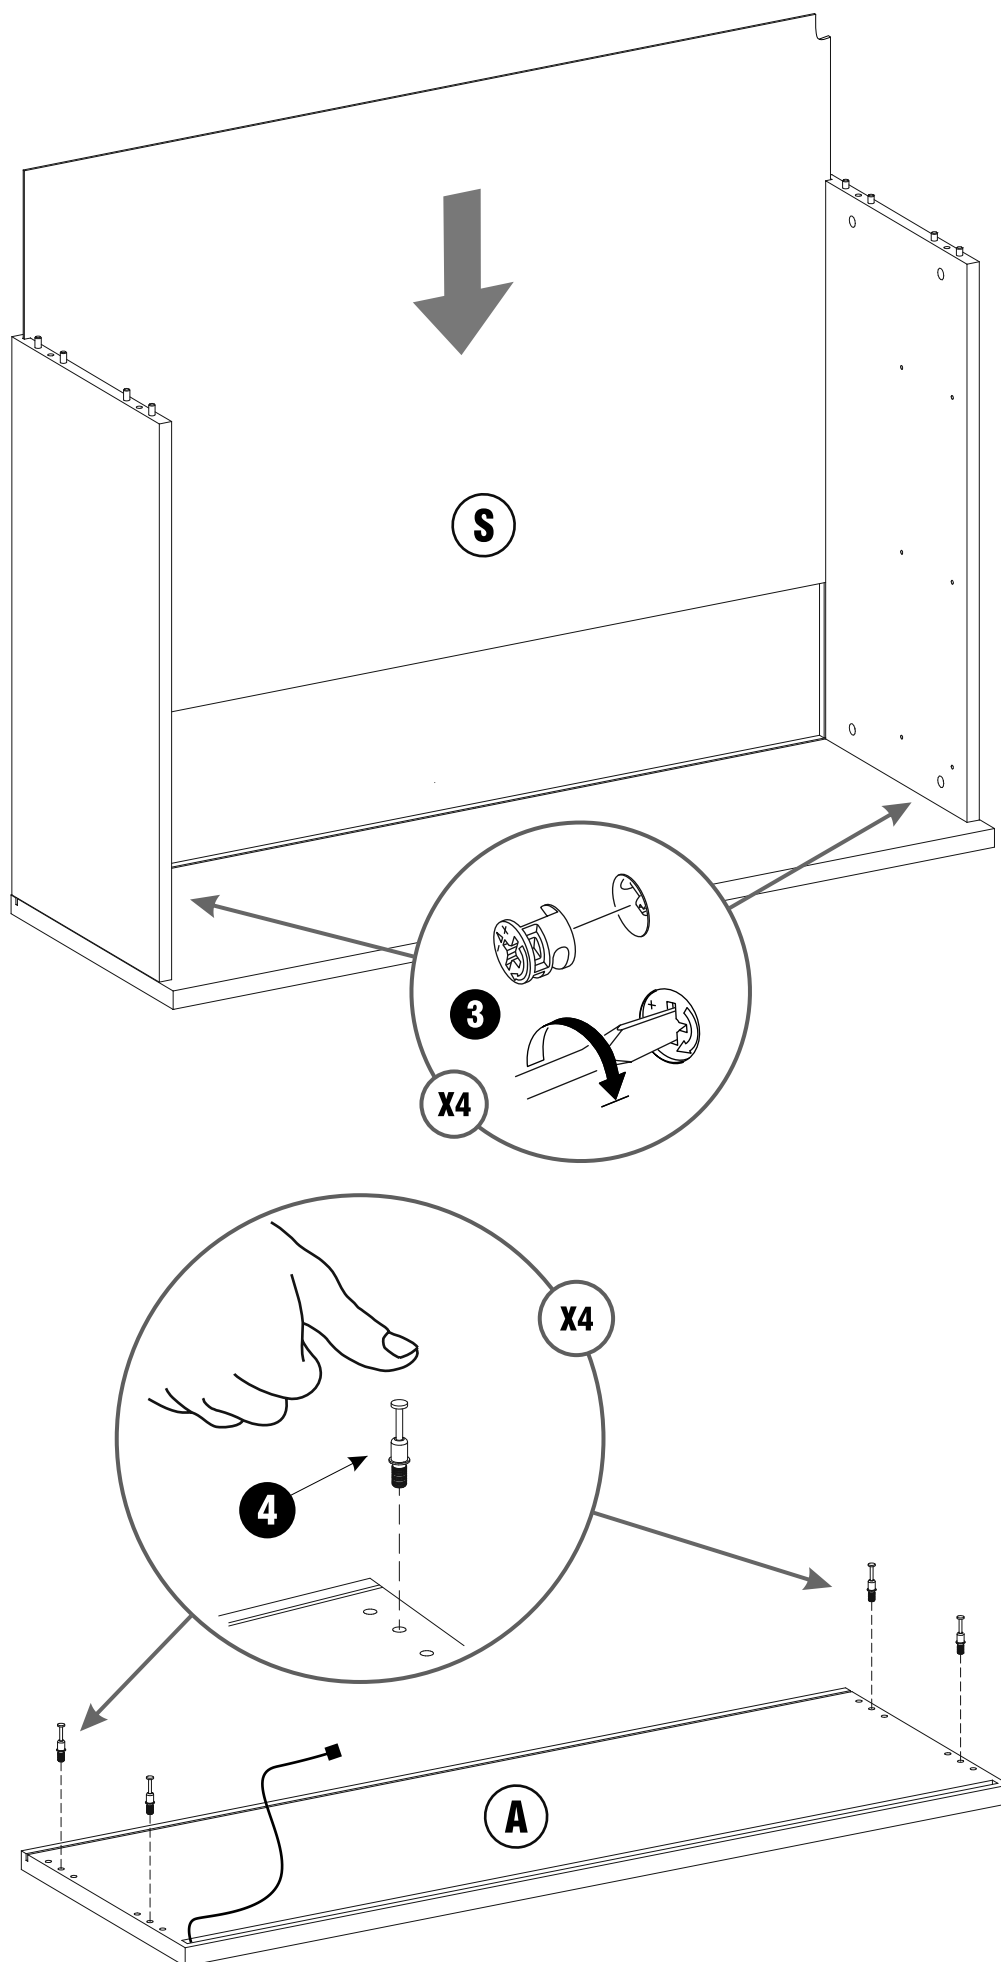


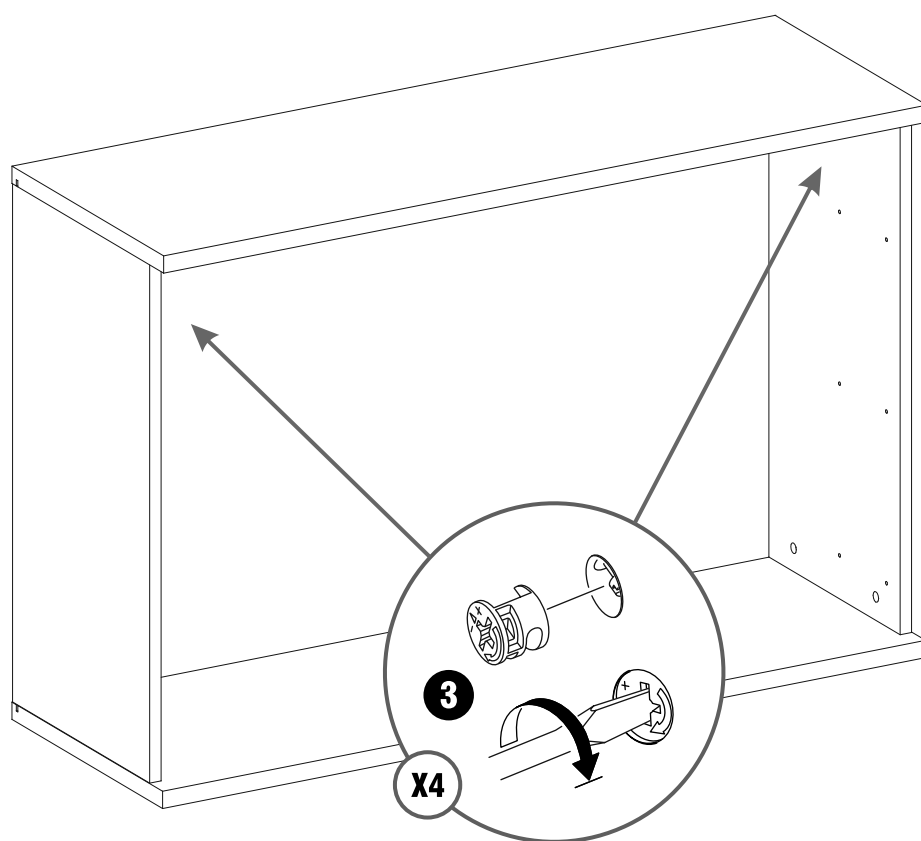
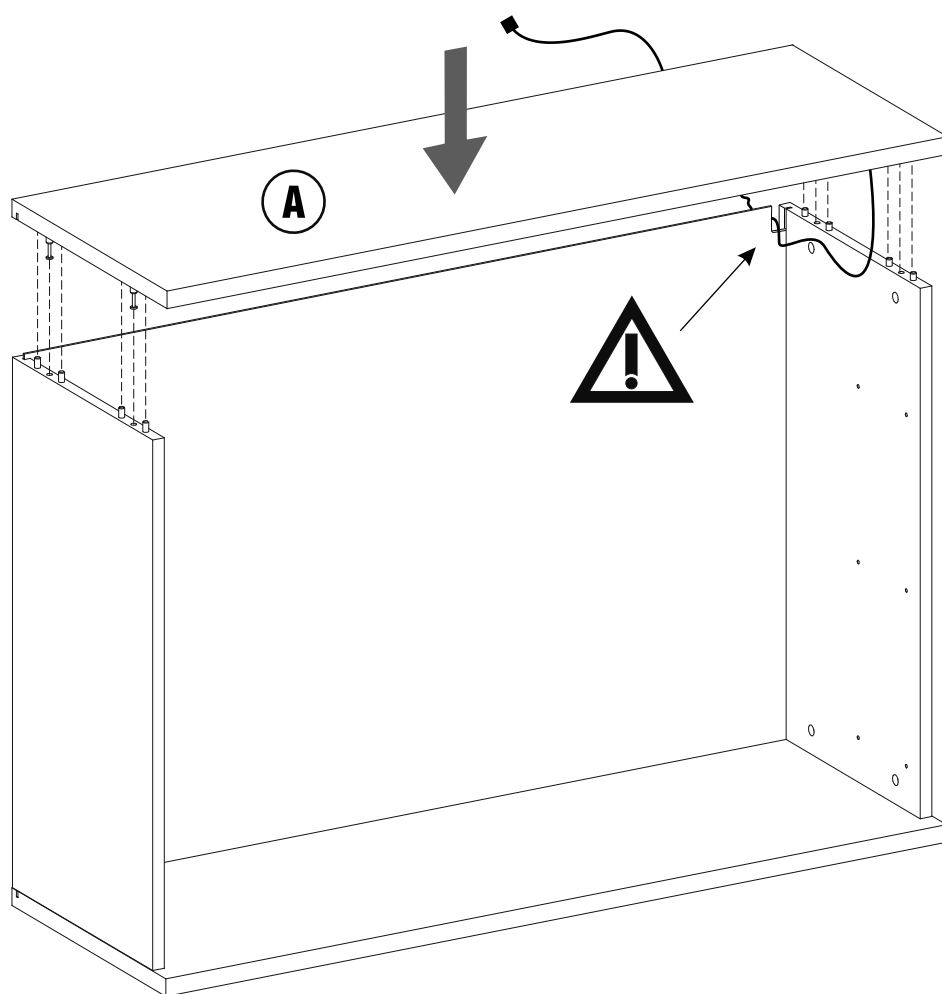


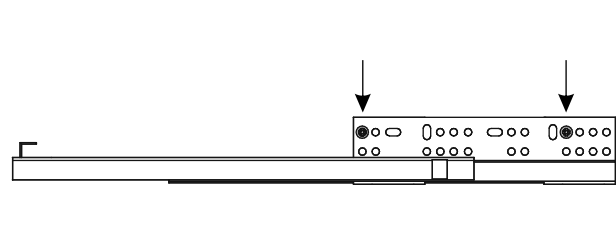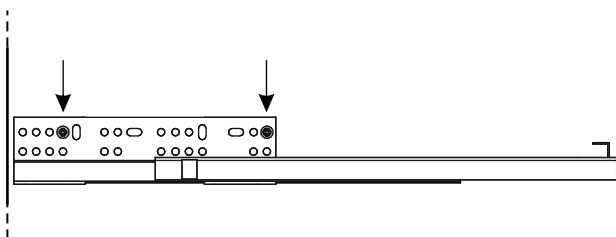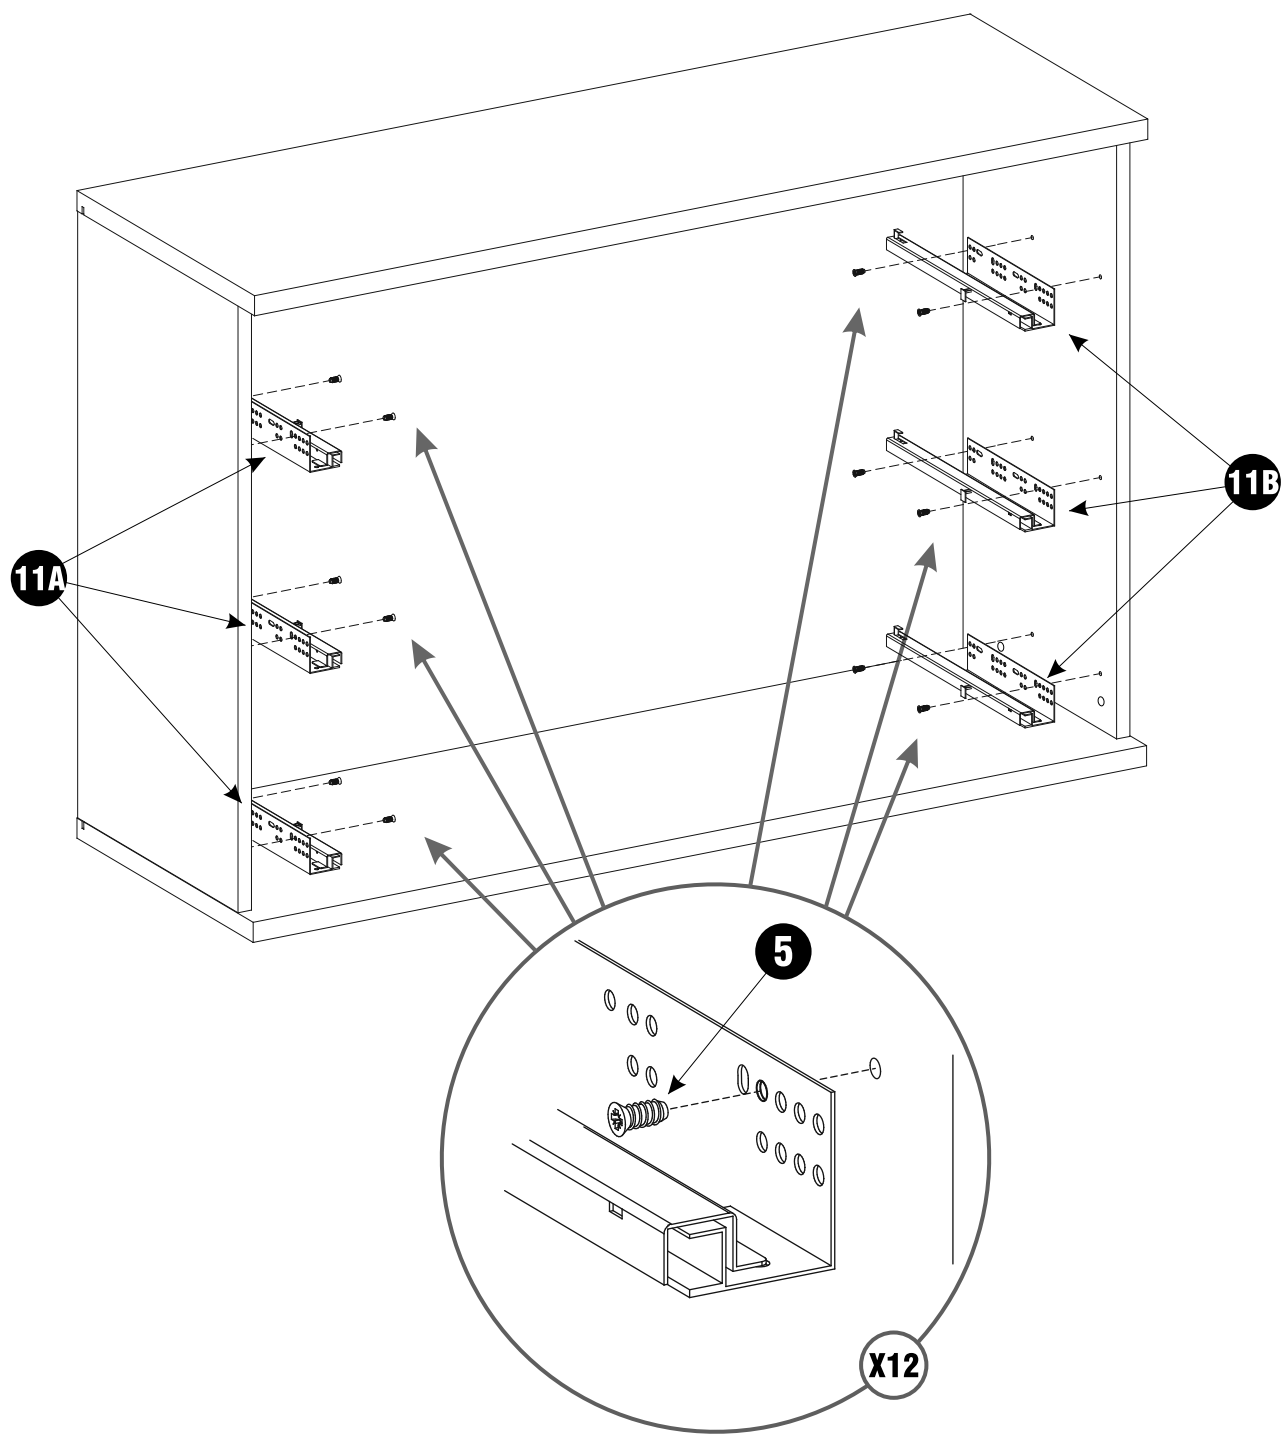


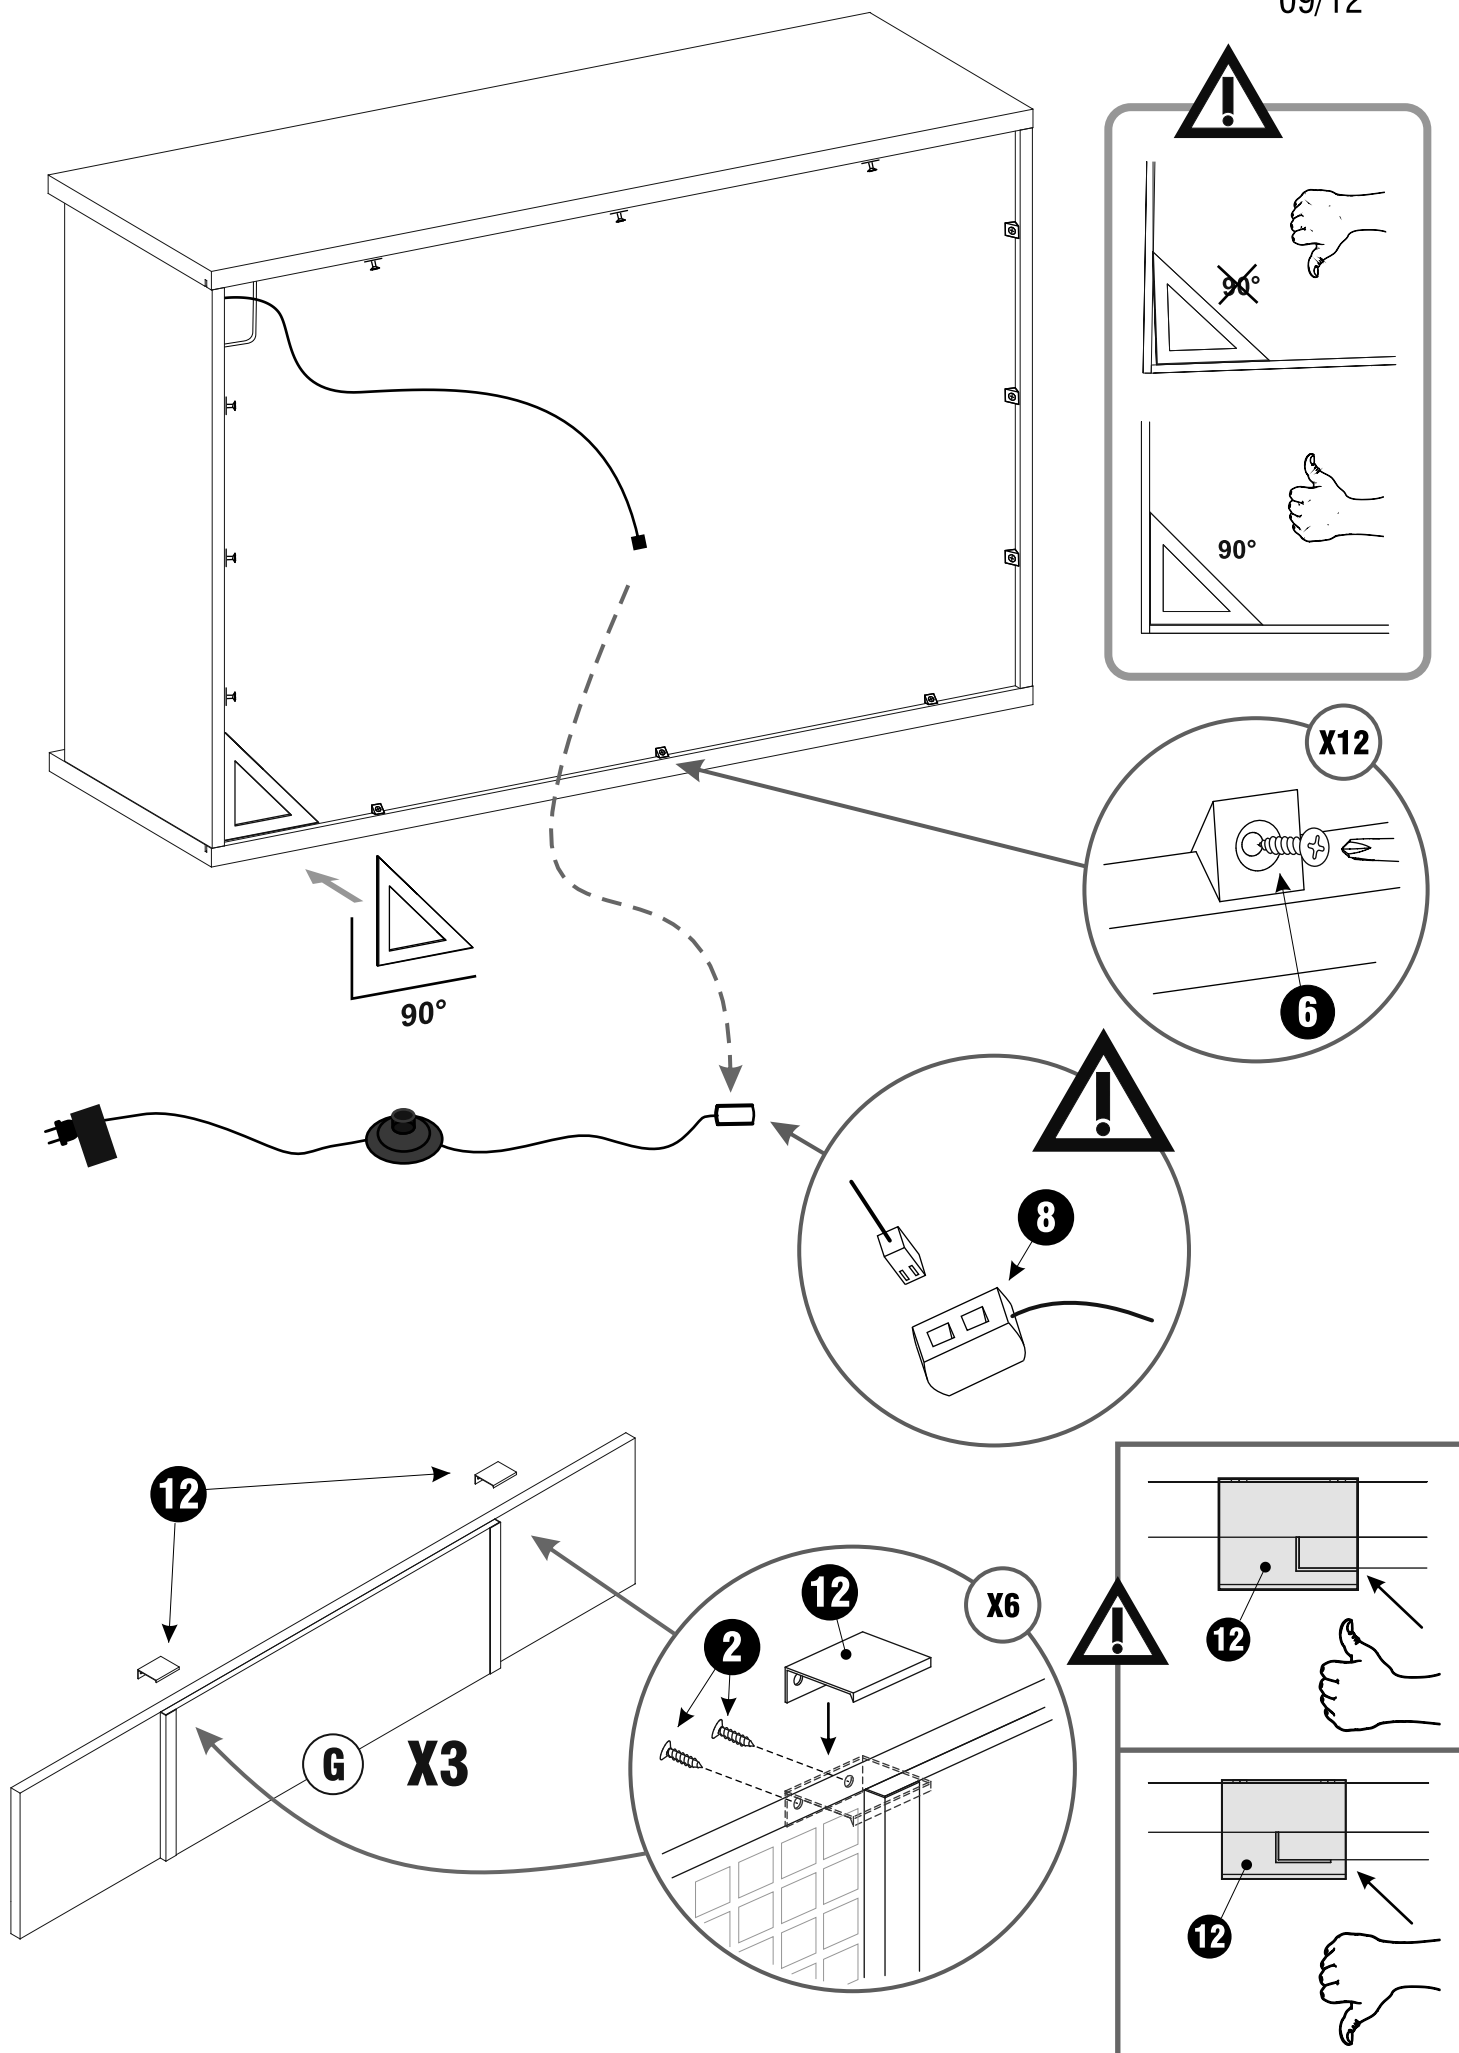


X3

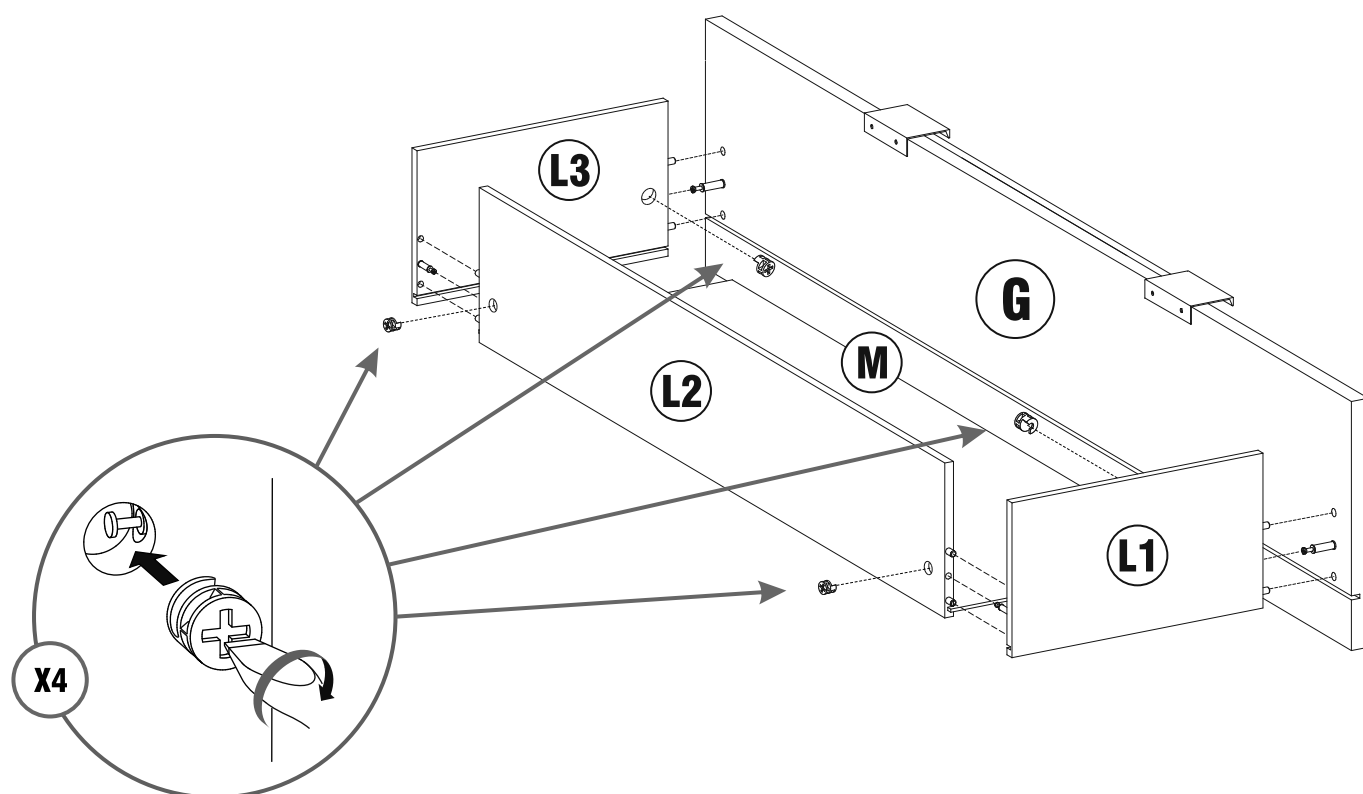
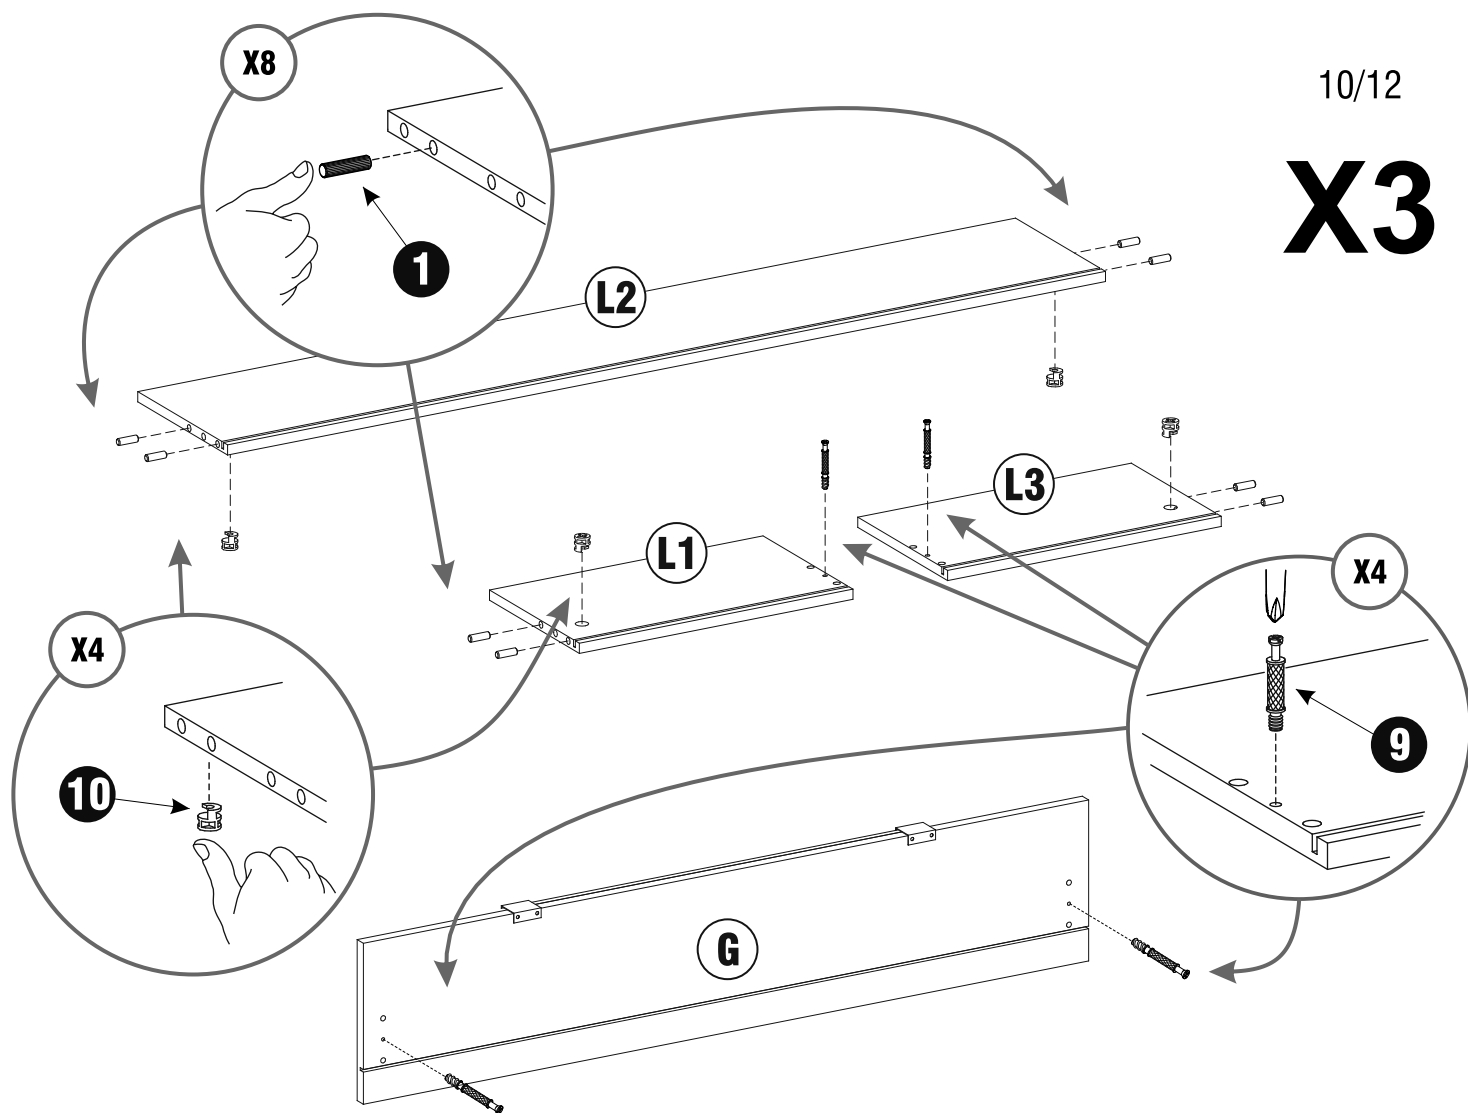


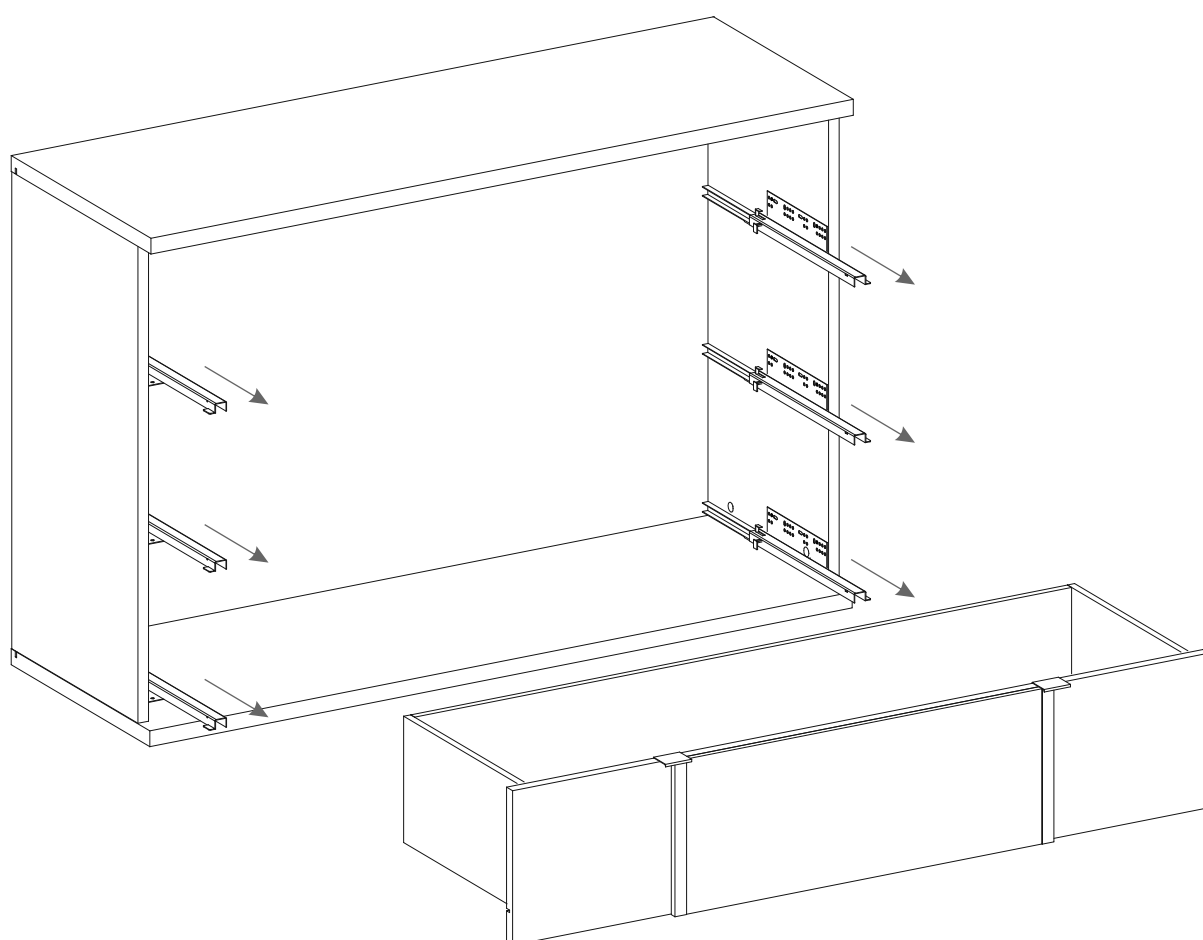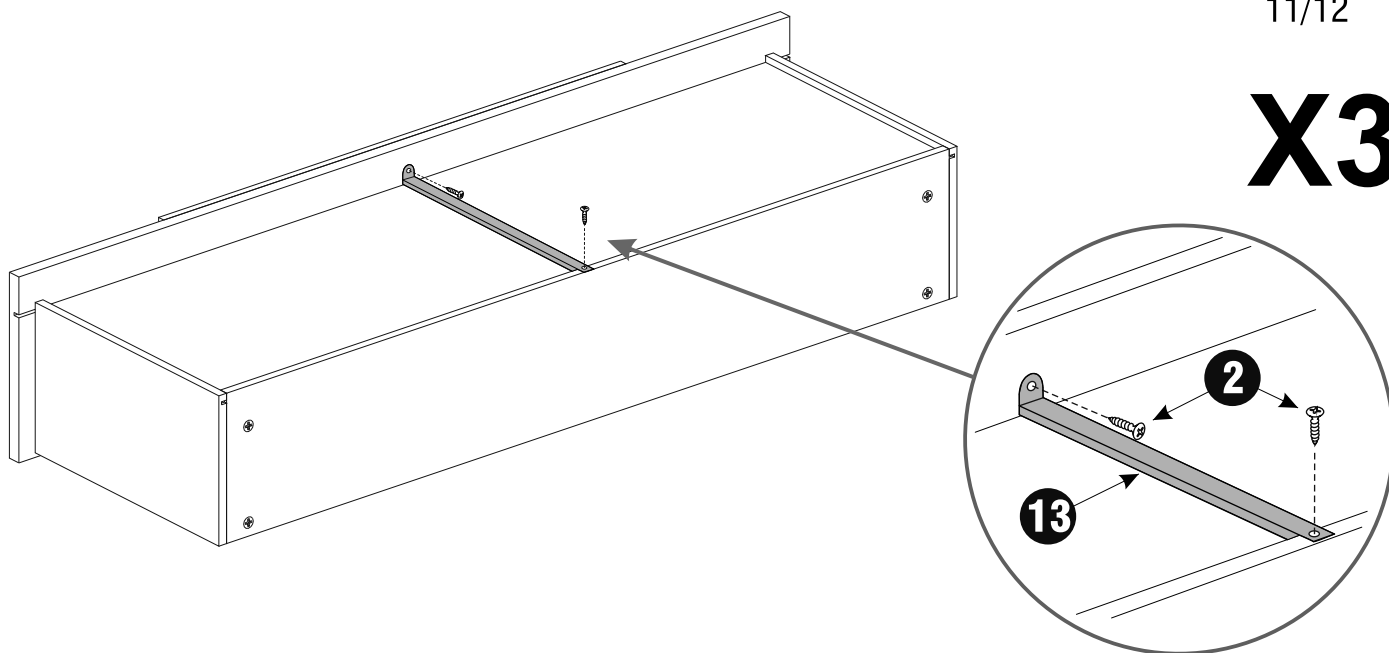X3



1

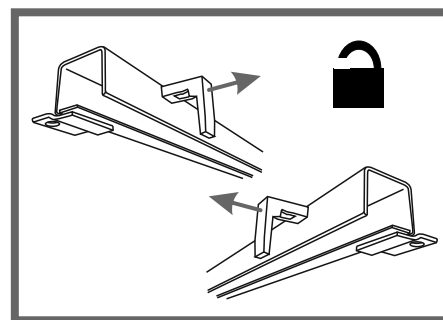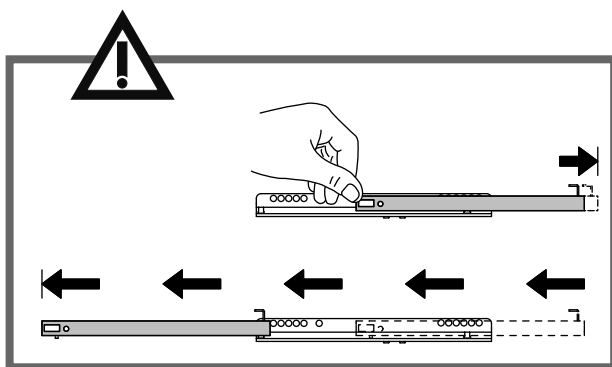


2

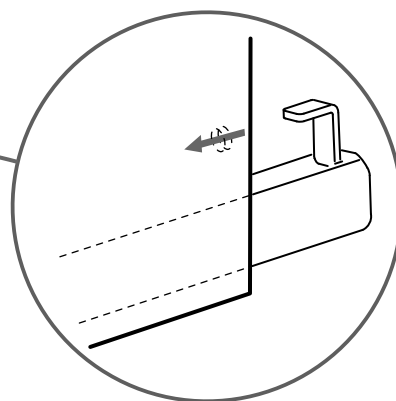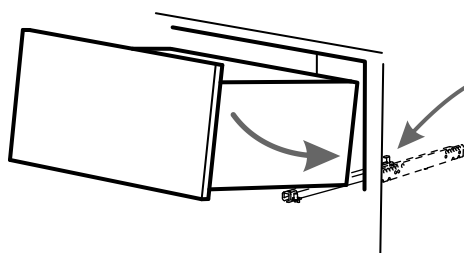


3

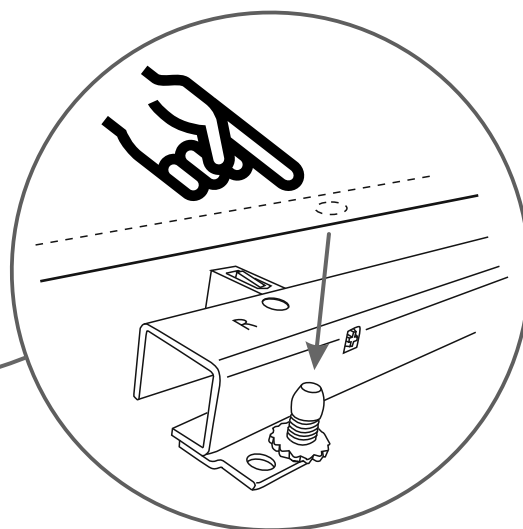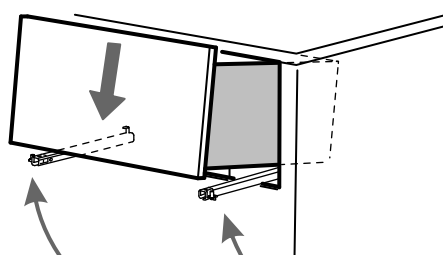

3

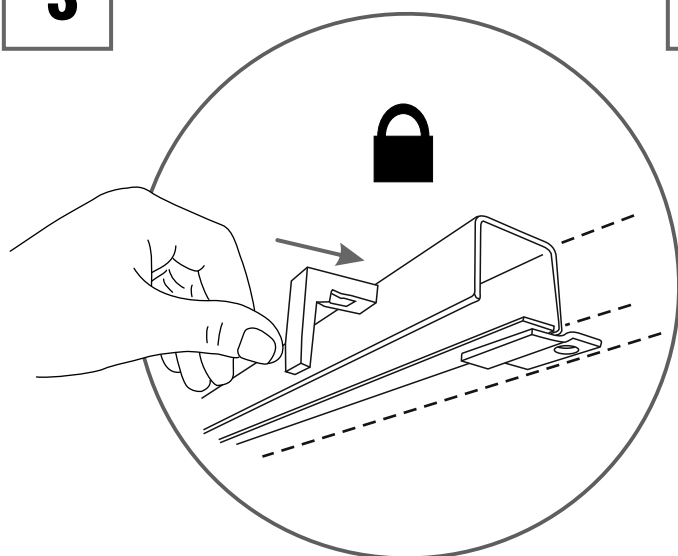

4

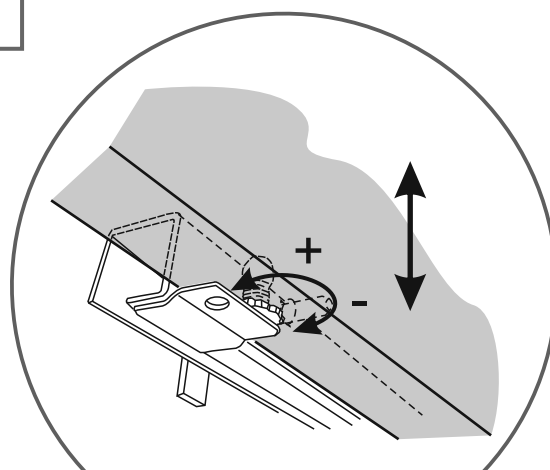

ok

