




montage instructies
instructions de montage
assembly instructions
montage anleitung

HELGA

B14/B16/B18/BQS







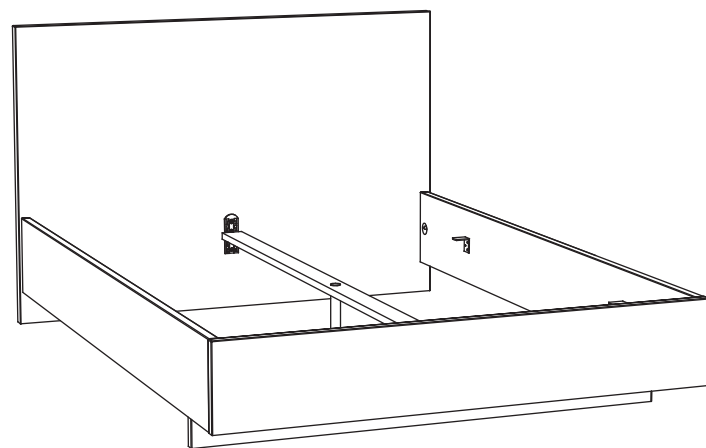


B14 148 x 100 x 207 cm

B16 168 x 100 x 207 cm

B18 188 x 100 x 207 cm

BQS 162 x 100 x 212 cm

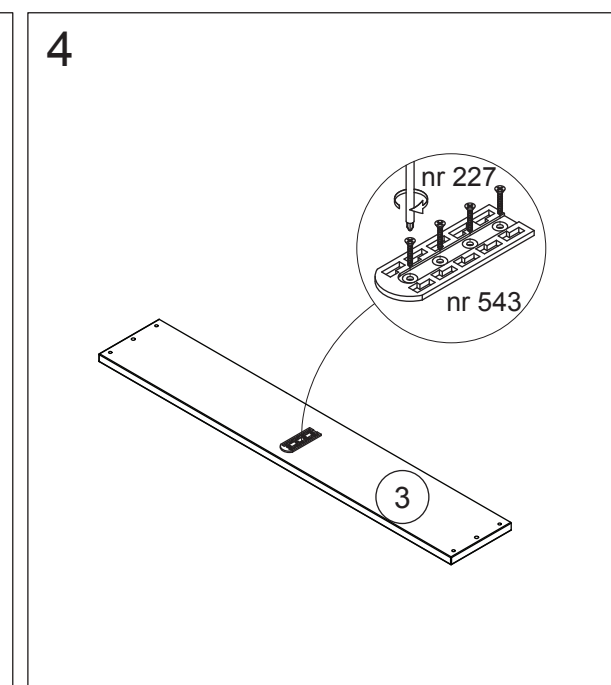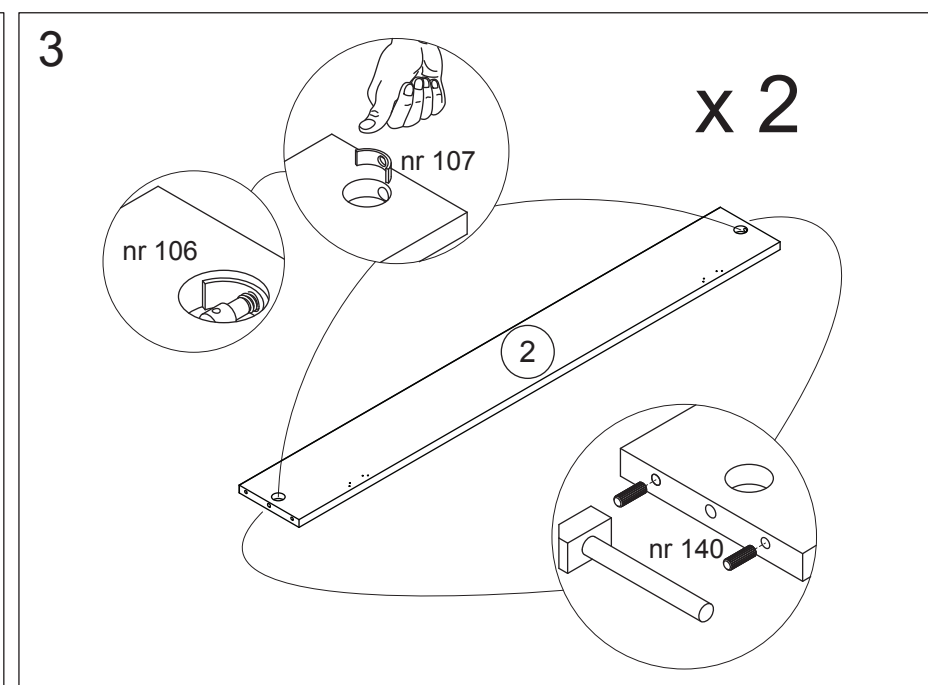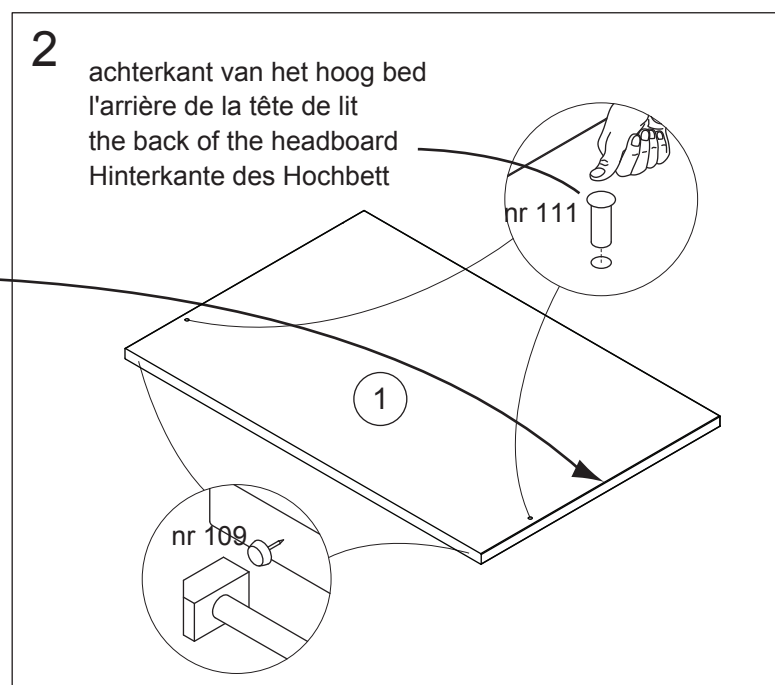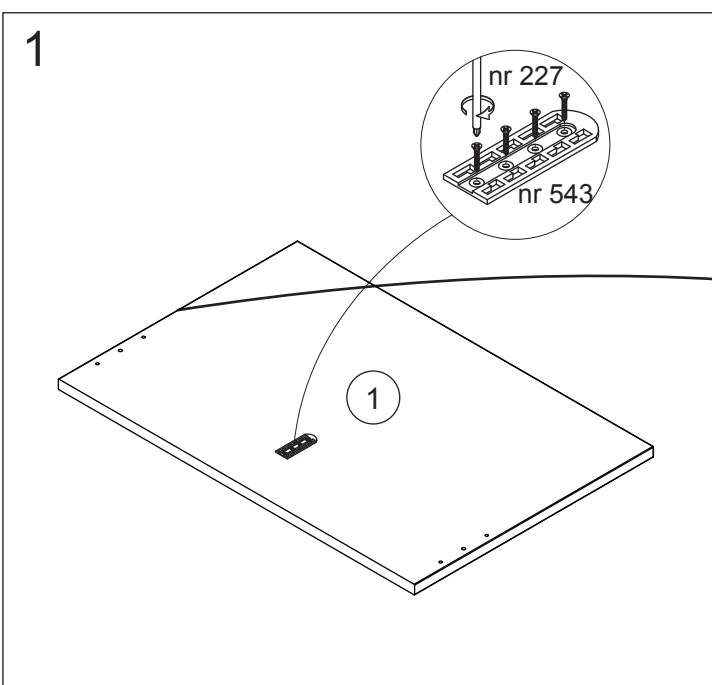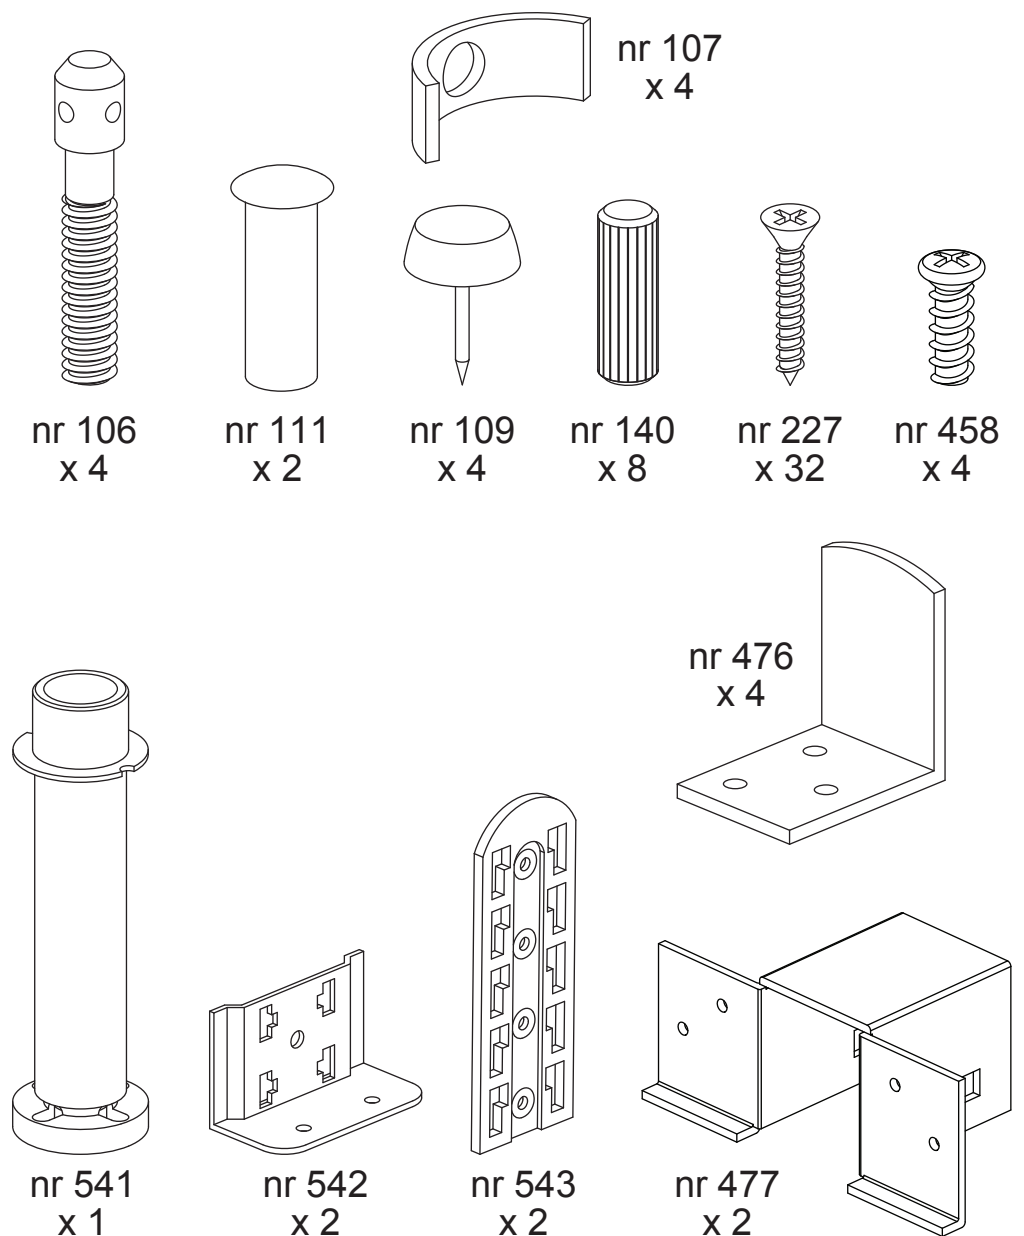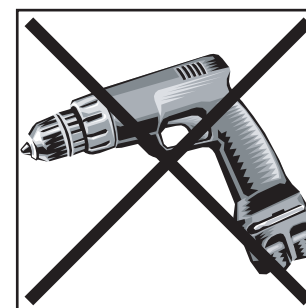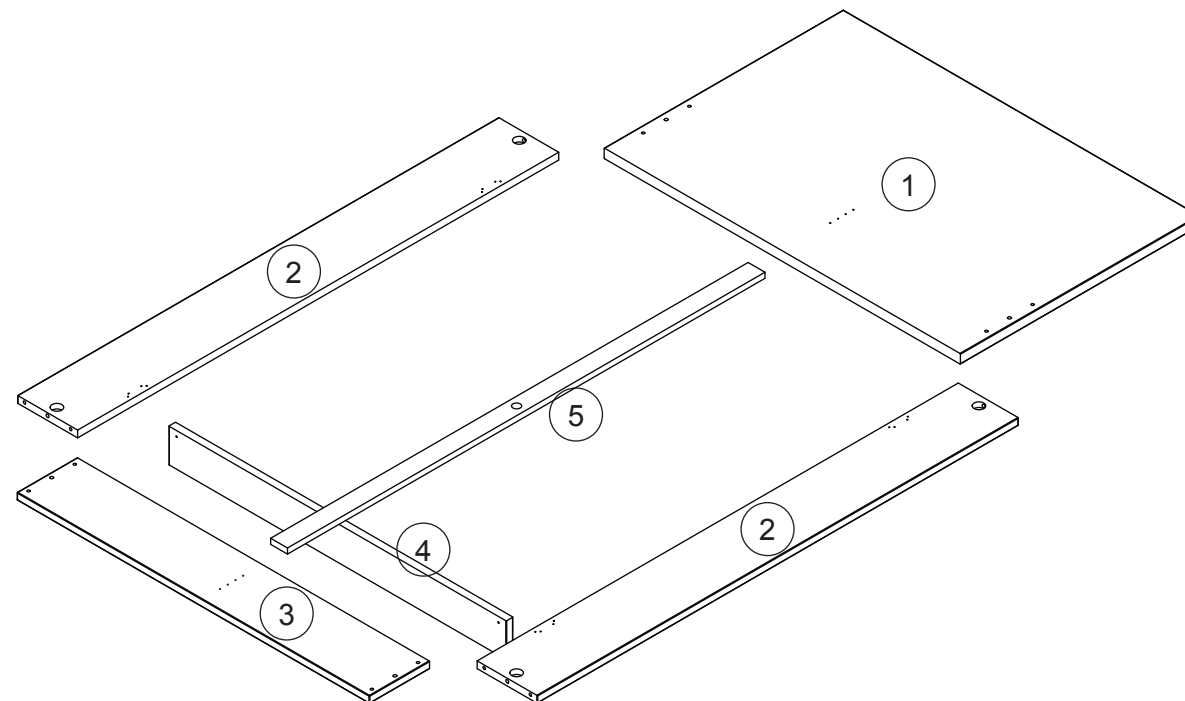

5

Diagram 5 illustrates the fifth step of assembly: attaching the backrest. The backrest panel (1) is shown being moved into position behind the bed frame. It is secured to the frame rails (2) using screws (3). A small rectangular component is also shown being inserted into the backrest panel.

6

nr 477

nr 458

nr 458

nr 477

4

nr 109

7

nr 477

nr 458

nr 458

nr 458

8

Diagram 8 illustrates the step of attaching the headboard to the bed frame. The main view shows the bed frame with the headboard being positioned against it. A circular inset provides a detailed view of the connection point. In this inset, a bolt (labeled 'nr 227') is shown being inserted through a pre-drilled hole in the headboard and secured with a washer and nut. The inset also shows the headboard's internal structure and the frame's side rail. A small black plastic piece is visible on the headboard's surface.

9

nr 541

5

nr 227

nr 542

10

Diagram 10 illustrates the assembly of the bed base. The main view shows a 3D perspective of the bed frame, including the side rails, end rails, and a central support leg (5). Arrows labeled 'H' indicate the height of the frame. A circular inset provides a detailed view of the corner joint, showing the use of screws nr 476 and nr 227. The inset also indicates a minimum height of 30 mm and a height H.