

Montageanleitung

Assembly instructions

Instructions de montage

Instrucciones de montaje

Istruzioni per il montaggio

Инструкция для монтажа

Instrukcja montażu

Montážní návod

Návod na montáž

Szerelési utasítás

Инструкция за монтаж

Kurulum Talimatları


Navodilo za montažo

Montagehandleiding

A s e n n u s o h j e


Upute o montaži

Beschläge / fittings / Ferrures pour meubles / Herrajes / Guarnizioni / Железные оправы для мебели / Okucia / Kování / Kovanie / Vasalások / обков / Parçaları / okovje / Hang- en sluitwerk / helat / Obloge

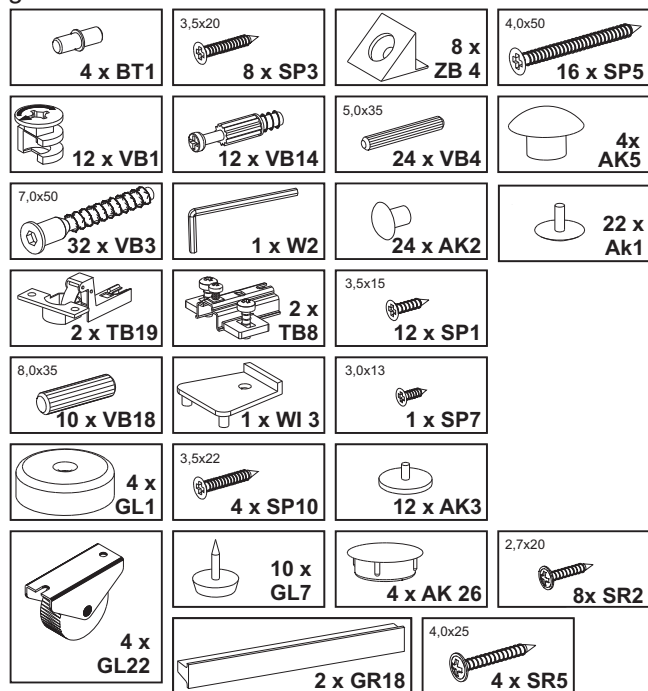





Sie benötigen:
You need:
Vous avez besoin de:
Necesita:
Le servono:
Вам нужно:
Potrebujete:
Tarvitset:



Potrzebne są:
Potřebujete:
Potrebujete:
Szükséges eszközök:
На Вас са Ви нужны:
Ihtiyaciniz:
U hebt nodig:
Trebate:

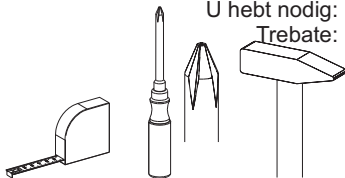

CARLO


Art.-Nr.810-001

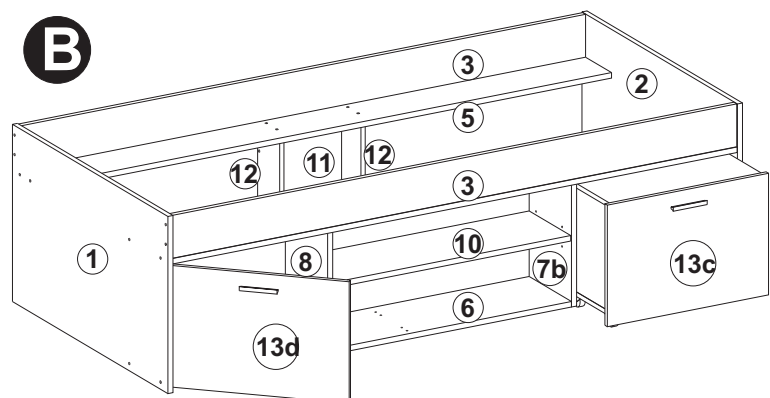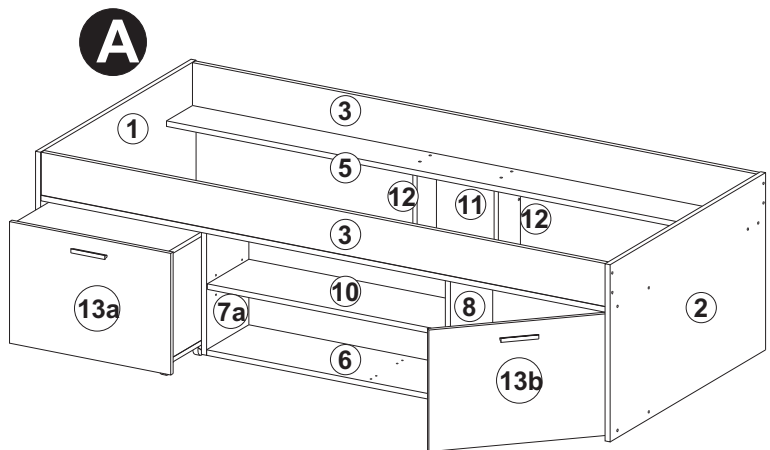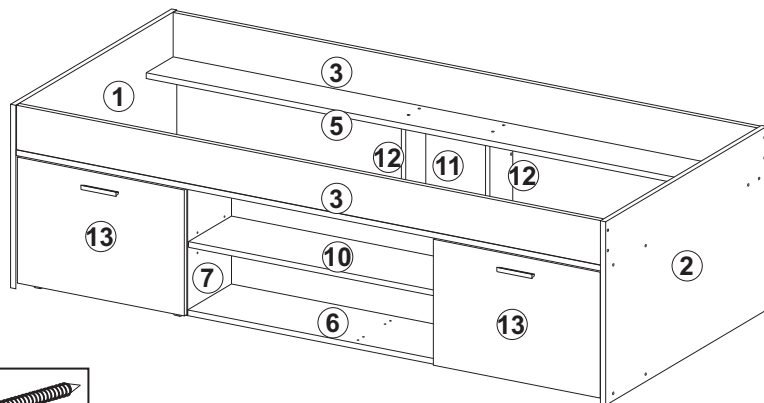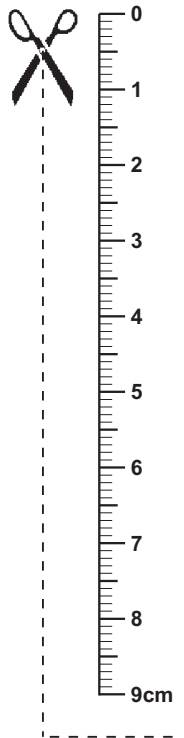

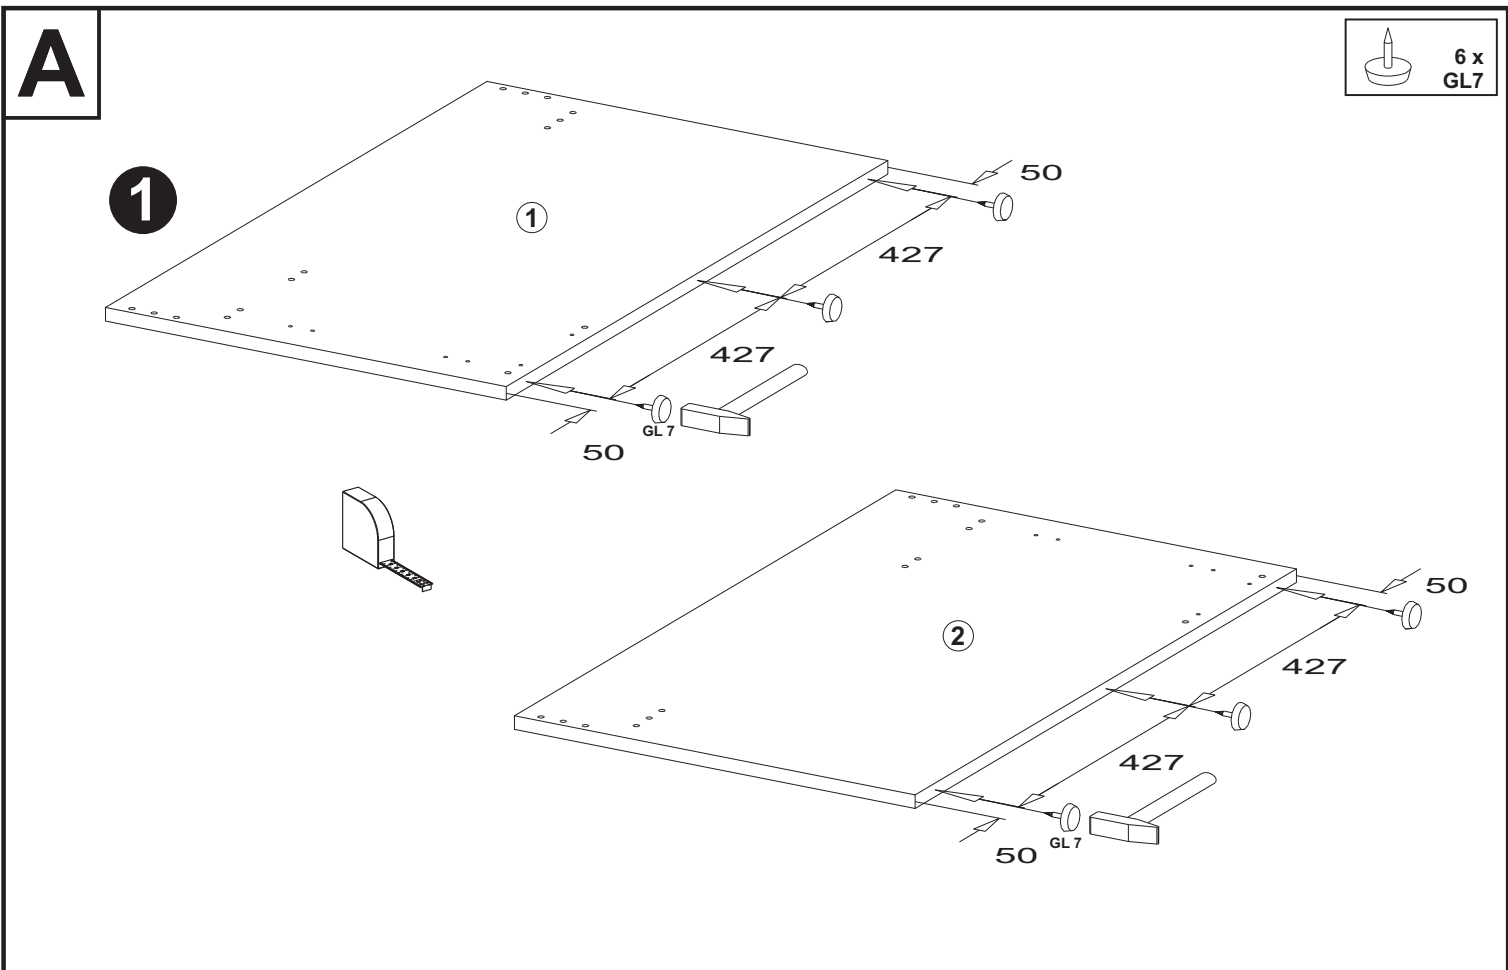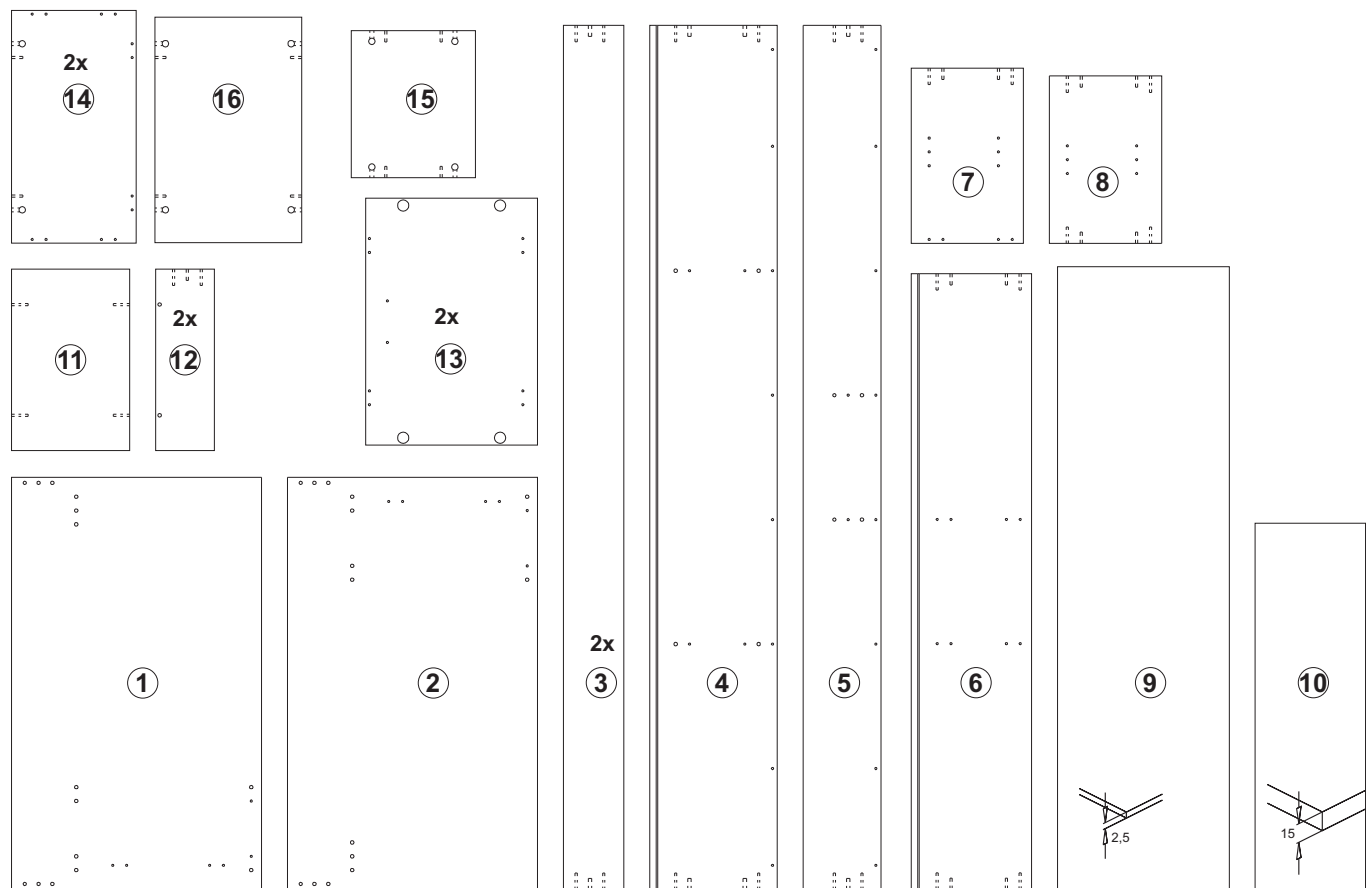

B

- **4 x GL7**
- **6 x VB4**
- **10 x VB18**



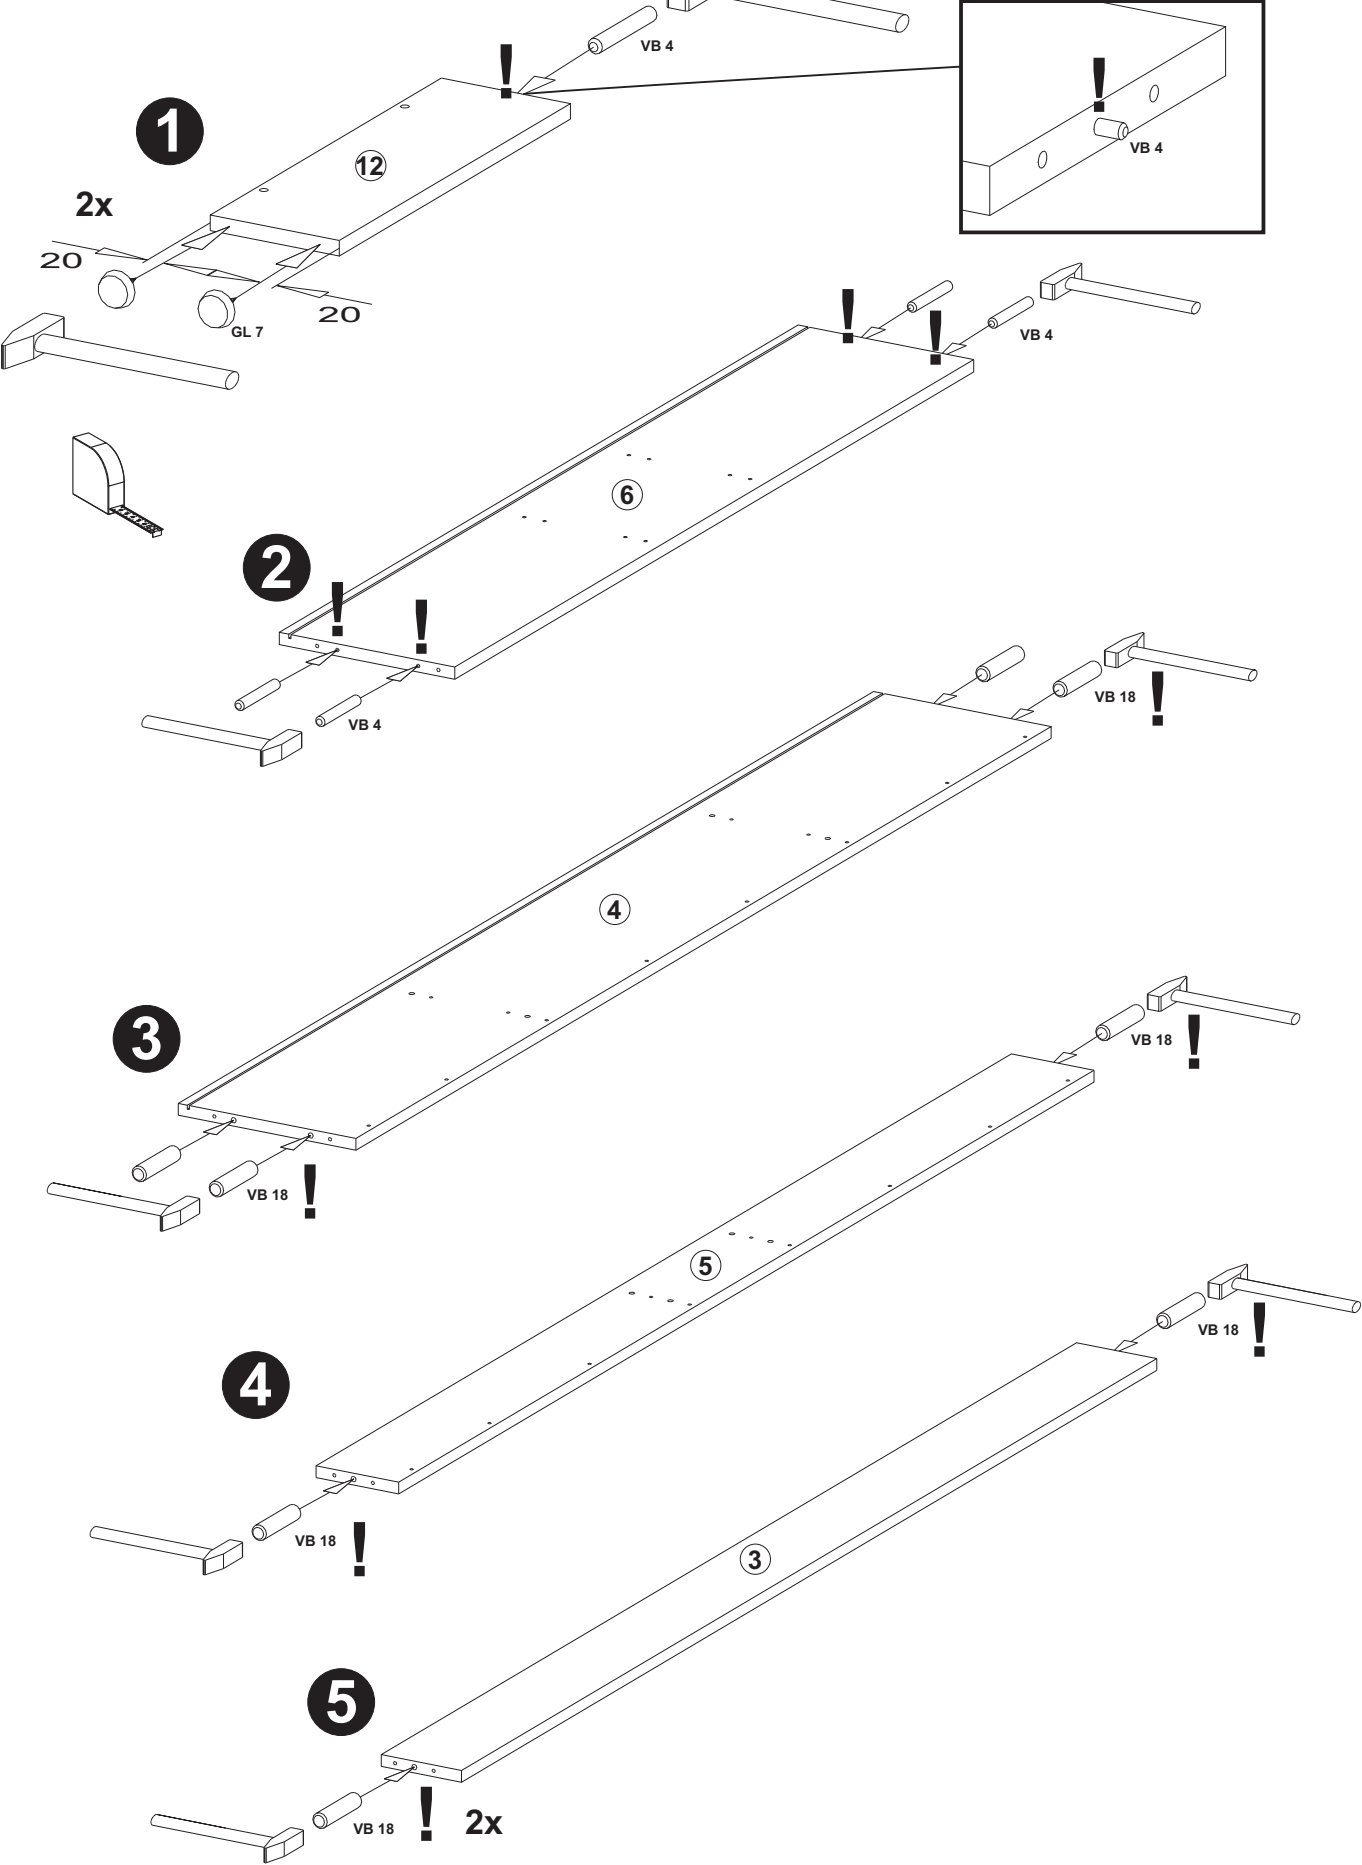


C

2 x BT1

5,0x35
12 x VB4

8 x VB1

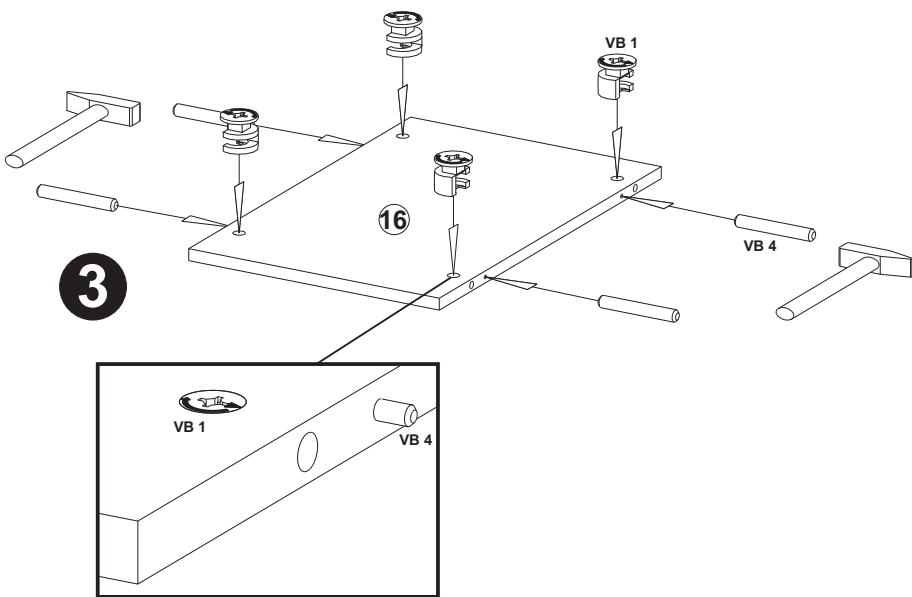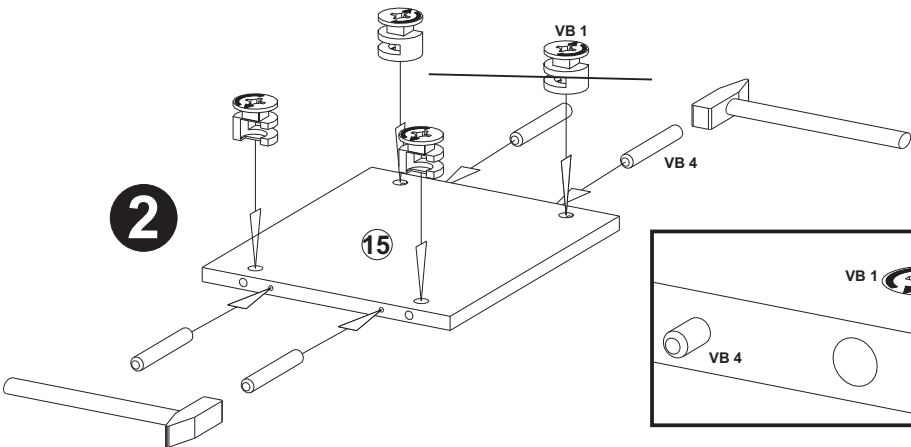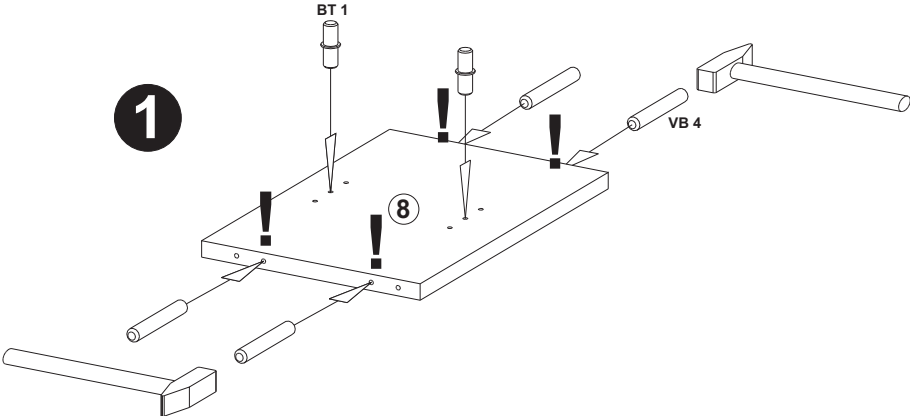

D1

A

1 x GR18

4,0x35
2x SR5

4 x VB14

2 x AK 26

13a

AK 26

VB 14

SR 5

GR 18

D2

B

1 x GR18

4,0x35
2x SR5

4 x VB14

2 x AK 26

13c

SR 5

VB 14

AK 26








GR 18

5 / 17


FMD//furniture

E1

A




1

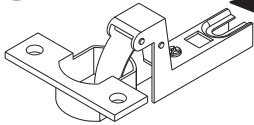


TB 19

2x



TB 8


2

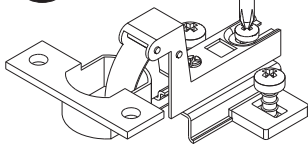



2x

TB 8

3







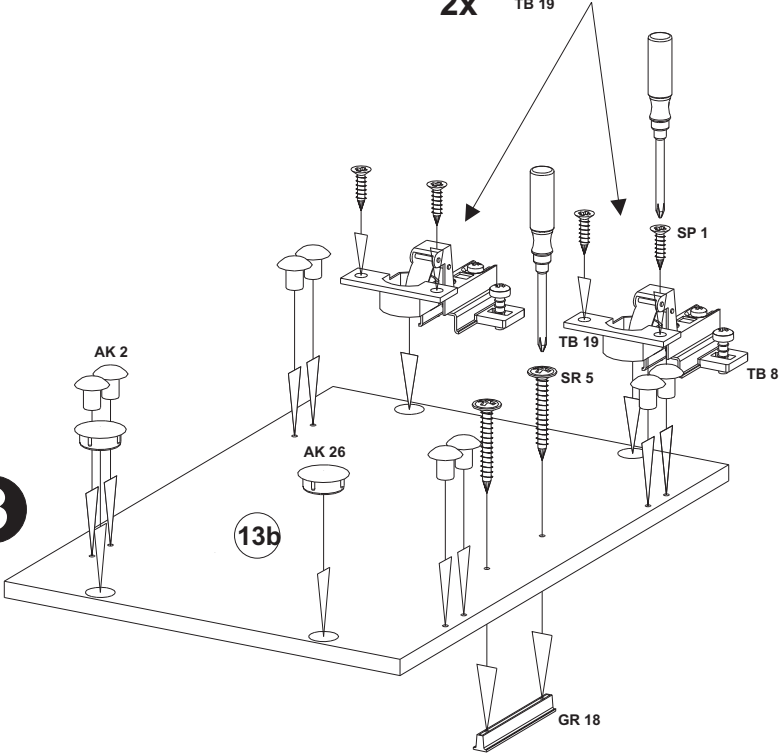


4

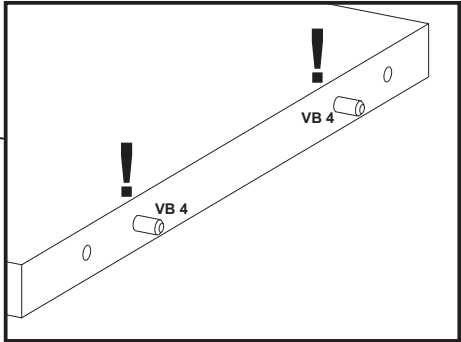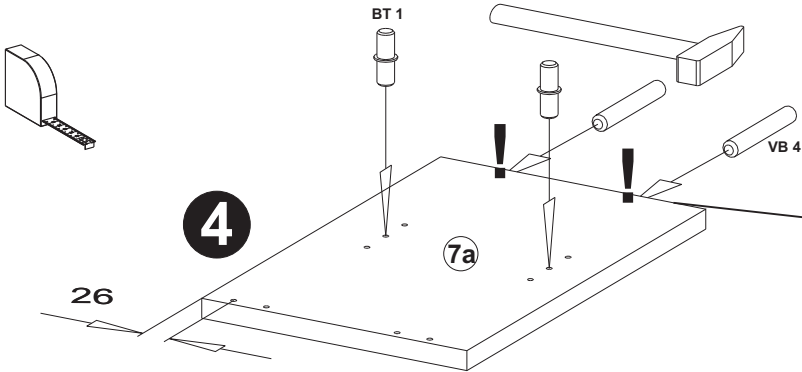


E2


B



1

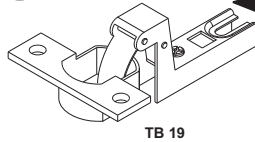


2x




TB 8

2


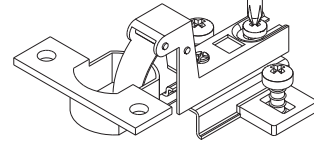


2x

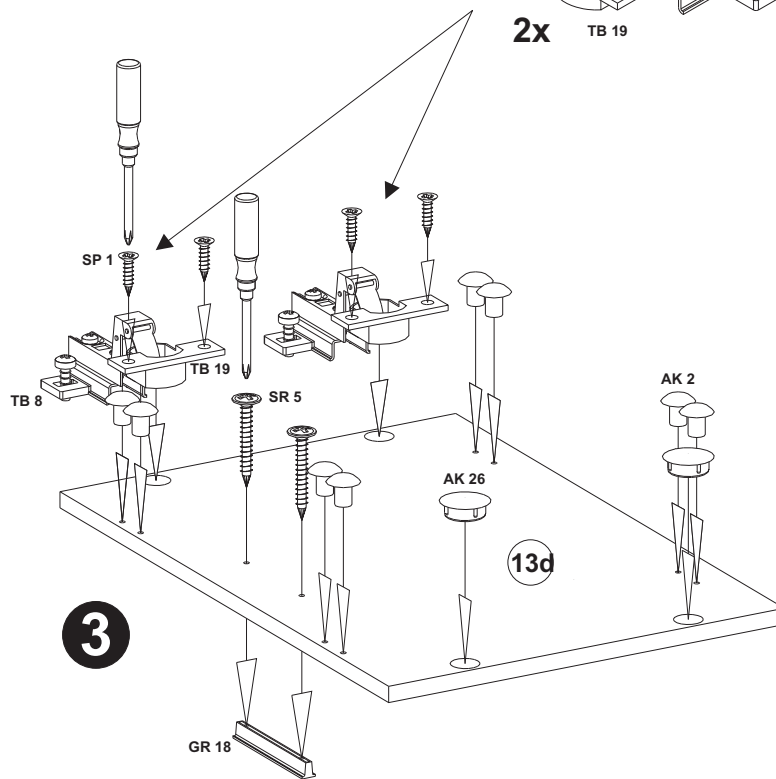

3

GR 18







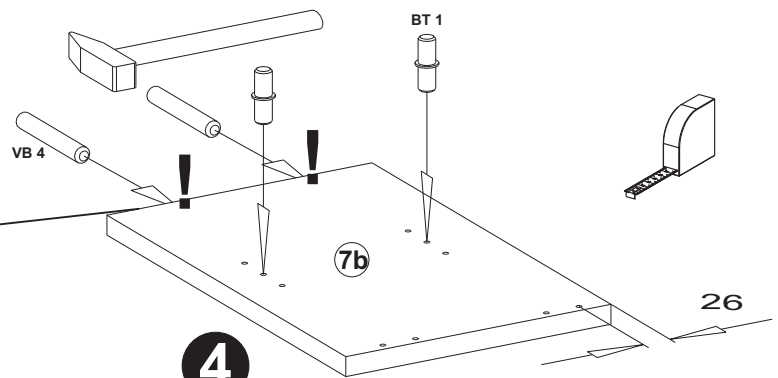
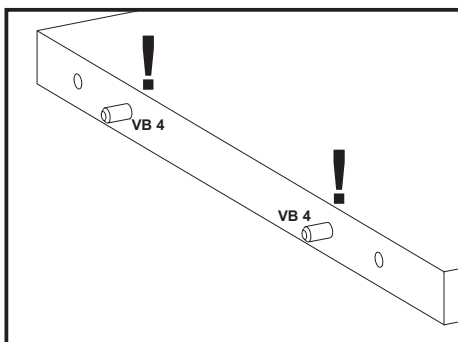


4


26

F1


A

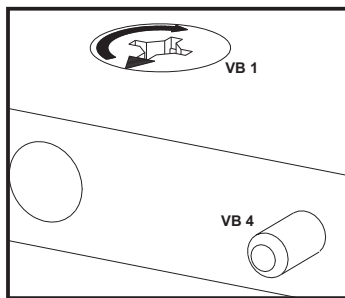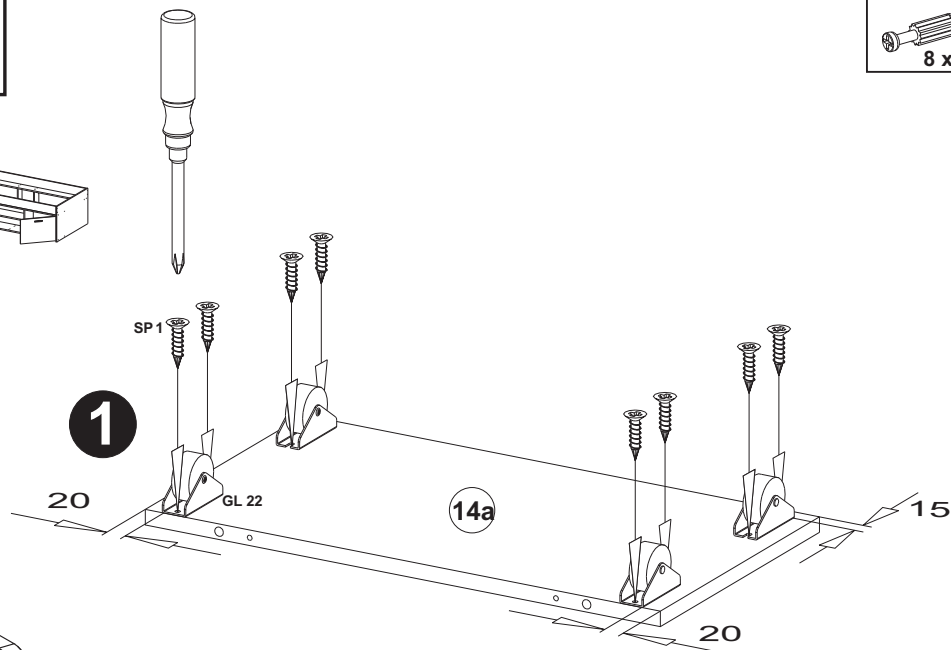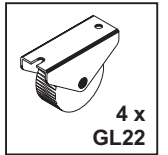


2






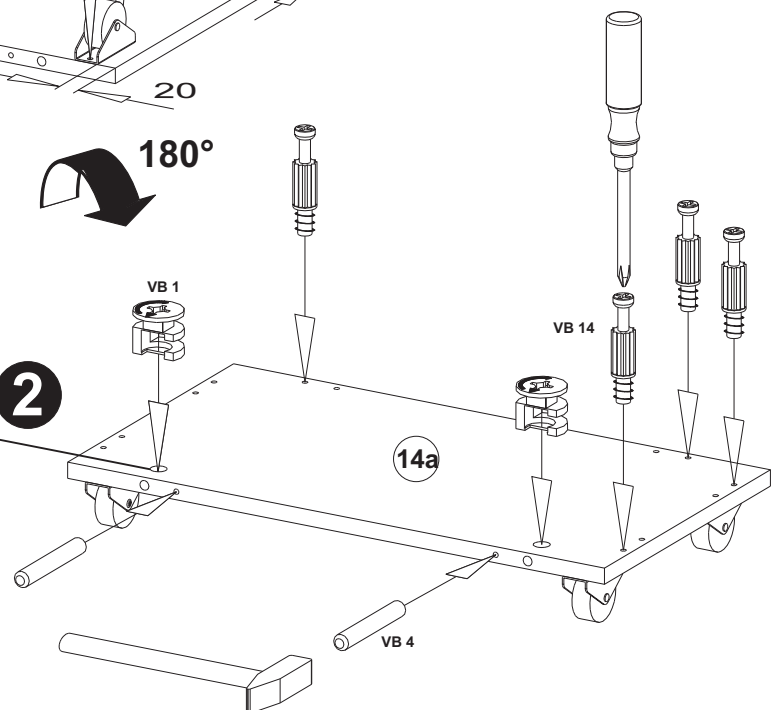


3





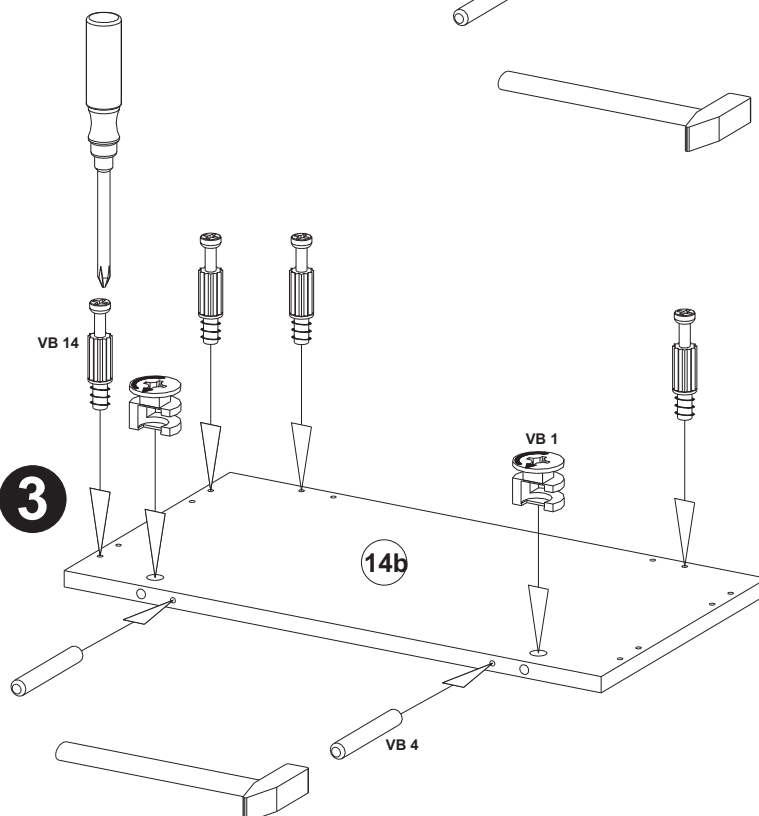


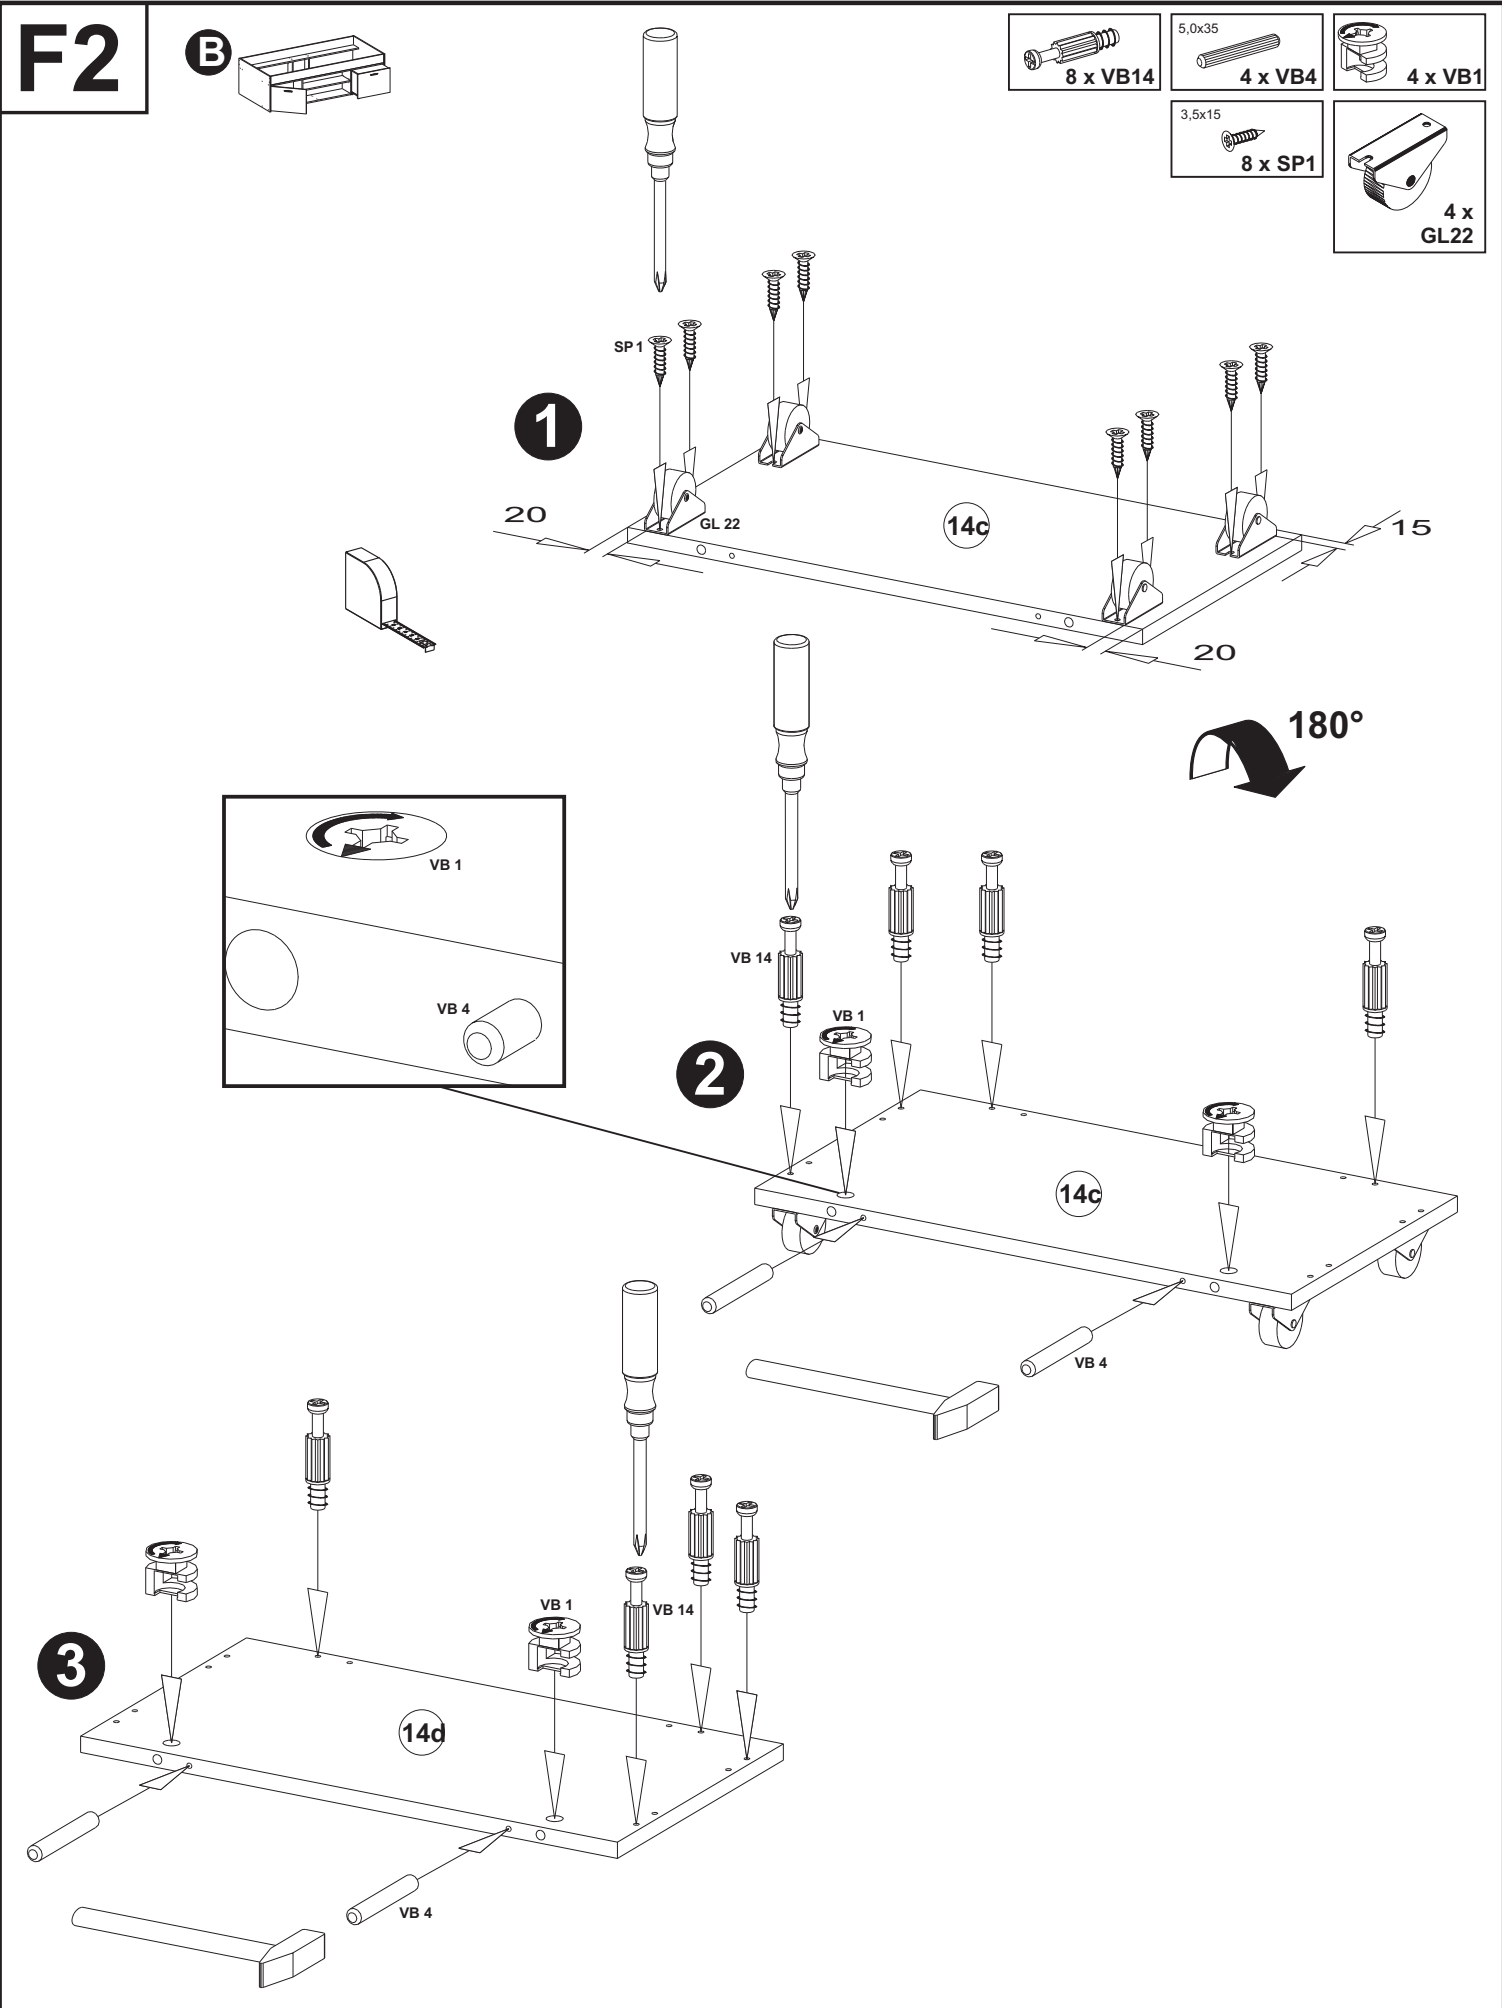

G1

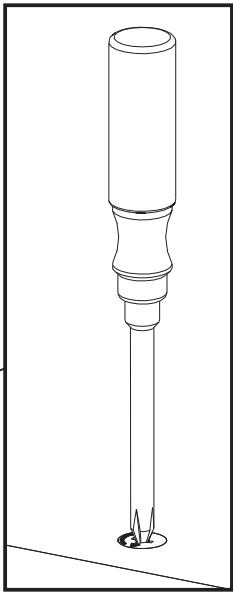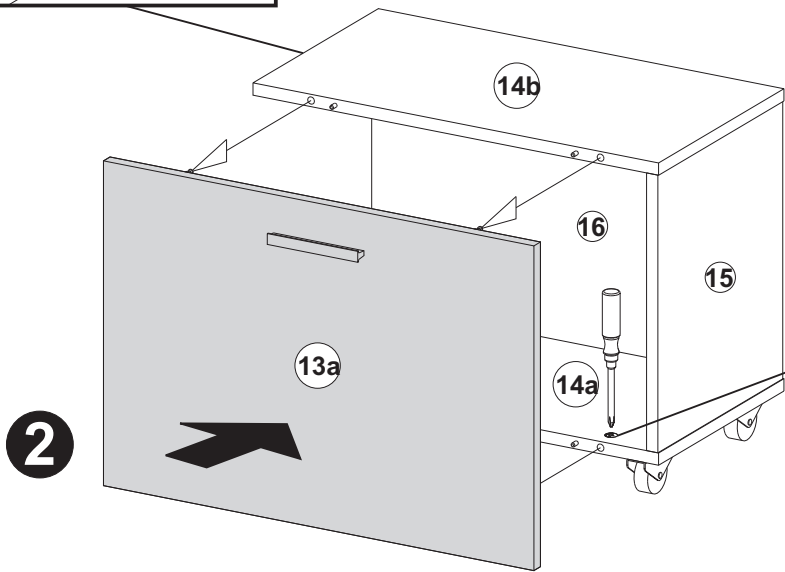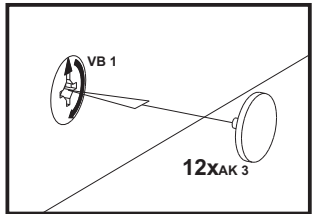
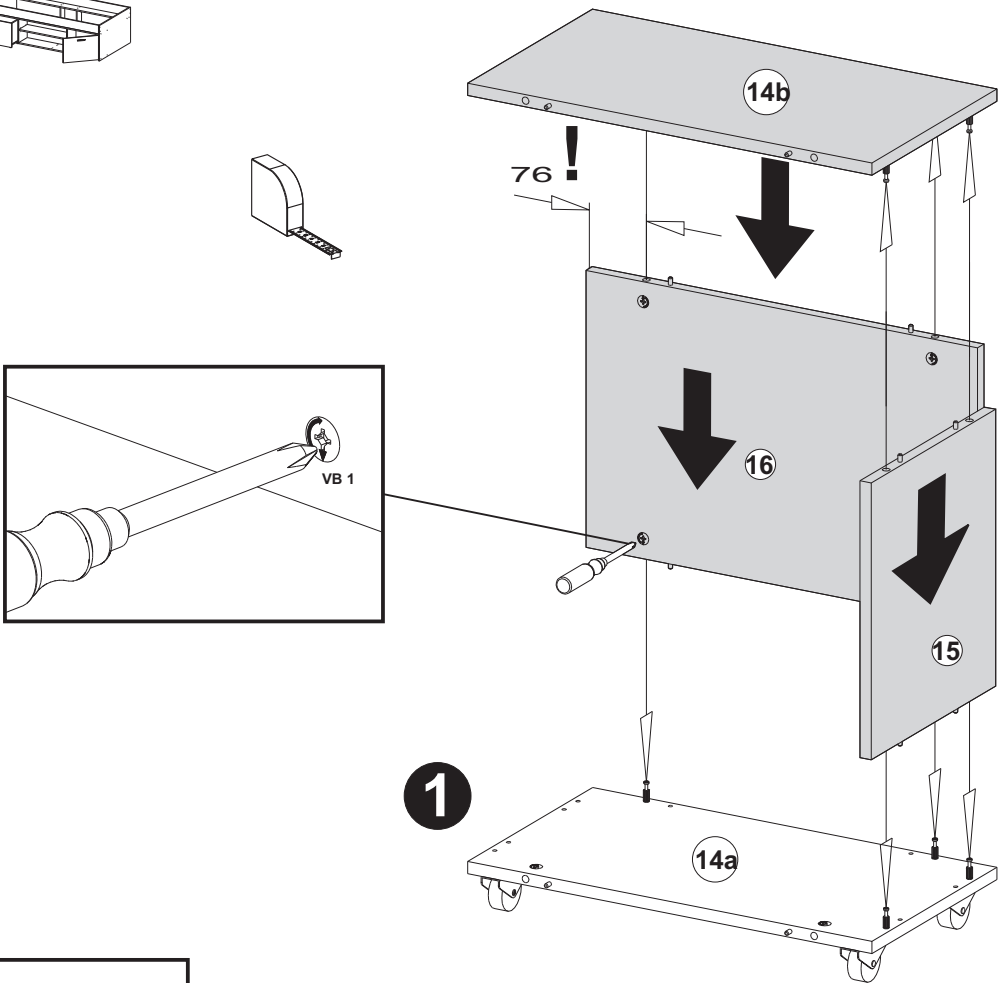

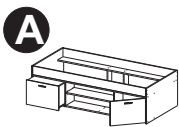


H1

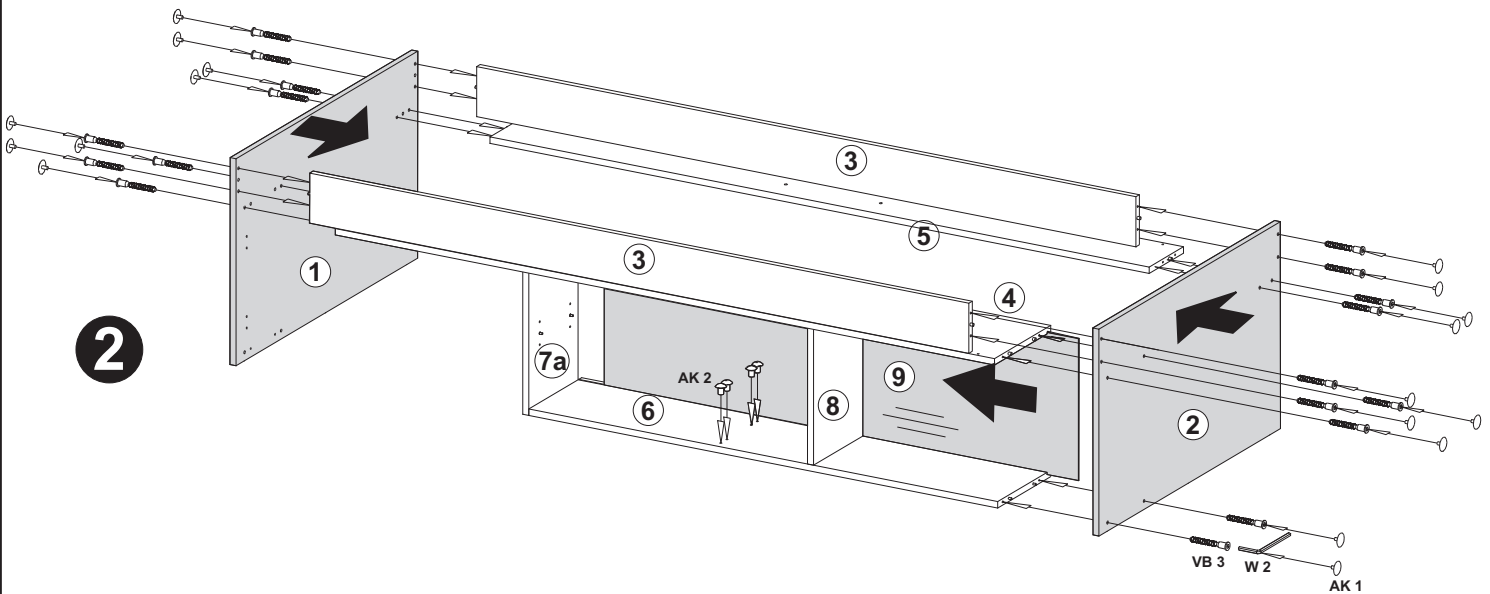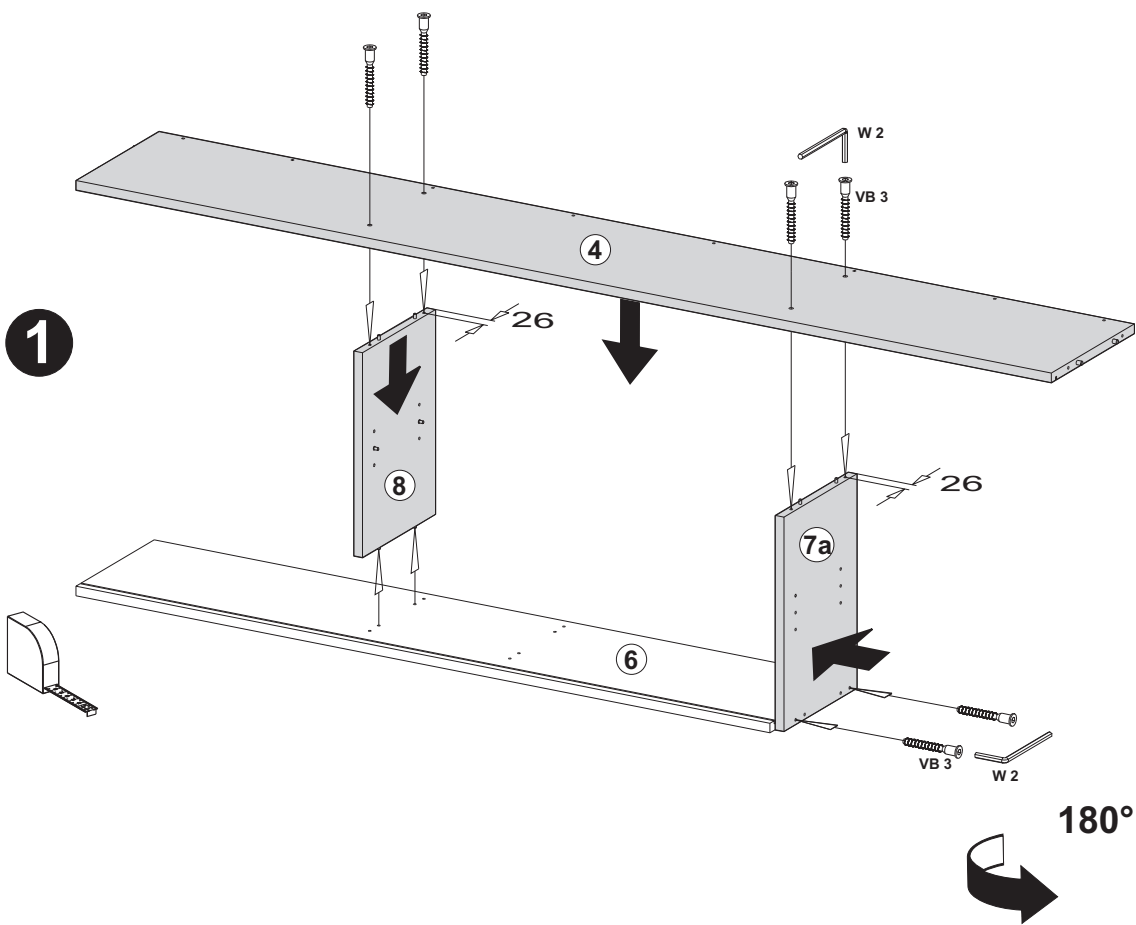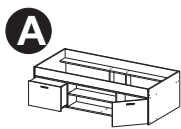


I1

A




1



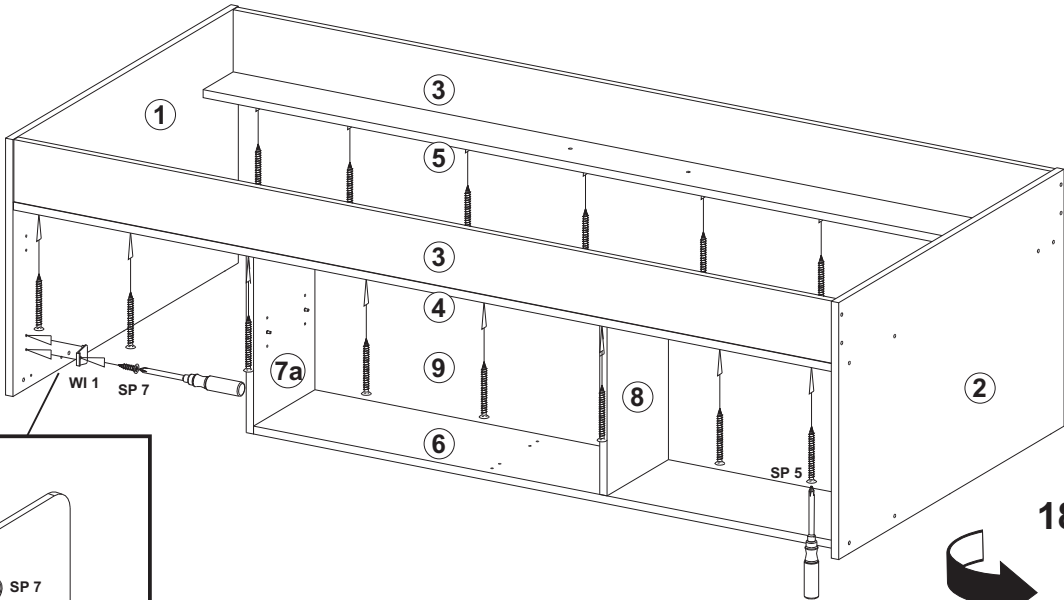


180°

90°

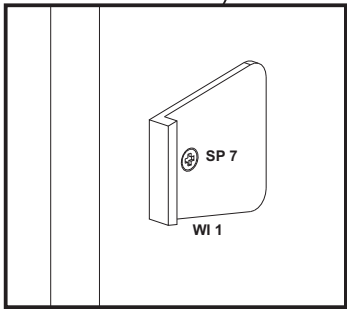


2

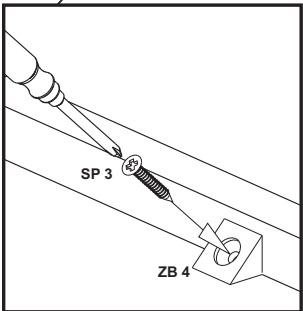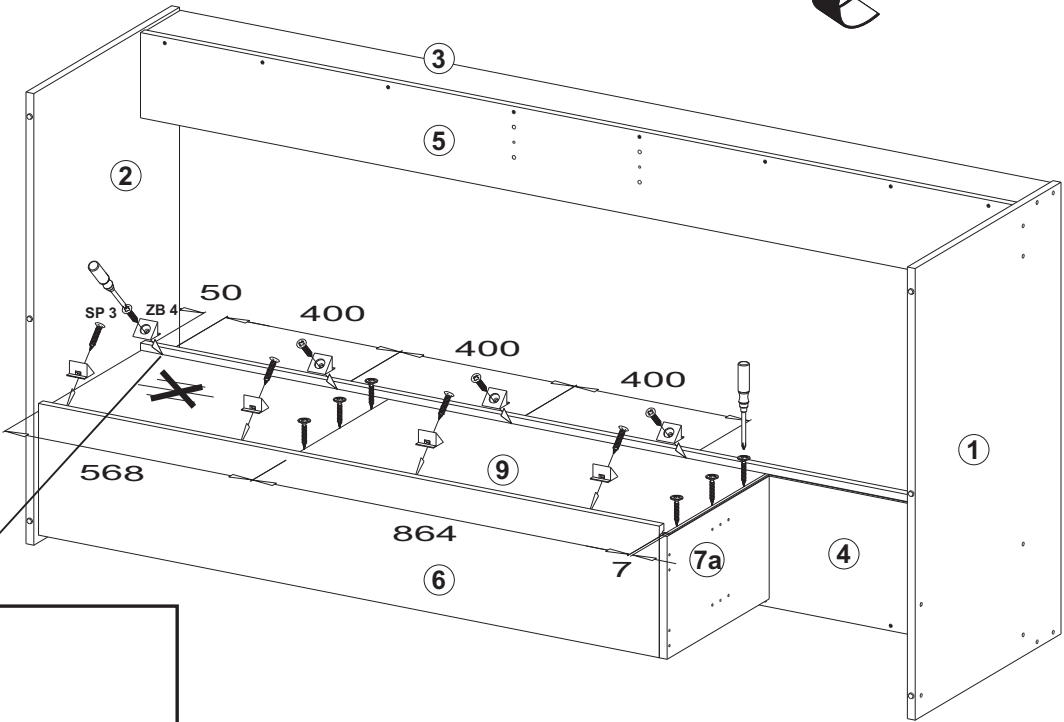

J1


A




4x AK5



4x AK2




4x AK1



7,0x50
8x VB3




W2




4x GL1



3,5x22
4x SP10




1

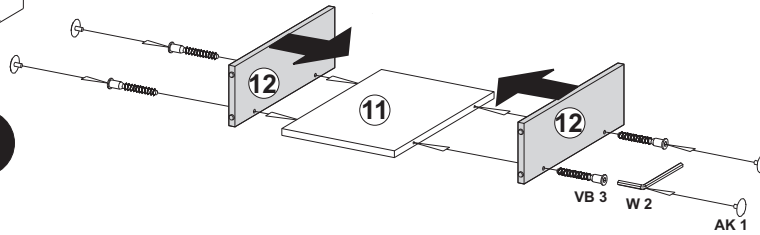


VB3

W2

AK1

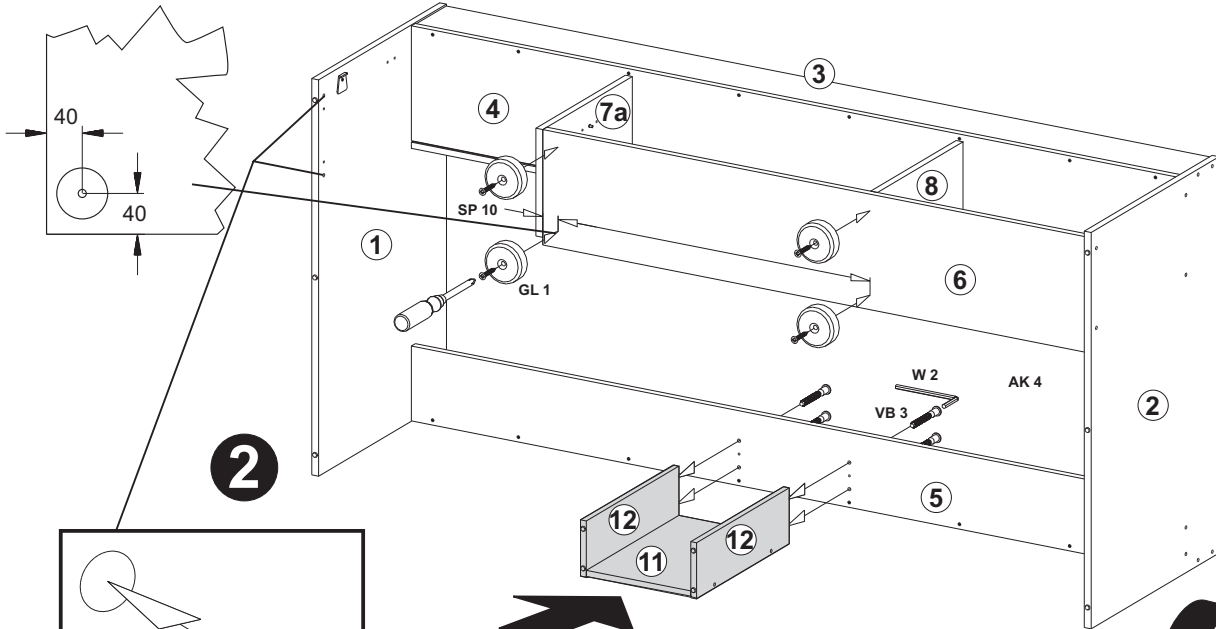

2

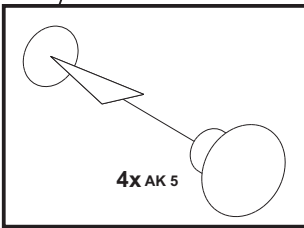


4x AK5

90°







90°

3

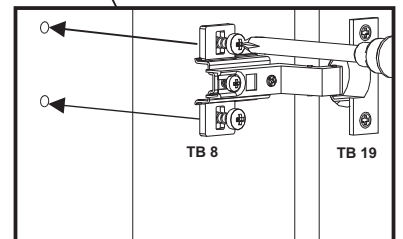


TB8

TB19

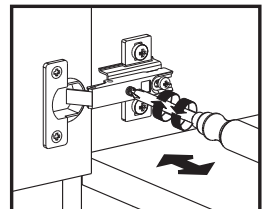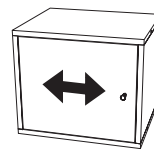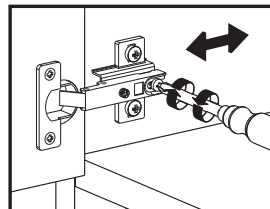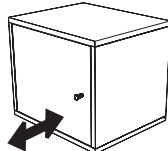
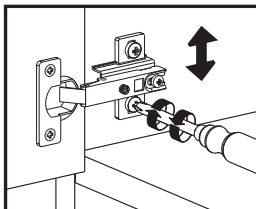
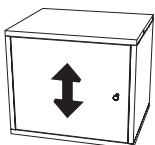


G2

B






12 x AK3

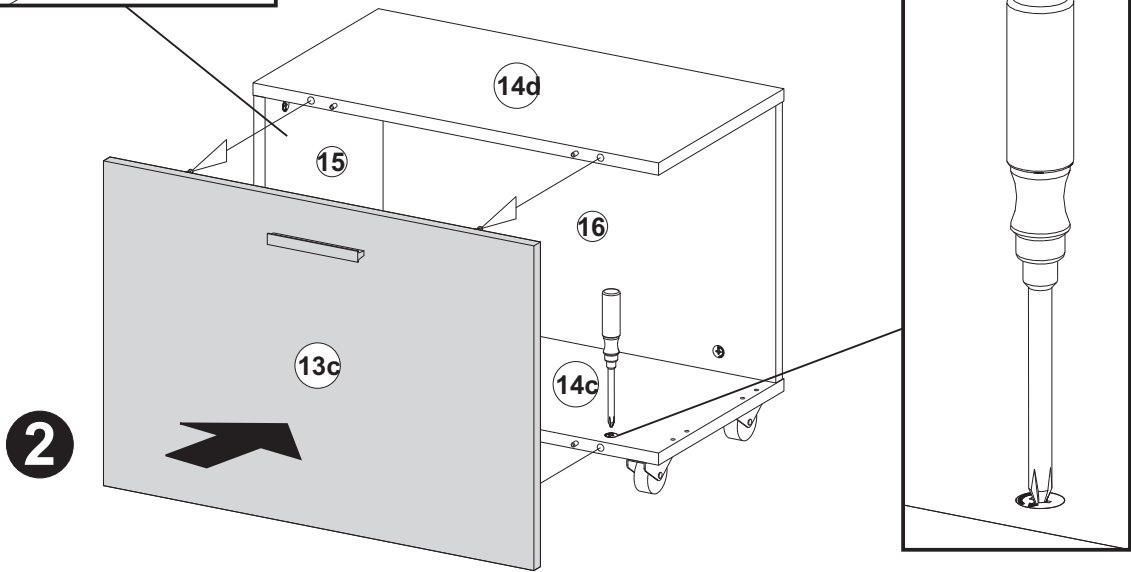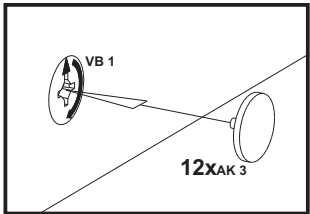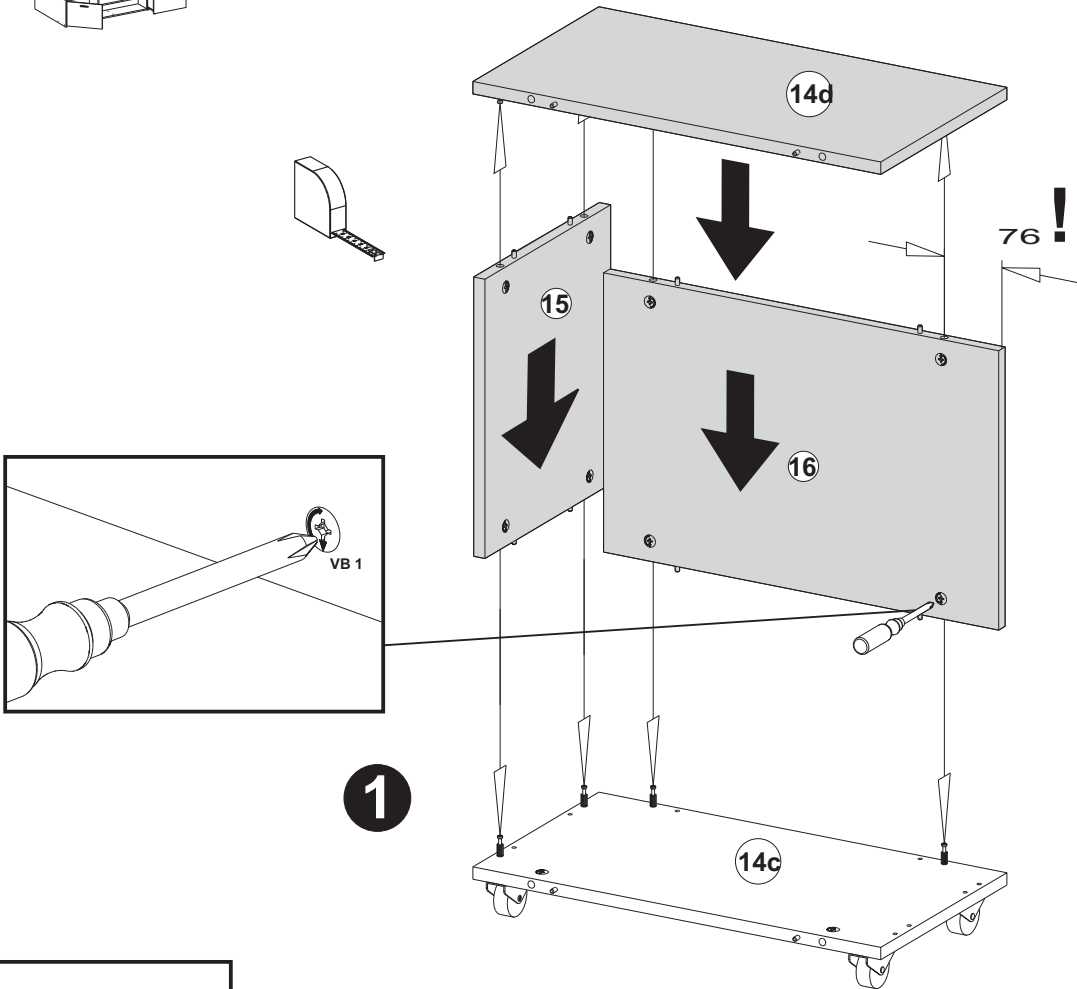


H2


B



1




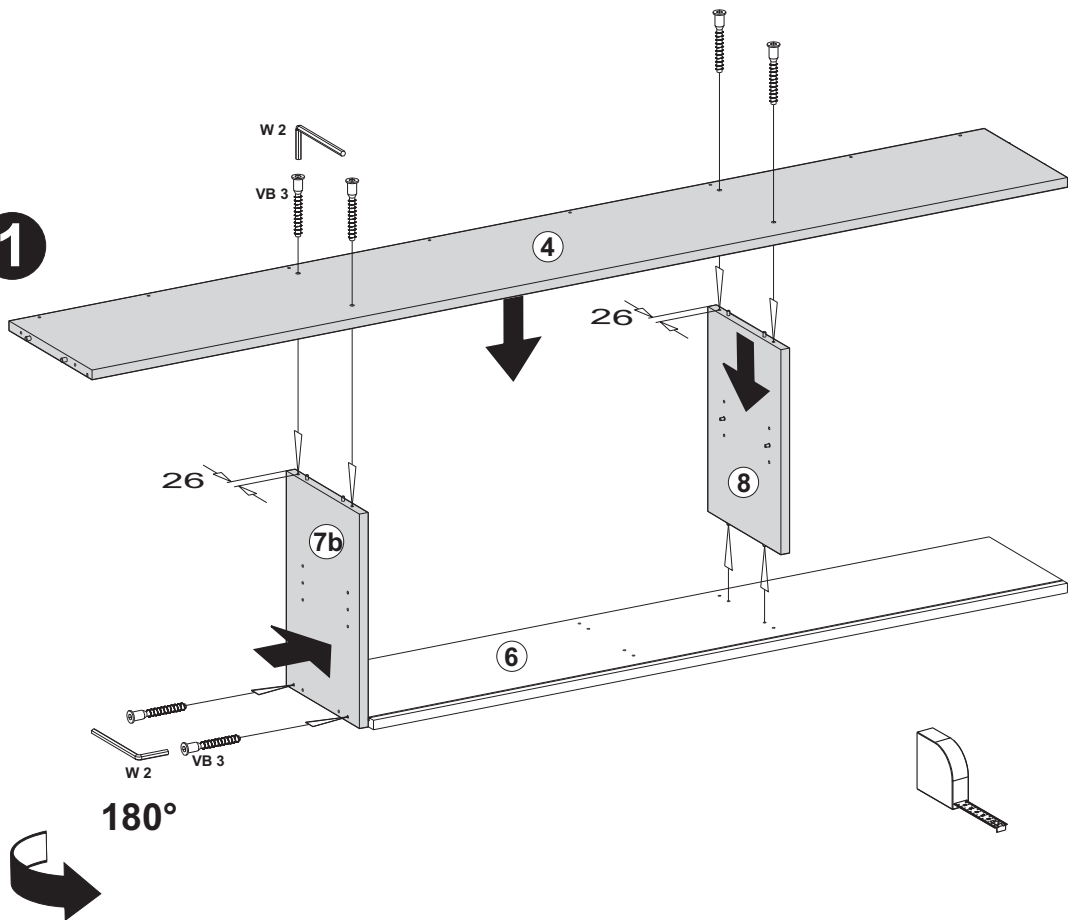


2

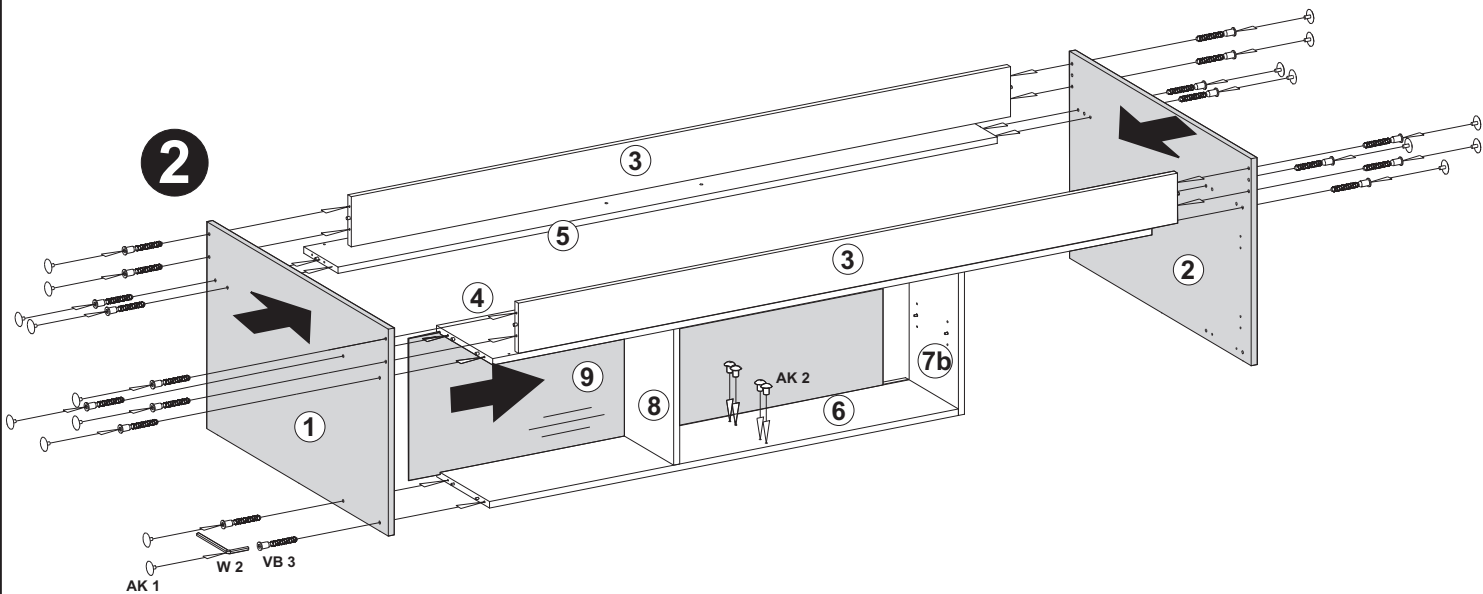


12

B




1



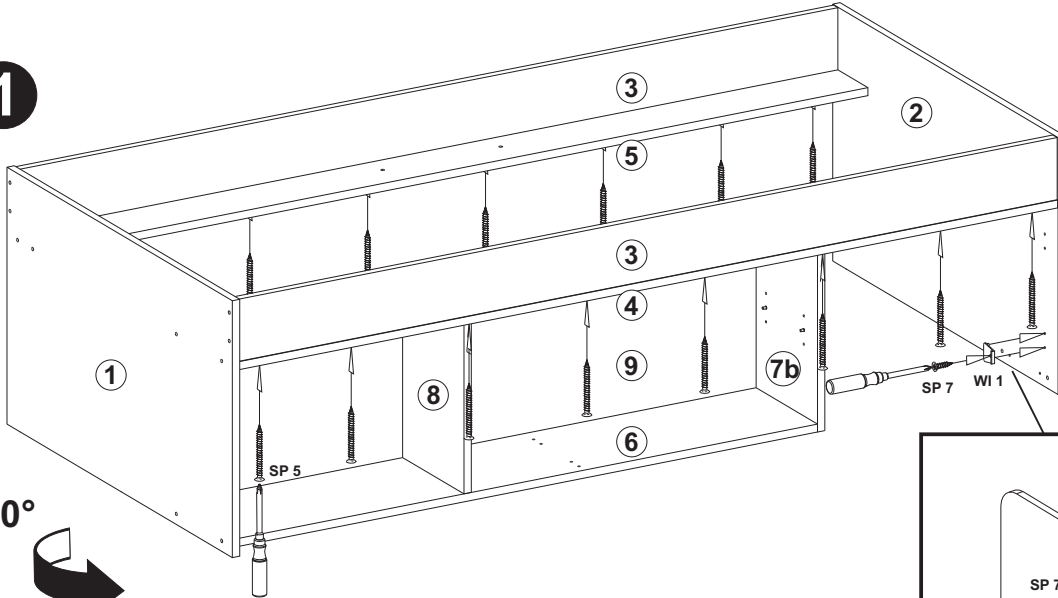


180°

90°



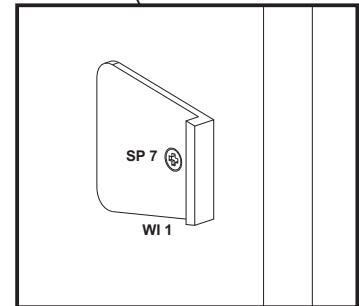


2

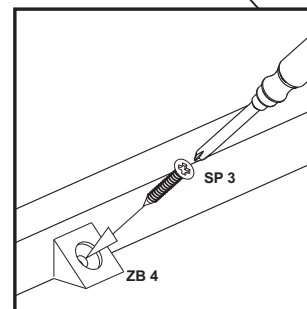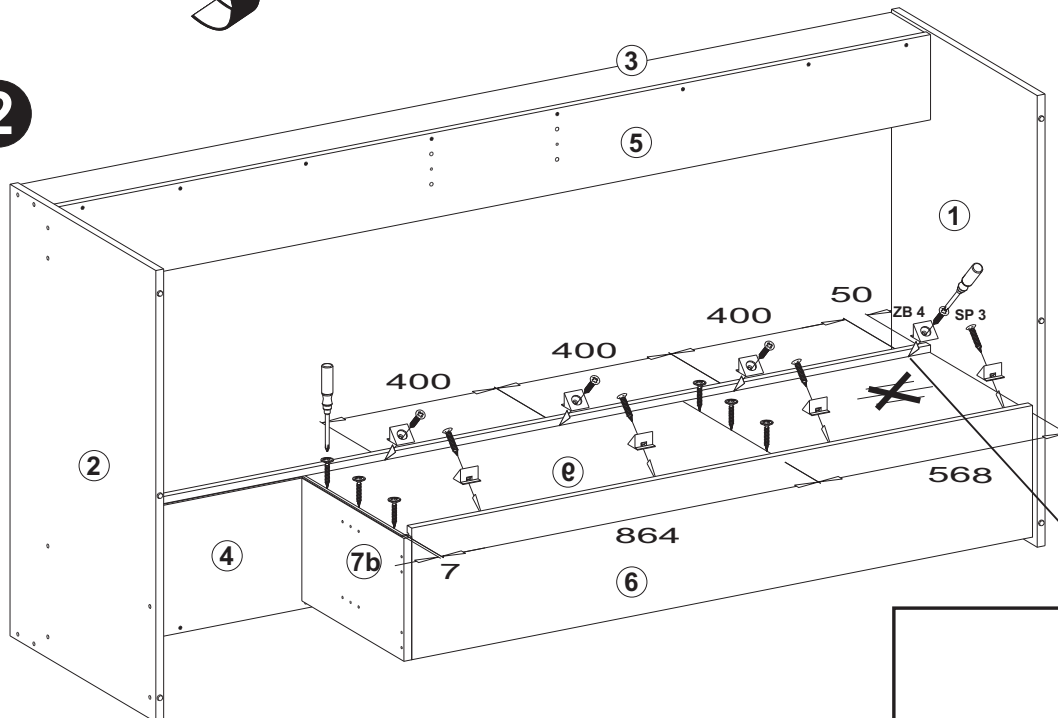


J2


B



1

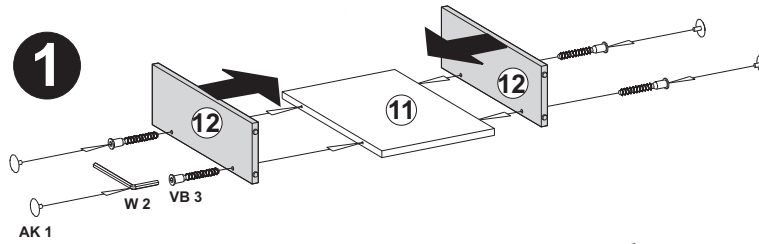

2

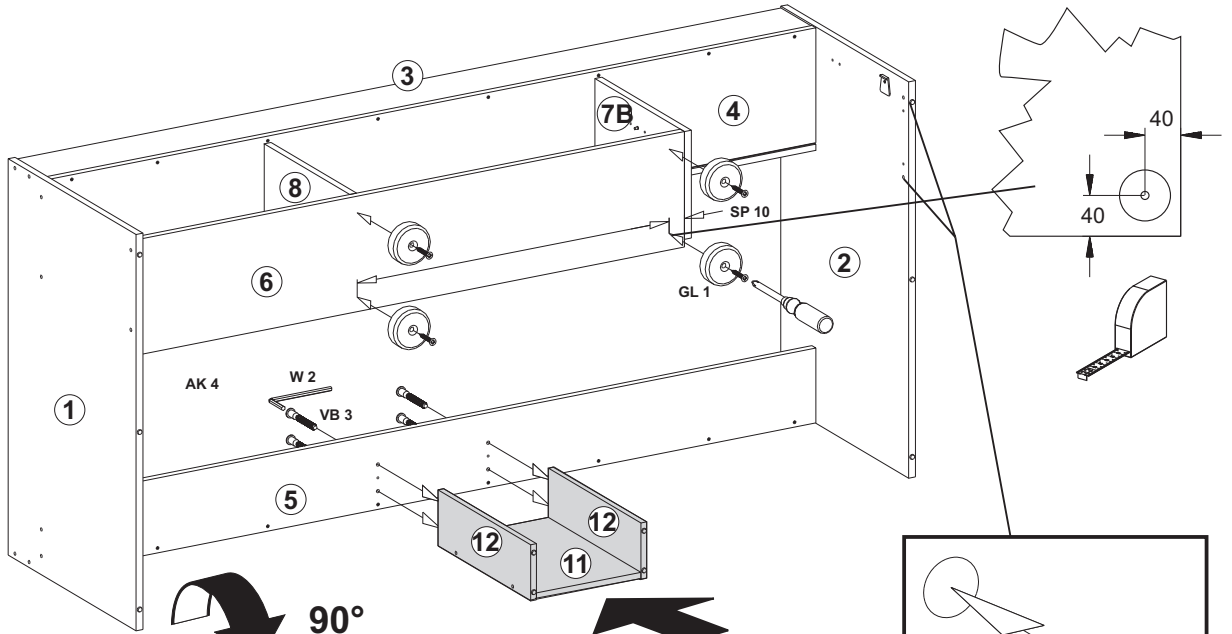

3

